

MODEL 43-01 WIDEBAND TRANSMISSION TEST SET

SERVICE MANUAL



HLI HEKIMIAN LABORATORIES INC.

LABORATORY REPORT

DATE: 10/10/2023
PAGE: 1

1. Objective: To determine the effect of temperature on the rate of reaction between hydrogen peroxide and potassium iodide.

2. Theory: The reaction between hydrogen peroxide (H_2O_2) and potassium iodide (KI) is an exothermic reaction. The rate of reaction is affected by temperature. As temperature increases, the rate of reaction increases.

3. Materials: Hydrogen peroxide, Potassium iodide, Water, Thermometer, Conical flask, Stopwatch.

4. Procedure: A series of experiments were conducted at different temperatures. The volume of oxygen gas evolved was measured over a fixed period of time. The results are shown in the table below.

MANUAL CHANGE NOTICE

June 17, 1985

-This change supersedes all earlier dated changes-

Manual Description

Title: Model 43-01 Wideband Transmission Test Set
Service Manual

Number: 43-01-M30

Issue Date: Issue 1, May 1983

Change Description

1. Page 3: In Noise Measurement section, delete " ± 2 dB, 0 to +10 dBrn" from accuracy specifications.
2. Page 28: In Step 19, change "2250" to "2100".

THE UNIVERSITY OF CHICAGO

DEPARTMENT OF CHEMISTRY

LABORATORY OF PHYSICAL CHEMISTRY

RESEARCH REPORT NO. 100

BY J. H. COLEMAN

1955

CHICAGO, ILL.


1955

RECEIVED

DEPARTMENT OF CHEMISTRY

UNIVERSITY OF CHICAGO

SERVICE MANUAL
MODEL 43-01
WIDEBAND TRANSMISSION TEST SET

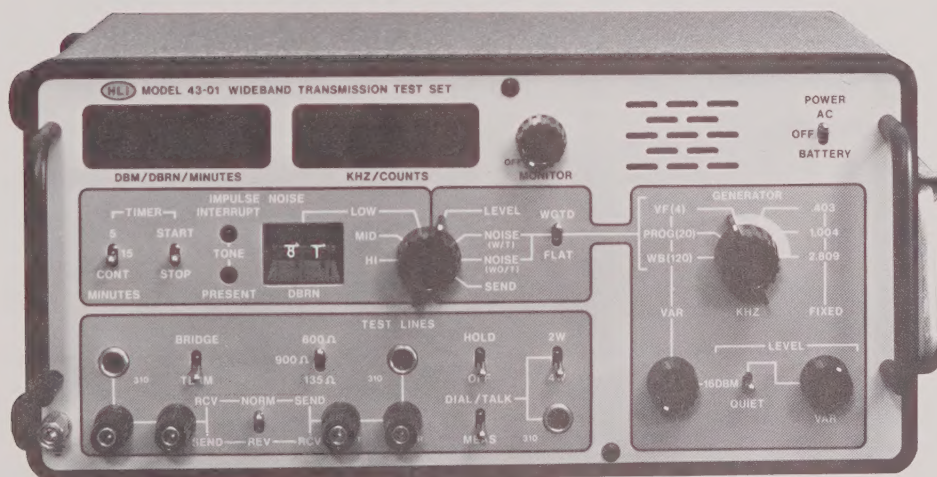

Manufactured by

HEKIMIAN LABORATORIES, INC.

9298 Gaither Road
Gaithersburg, Maryland 20877 USA

Telephone (301) 840-1217
Telex 89-8399

LIMITED WARRANTY

All Hekimian Laboratories, Inc. products are warranted against defects in materials and workmanship for a period of one year from date of delivery. HLI will repair or replace, at no cost, products which prove to be defective during the warranty period. Upon authorization by HLI, the equipment may be returned to the factory prepaid for repair. Upon completion of repair, the equipment will be returned at HLI expense. If, upon examination of the defective item, it is evident that failure was not due to defective workmanship or material, HLI will bill the purchaser for the cost of replacement or repair, including transportation charges. HEKIMIAN LABORATORIES, INC., DOES NOT WARRANT THE MERCHANTABILITY OR THE FITNESS FOR A PARTICULAR PURPOSE OF ITS PRODUCTS and does not make any warranty, expressed or implied, other than the warranty contained herein. IN NO EVENT SHALL HEKIMIAN LABORATORIES, INC., BE LIABLE FOR LOSS OF USE OF THE PRODUCT, COMMERCIAL LOSS, OR CONSEQUENTIAL DAMAGES.

Hekimian Laboratories, Inc., reserves the right to make changes in the design or construction of any of its products at any time without incurring any obligation to make any changes whatever on units previously purchased.

Hekimian Laboratories, Inc.
9298 Gaither Road
Gaithersburg, Maryland 20877 USA

SERVICE MANUAL

MODEL 43-01 WIDEBAND TRANSMISSION TEST SET

CONTENTS	PAGE	CONTENTS	PAGE
1. GENERAL	1	11. THEORY OF OPERATION	29
A. Functional Description	1	A. General	29
B. Specifications	2	B. Interface	29
2. POWER CONSIDERATIONS	5	C. Noise Filters	31
A. AC Power	5	D. Level Meter	31
B. Model 43-50 Battery Charger	6	E. Timer	33
C. Model 43-01 Battery Pack (Option .02)	6	F. Impulse Noise Counter	34
3. CONTROLS, JACKS AND DISPLAYS	7	G. Frequency Counter	35
A. Toggle Switches	7	H. Displays	35
B. Knobs	8	I. Monitor	35
C. Jacks	10	J. Generator	36
D. Displays and Speaker	10	K. Power Supply	36
4. LINE INTERFACE AND DIAL/TALK, HOLD	11	12. CIRCUIT LEVEL TROUBLESHOOTING	39
A. Impedance Selection	11	A. General	39
B. Bridge/Terminating Selection	11	B. Power Supply	39
C. Normal/Reverse Selection	11	C. Generator	39
D. 2-Wire Line Interface	12	D. Interface	40
E. 4-Wire Line Interface	12	E. Noise Filters	40
F. 2-Wire Dial-Up	12	F. Level Meter	41
G. 2-Wire Answer	13	G. Impulse Noise Counter	42
5. RECEIVE LEVEL AND FREQUENCY MEASUREMENT	15	H. Timer	44
A. Measurement	15	I. Frequency Counter	44
B. Overrange and Underrange Indications	15	J. Displays	45
6. NOISE MEASUREMENT	17	K. Monitor	45
A. Measurement	17	13. CALIBRATION	47
B. Overrange and Underrange Indications	18	A. General	47
7. IMPULSE NOISE MEASUREMENT	19	B. 6 V Reference (ANALOG Board)	47
8. SEND LEVEL AND FREQUENCY SETUP	21	C. Send Level Adjustment (I/O Board)	47
9. MONITOR	23	D. Generator Fixed Level (GENERATOR Board)	47
10. SELF-TEST	25	E. Low Frequency Limit (GENERATOR Board)	47
A. Initial Switch Settings	25	F. High Frequency Response (I/O Board)	47
B. Generator, Level Meter and Frequency Counter Checks	25	G. Receive Level Calibration (ANALOG Board)	48
C. Noise Meter and Filter Checks	25	H. C-MSG Filter Adjustment (I/O Board)	48
D. Impulse Noise Check	27	I. Notch Filter Alignment (I/O Board)	48
		14. BOARD INSTALLATION AND REMOVAL	49

SERVICE MANUAL

MODEL 43-01 WIDEBAND TRANSMISSION TEST SET (Cont.)

CONTENTS	PAGE	FIGURES	PAGE
15. PACKING/SHIPPING AND RETURN TO FACTORY	51	1. Model 43-01 WIDEBAND TRANSMISSION TEST SET.	1
A. Complete Unit.	51	2. Rear Panel AC POWER Receptacle and Fuse	5
B. Boards.	51	3. Front Panel AC POWER and BATTERY Switch and Ground Post.	5
C. Individual Boards	51	4. Controls, Jacks and Displays	7
16. PARTS LIST.	53	5. Line Interface Controls and Connectors.	11
17. COMPONENT LAYOUTS AND SCHEMATIC DIAGRAMS	77	6. Receive Level and Frequency Measurements	15
		7. Noise Measurement	17
		8. Impulse Noise Measurement	19
		9. Send Level and Frequency Setup	21
		10. Monitor.	23
		11. Self-Test	25
		12. Model 43-01 Block Diagram	30
		13. Level Meter Block Diagram	32
		14. Generator Block Diagram	37
		15. Model 43-01 PC Board Identification	49
		16. Assembly/Disassembly Screw Locations	50
		17. Interface Board, Component Layout	78
		18. Interface Board, Schematic Diagram.	79
		19. Digital Board, Component Layout	80
		20. Digital Board, Schematic Diagram.	81
		21. Generator Board, Component Layout	82
		22. Generator Board, Schematic Diagram.	83
		23. Analog Board, Component Layout	84
		24. Analog Board, Schematic Diagram	85
		25. I/O Board, Component Layout	86
		26. I/O Board, Schematic Diagram	87
		27. Power Supply, Component Layout	88
		28. Power Supply, Schematic Diagram	89

TABLES	PAGE
A. Model 43-01 Specifications	2
B. C-MSG Filter Checks.	41
C. Program Filter Checks.	41
D. 50 kB Filter (497 F) Checks	41
E. 15 kHz Flat Filter Checks.	41
F. 3 kHz Flat Filter Checks.	41
G. Notch Filter Checks	41
H. Level Meter Gain Stages	43
I. Impulse Noise Gain.	43
J. Parts List for Model 43-01 Assemblies.	53

1. GENERAL

1.01 This manual contains information for the installation, operation and maintenance of the HLI Model 43-01 WIDEBAND TRANSMISSION TEST SET. This section covers the functional description and specifications of the Model 43-01.

DANGER: Hazardous voltages exist inside this instrument.

A. Functional Description

1.02 The Model 43-01 measures level, noise (VF, program and wideband), 3-level impulse noise, elapsed time and frequency. Combined with a variable signal generator and a flexible line interface configuration, the instrument will fill a variety of testing needs. The Model 43-01 is intended to comply with Bell System standards as contained in Bell System Technical Reference PUB 41009 dated May 1975. The instrument is compact (11" x 5-1/4" x 8-1/2") and weighs less than 11 pounds. When equipped with the optional battery the instrument is completely portable.

1.03 Level measurements are made directly in dBm using an average type detector. Noise

measurements are made directly in dBrn using a quasi-RMS detector. C-message, program, 50 kBit (497 F), 3 kHz flat, 15 kHz flat and 50 kHz flat weighting filters are front panel selectable. The operator can select the holding tone notch to be in line with any of the weighting filters.

The Model 43-01 measures the number of times impulse noise (defined as any excursion of a band-limited signal above a preset threshold) occurs within a specified time period. The instrument is calibrated in dBrn to read the peak value of the received signal. The Bell Standard counting rate is provided. One set of thumbwheel switches allows the setting of low thresholds for impulse noise (metallic) tests. The LOW/MID, MID/HI threshold spread is 4 dB. Any of the noise weighting filters can be used for impulse noise testing.

Frequency measurements can be made from 30 Hz to 19,999 kHz with 1 Hz resolution in the VF mode and from 30 Hz to 120 kHz with 10 Hz resolution in the program and wideband modes.

1.04 Dual digital displays simultaneously present fully autoranged level/noise and manually ranged frequency measurements or impulse noise counts and elapsed time. Level and frequency measurements can be made

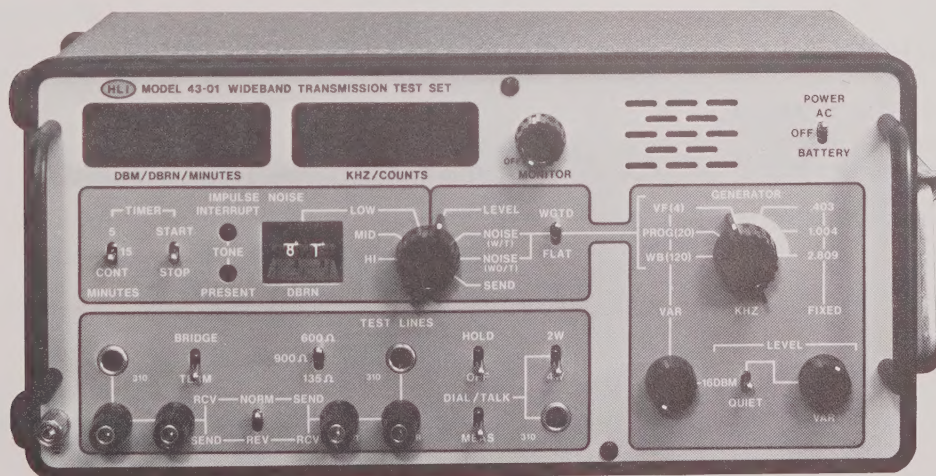


Figure 1. Model 43-01 WIDEBAND TRANSMISSION TEST SET

during impulse noise tests without affecting the impulse noise counting. A loss-of-tone indicator shows if the holding tone was lost at any time during an impulse noise test.

1.05 The signal generator provides continuous frequency coverage in three overlapping ranges. For noise measurements, both a 1004 Hz holding tone and a quiet termination are provided. Additionally, the instrument features fixed frequencies of 403 Hz and 2809 Hz. The operator can select a fixed level, variable level or a quiet termination via a single, three position toggle switch.

1.06 Line interface can be made to either the 310 jacks or the five-way binding posts on the front panel. The instrument is supplied with 135 Ω , 600 Ω and 900 Ω selectable send/receive impedances, line bridging and termination selection capability and an audio monitor. A full 2W/4W dial/talk capability with dual electronic hold circuits is provided.

B. Specifications

1.07 Specifications for the Model 43-01 are contained in Table A.

TABLE A. MODEL 43-01 SPECIFICATIONS*

GENERAL

Measurements	Level (dBm), noise (dBrn), 3-level impulse noise, time (min.), frequency (kHz)
Displays	Dual display
Generator	Sine wave, fixed and variable frequency, fixed and variable level
Dial/Talk	Full 2W/4W capability with dual electronic hold
Line Select	Send/receive transfer switch
Audio Monitor	Front panel volume control and ON/OFF switch

INPUT

Impedance	135 Ω , 600 Ω , 900 Ω , bridged (balanced)
Return Loss	>30 db, 200 Hz to 20 kHz (600 Ω , 900 Ω)
Balance	>80 db at 60 Hz >70 db at 540 Hz >60 dB at 4 kHz
Line Hold	Electronic hold, nominal 26 mA

LEVEL MEASUREMENT

Frequency Range	30 Hz to 120 kHz
Measurement Range	-90.0 dBm to +10.0 dBm, full autoranging
Accuracy	

	(dB)			
dBm	+10	±0.5	±0.2**	±0.5
	-70			
	30Hz	50Hz	20kHz	120kHz

**±0.1 dB at 1000 Hz for levels between 0 and -19 dB.

Detector Type

Average

TABLE A. MODEL 43-01 SPECIFICATIONS (Cont.)*

NOISE MEASUREMENT

Modes	Noise (message circuit)
Weighting Filters	C-Message, 3 kHz flat, program, 15 kHz flat, 50 kBit (497 F), 50 kHz flat, 1010 Hz notch
Measurement Range	0 to +100 dBrn (noise), full autoranging
Accuracy	±1 dB (noise), +10 to +100 dBrn
	±2 dB, 0 to +10 dBrn
Detector Type	Quasi-RMS

IMPULSE NOISE MEASUREMENT

Measurement Range	40 dBrn to 107 dBrn
Low Threshold Settings	40 dBrn to 99 dBrn
Accuracy	±1 db
Weighting Filters	C-Message, 3 kHz flat, program, 15 kHz flat, 50 kBit, 50 kHz flat
Lo/Mid, Mid/High Threshold Spread	4 dB
Maximum Count Rate	7 counts per second (Bell Standard)
Count Capacity	9999
Timer	5, 15 minutes or continuous

FREQUENCY MEASUREMENT

Frequency Range	30 Hz to 120 kHz; 1 Hz resolution to 19.999 kHz in VF mode, 10 Hz resolution in program and wideband modes
Level Range	-40 dBm to +10 dBm
Accuracy	±0.005% ±1 least significant digit
S/N Requirement	≥20 dB

GENERATOR

Frequency Range	50 Hz to 120 kHz
Modes	VF: 50 Hz to 4.8 kHz Program: 250 Hz to 24 kHz Wideband: 1250 Hz to 120 kHz 403 Hz, 1004 Hz, 2809 Hz, crystal controlled
Level Range	-40 dBm to +10 dBm, continuously adjustable -16 dBm, fixed (set at 100 Hz) Quiet termination
Distortion	>60 dB, 1004 Hz fixed >50 dB, 200 Hz to 4000 Hz >40 dB, 50 Hz to 120 kHz
Impedance	135 Ω, 600 Ω, 900 Ω (balanced)
Return Loss	>30 dB, 200 Hz to 20 kHz (600 Ω)

TABLE A. MODEL 43-01 SPECIFICATIONS (Cont.)*

CONNECTORS

Send-Receive
4W Talk
2W Dial/Talk

310 type jacks, 5-way binding posts
310 type jack
310 type jack

POWER

105-130 V ac 57-63 Hz, 15 Watts

SIZE

11" (27.94 cm.) W x 5¼" (13.34 cm.) H
x 8½" (21.59 cm.) D, less cover

WEIGHT

10.3 lbs. (4.6 kg.) ac only
12.5 lbs. (5.7 kg.) with battery pack

OPTIONS

.01 220 V ac operation
.02 Rechargeable battery pack

*All stated and unstated specifications are intended to comply with Bell System standards as contained in Bell System Technical Reference PUB 41009 dated May 1975.

HLI reserves the right to make changes in specifications at any time without notice.

2. POWER CONSIDERATIONS

A. AC POWER

2.01 This section contains information pertaining to the ac power connection and power source compatible with the Model 43-01.

2.02 The Model 43-01 may be operated from a source of 105 V ac to 130 V ac at line frequencies from 57 Hz to 63 Hz. The fuse, located on the rear panel as shown in Figure 2, is a 0.5 ampere slow-blow. A small flat-blade screwdriver is used to replace the fuse.

2.03 The Model 43-01 is supplied with a detachable three-conductor power cable (Belden P/N KH-8828R) which, when plugged

into an appropriate receptacle (located on the rear panel as shown in Figure 2), grounds the chassis to the power line ground. To retain this protective feature when the power cable is plugged into a two-wire outlet, use a three-conductor to two-conductor adapter and connect the adapter wire to an appropriate ground.

2.04 If for any reason the chassis cannot be grounded through the power cable, it is recommended that the Model 43-01 be grounded via the front panel (refer to Figure 3) ground post.

2.05 When the unit is received, it is recommended that the self-test in Section 10 be performed to determine that the unit is electrically operational.



Figure 2. Rear Panel AC Power Receptacle and Fuse

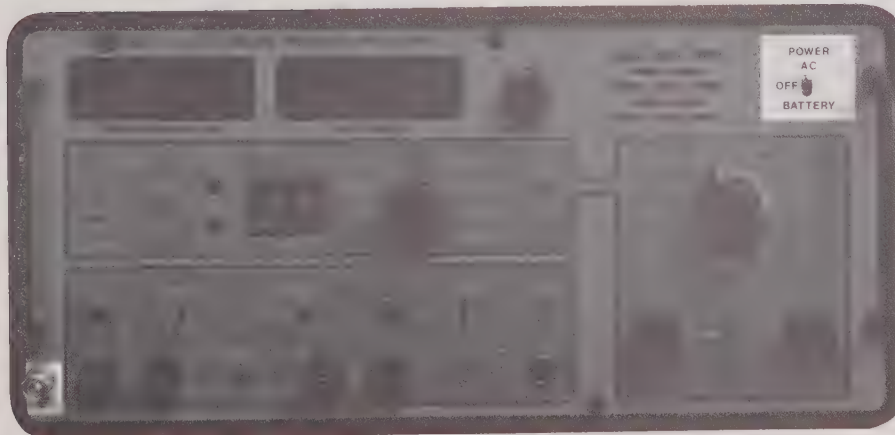


Figure 3. Front Panel AC POWER and BATTERY Switch and Ground Post

B. Model 43-50 Battery Charger

2.06 This section contains information pertaining to the Model 43-50 battery charger. Earlier Model 43-01 units incorporated this capability only if they were ordered along with the Model 43-50. This capability is now standard with all Model 43-01's.

2.07 The Model 43-50 contains four 1.2 ampere-hour nickel-cadmium batteries. To recharge these batteries, connect the battery charging cable to the Model 43-50 front panel charger connector and to the charger connector on the rear panel of the Model 43-01. With the cable connected, the batteries will be recharging whenever the Model 43-01 power cord is connected to an ac line. The batteries will recharge faster if the power switch on the Model 43-01 is set to the OFF position. Additional information can be found in Section 3 of the Model 43-50 Operating Manual (43-50-M20).

C. Model 43-01 Battery Pack (Option .02)

2.08 This section contains information on the Model 43-01 Rechargeable Battery Pack, Option .02. When fully charged, the battery pack will operate the Model 43-01 for approximately four hours.

2.09 The rechargeable battery pack consists of three independent nickel-cadmium batteries. Two of these are 9 V batteries with eight matched cells and a cutoff point of 8.8 V dc. At full charge the battery voltage may be as high as 11.0 V dc. The 5 V battery has four matched cells and a cutoff point of 4.4 V dc. When fully charged the voltage may be as high as 5.5 V dc.

2.10 The battery chargers are active when the unit is connected to the ac line. The batteries can be recharged simultaneously with ac operation, but will charge faster when the Model 43-01 power switch is set to the OFF position. Fully discharged batteries can be fully recharged overnight (14-16 hours) at 25°C with the power switch set to OFF.

3. CONTROLS, JACKS AND DISPLAYS

3.01 This section contains the description of all toggle switches, knobs, jacks, displays and the speaker on the Model 43-01. Refer to Figure 4 for the location of all items discussed.

A. Toggle Switches

- 1** **WGTD/FLAT** - With the switch set to the WGTD position the user can select C-message, program, or 50 kBit (497F) noise weighting filters. With the switch set to the FLAT position the user can select 3 kHz flat, 15 kHz flat, or 50 kHz flat noise weighting filters.
- 7** **IMPULSE NOISE TIMER START/STOP** - When the switch is momentarily pressed to the START position, the impulse noise timer will start and the Model 43-01 will be able to accumulate impulse noise counts. When

the switch is momentarily pressed to the STOP position, the impulse noise timer will stop and the Model 43-01 will be unable to accumulate any additional impulse noise counts.

- 8** **IMPULSE NOISE TIMER 5/15/CONT MINUTES** - With the switch set to the 5 position the impulse noise timer will automatically stop 5 minutes after the START/STOP switch is momentarily pressed to the START position. Setting the switch to the 15 position causes the impulse noise timer to automatically stop 15 minutes after the START/STOP switch is momentarily pressed to the START position. With the switch in the CONT position the impulse noise timer will continuously count after the START/STOP switch is momentarily pressed to the START position. The timer will stop when the START/STOP switch is momentarily pressed to the STOP position.

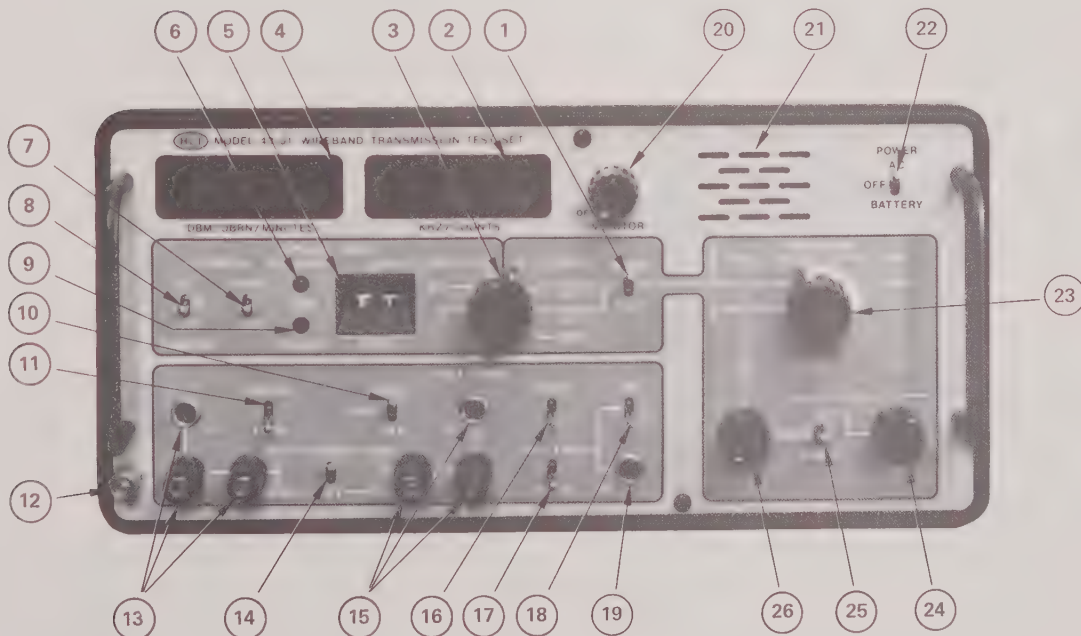


Figure 4. Controls, Jacks and Displays

- ⑩ 600 Ω /900 Ω /135 Ω - Selects send/receive terminating impedances of 600 Ω , 900 Ω , or 135 Ω .
- ⑪ BRIDGE/TERM - Provides termination of both the send and receive lines when set to the TERM position. When set to the BRIDGE position the Model 43-01 is set to bridge across the receive line.
- ⑭ NORM/REV - When set to the NORM position the jack to the right of the switch is the send jack ⑮ and the jack to the left of the switch is the receive jack ⑬. When set to the REV position the functions of the jacks are reversed.
- ⑯ HOLD/OFF - When set to HOLD dual electronic hold circuits are placed across the send and receive lines (during 2-wire dial/talk operation, the hold circuit will not be across the send line).
- ⑰ DIAL/TALK/MEAS - When set to the DIAL/TALK position the user can perform both 2-wire or 4-wire dial/talk functions. When set to MEAS the Model 43-01 is set to perform circuit measurements.
- ⑱ 2W/4W - Sets up dial/talk for 2-wire or 4-wire operation. When set to the 2W position the Model 43-01 directly accesses the send line for 2-wire (wet) and double 2-wire (wet) facilities. When set to 4W the Model 43-01 provides talk battery for 4-wire (dry) facilities.
- ⑳ AC/OFF/BATTERY (Battery Optional) - Three position switch that controls power to the unit. If your Model 43-01 has the battery option, the BATTERY position should only be used if ac power is not available. The battery will be charging whenever the ac power cord is plugged in.

- ㉕ VAR/-16DBM/QUIET - With the switch set to the VAR position the send level is adjustable from -40 dBm to +10 dBm. When the switch is in the -16 DBM position the send level is a fixed -16 dBm. Setting the switch to QUIET provides a quiet termination at the send jack for noise measurements.

B. Knobs

- ③ Measure Function Knob - This knob performs the listed functions when set to the following positions:

HI - Left-hand display will show the elapsed time of the impulse noise measurement. Right-hand display will show the number of times an impulse noise occurrence exceeded the high threshold (low threshold setting +8 dB).

MID - Left-hand display will show the elapsed time of the impulse noise measurement. Right-hand display will show the number of times an impulse noise occurrence exceeded the mid threshold (low threshold setting +4 dB).

LOW - Left-hand display will show the elapsed time of the impulse noise measurement. Right-hand display will show the number of times an impulse noise occurrence exceeded the low threshold (set by the IMPULSE NOISE DBRN thumbwheel switch ⑤).

LEVEL - Left-hand display will show the received level in dBm referenced to the selected terminating impedance. Right-hand display will show the received frequency in kHz.

NOISE (W/T) - Left-hand display indicates the level (expressed in dBm) of the notched noise after filtering by the selected noise weighting filter. Right-hand display will be blanked.

NOISE (WO/T) - Left-hand display shows the level (expressed in dBrn) of the noise after filtering by the selected noise weighting filter. Right-hand display will be blanked.

SEND - Left-hand display will show the send level in dBm referenced to the selected line impedance. Right-hand display will show the send frequency in kHz.

⑤ IMPULSE NOISE DBRN Thumb-wheel Switch - Sets the desired low threshold, from 40 dBrn to 99 dBrn, for impulse noise measurements.

②① MONITOR - With knob set to the OFF position the audio speaker on the front panel will be shut-off. By turning the knob clockwise from the OFF position the volume from the speaker will be increasing.

②③ GENERATOR Knob - The GENERATOR knob is a multi-purpose control. When the Model 43-01 is receiving the knob is used to select the desired noise weighting filter. When the Model 43-01 is sending the knob is used to select the desired variable frequency range or the desired fixed frequency. This knob also controls the frequency range of the frequency counter. With knob in the following positions the corresponding function will be realized.

WB (120) - With the Model 43-01 in the noise measurement mode the wideband noise weighting filters [50 kHz (497F) or 50 kHz flat] are selected, depending upon the position of the WGTD/FLAT toggle switch. With the Model 43-01 in the send mode, the 120 kHz variable generator range (1250 Hz to 120 kHz) is selected. Also selects the 199.99 kHz frequency measurement range.

PROG (20) - In the noise measurement mode the program noise weighting filters (Program or 15 kHz flat) are selected, depending upon the position of the WGTD/FLAT toggle switch. In the send mode the 20 kHz variable generator range (250 Hz to 24 kHz) is selected. Selects the 199.99 kHz frequency measurement range.

VF (4) - In the noise measurement mode the voice frequency noise weighting filters (C-message or 3 kHz flat) are selected, depending upon the position of the WGTD/FLAT toggle switch. In the send mode the 4 kHz variable generator range (50 Hz to 4.8 kHz) is selected. The frequency counter's measurement range is set at 19.999 kHz.

.403 - Selects the 403 Hz fixed send frequency. In this position the voice frequency noise weighting filters (C-message or 3 kHz flat) are selected, depending upon the position of the WGTD/FLAT toggle switch. The frequency counter's measurement range is set at 19.999 kHz.

1.004 - Selects the 1004 Hz fixed send frequency. In this position the voice frequency noise weighting filters (C-message or 3 kHz flat) are selected, depending upon the position of the WGTD/FLAT toggle switch. The frequency counter's measurement range is set at 19.999 kHz.

2.809 - Selects the 2809 Hz fixed send frequency. In this position the voice frequency noise weighting filters (C-message or 3 kHz flat) are selected, depending upon the position of the WGTD/FLAT toggle switch. The frequency counter's measurement range is set at 19.999 kHz.

②④ LEVEL VAR - Used to adjust the send level from -40 dBm to +10 dBm.

- 26 VAR - Used to adjust the send frequency from 50 Hz to 4.8 kHz in the VF (4) mode, 250 Hz to 24 kHz in the PROG (20) mode and 1250 Hz to 120 kHz in the WB (120) mode.

C. Jacks

- 12 Ground Post - The Model 43-01 chassis is normally grounded through the power line. Where three-conductor power line is not available the chassis should be grounded via this post.
- 13 Left-Hand Line Interface Jacks - The user can connect to the 310 jack (tip and ring) or the 5-way binding post (tip and ring). The sleeve of the 310 jack is connected to chassis ground. These jacks serve as the receive jacks when the NORM/REV switch is set to NORM and as the send jacks when the NORM/REV switch is set to REV.
- 15 Right-Hand Line Interface Jacks - The user can connect to the 310 jack (tip and ring) or the 5-way binding post (tip and ring). The sleeve of the 310 jack is connected to chassis ground. These jacks serve as the send jacks when the NORM/REV switch is set to NORM and as the receive jack when the NORM/REV switch is set to REV.
- 19 DIAL/TALK 310 Jack - This jack is provided for the connection of a line-man's handset, other dialing facility or a headset during dial/talk operations. The sleeve of this 310 jack is connected to chassis ground.

D. Displays and Speaker

- 2 Right-Hand Display - This display indicates frequency in KHZ when the

measure function knob is set to LEVEL or SEND. It will indicate the number of impulse noise occurrences above the low, mid and high thresholds when the measure function knob is set to LOW, MID and HI, respectively. When the measure function knob is set to NOISE (W/T) or NOISE (WO/T) this display will be blanked.

- 4 Left-Hand Display - This display indicates level in dBm when the measure function knob is set to LEVEL or SEND. It will indicate the level of the received noise when the measure function knob is set to NOISE (W/T) or NOISE (WO/T). Finally, it will show the elapsed time, in minutes, of an impulse noise measurement when the measure function knob is set to HI, MID or LOW.

- 6 IMPULSE NOISE TONE INTERRUPT - This indicator will light and stay lit if the holding tone is lost during an impulse noise measurement.

- 9 TONE PRESENT - This indicator will light whenever a valid holding tone is present.

- 21 Speaker - The speaker provides various audible signals depending upon the position of the measure function knob. When the measure function knob is set to HI, MID or LOW the speaker will monitor the signal being fed to the impulse noise circuitry; when the measure function knob is set to LEVEL or SEND the speaker will monitor the receive and send signal, respectively. Finally, when the measure function knob is set to NOISE (W/T) or NOISE (WO/T), the speaker will monitor the signal after it has been conditioned by the noise weighting filters.

4. LINE INTERFACE AND DIAL/TALK, HOLD

4.01 This section describes the line interface connections required to perform the measurements described in subsequent sections of this manual. Also described in this section are the operating instructions for the 2-wire/4-wire dial/talk and hold capabilities of the Model 43-01.

4.02 The Model 43-01 has two sets of balanced terminals and is capable of sending and receiving signals simultaneously. The operator can interface to the Model 43-01 by either the 310 jacks or the 5-way binding posts on the front panel. When using the 310 jacks, be sure to use a WECO 310 plug or equivalent, use of any other type of plug can deform the contacts of the 310 jack. Refer to Figure 5 while performing the procedures in this section.

A. Impedance Selection

4.03 The Model 43-01 provides three commonly used terminating impedances, 135 Ω , 600 Ω , and 900 Ω . The desired impedance

is selected by setting the 135 Ω /900 Ω /600 Ω toggle switch to the appropriate position.

Note: Failure to select the proper impedance will cause errors in both the send and receive levels.

B. Bridge/Terminating Selection

4.04 The Model 43-01 can be bridged across the received line by setting the BRIDGE/TERM switch to the BRIDGE position. In the bridge mode, the send and receive levels are referenced to the selected terminating impedance (135 Ω , 600 Ω , or 900 Ω). When the Model 43-01 is going to terminate the received line, set the BRIDGE/TERM switch to the TERM position.

C. Normal/Reverse Selection

4.05 The NORM/REV switch enables the function of the send/receive jacks to be interchanged and may be used in 2-wire or 4-wire operation. When the NORM/REV switch is set to NORM, the right-hand jacks function as



Figure 5. Line Interface Controls and Connectors

the SEND jacks and left-hand jacks function as the RCV (receive) jacks. Setting the NORM/REV switch to REV reverses the functions of the jacks with the right-hand jack becoming the RCV (receive) jack and the left-hand jack the SEND jack.

D. 2-Wire Line Interface

4.06 In order to interface to a 2-wire line, proceed as follows:

- 1) Set DIAL-TALK/MEAS to MEAS.
- 2) If it is necessary to hold the line under test, set HOLD/OFF to HOLD.
- 3) Set BRIDGE/TERM to the desired position (see paragraph 4.04).
- 4) Set the 135 Ω /900 Ω /600 Ω switch to match the line impedance.
- 5) Set the NORM/REV switch to NORM in order to send.
- 6) Set the NORM/REV switch to REV in order to receive.
- 7) Set the 2W/4W switch to 2W.
- 8) Connect the 2-wire line under test to either the NORM-SEND 310 jack or 5-way binding posts.

4.07 Since the Model 43-01 is available with electronic hold circuits for both the SEND and RCV jacks, the NORM-RCV jacks can also be used for 2-wire line interface.

E. 4-Wire Line Interface

4.08 To interface with 4-wire lines, proceed as follows:

- 1) Set DIAL-TALK/MEAS to MEAS.
- 2) SET HOLD/OFF to OFF.
- 3) Set BRIDGE/TERM to the desired position (see paragraph 4.04).
- 4) Set the 135 Ω /900 Ω /600 Ω switch to match the line impedance.
- 5) Set the NORM/REV switch to NORM.
- 6) Set the 2W/4W switch to 4W.
- 7) Connect the send line to the NORM-SEND 310 jack or 5-way binding posts.

- 8) Connect the receive line to the NORM-RCV 310 jack or 5-way binding posts.

F. 2-Wire Dial-Up

4.09 The Model 43-01 is equipped with a versatile dial/talk circuit that enables a lineman's handset to be used in 2-wire operation. The following instructions assume that the dialing facility used has a listener output. If a simple dial is used that does not have an audible listener output, the Model 43-01's internal monitor speaker and volume control can be used to determine the presence of a dial tone and that the called line answered after dialing. In order to perform the following procedure, a lineman's handset or equivalent dialing facility (e.g. telephone set with a rotary dial) is required.

4.10 To dial-up on a single 2-wire wet line, proceed as follows:

- 1) Set the HOLD/OFF switch to OFF.
- 2) Set DIAL-TALK/MEAS to DIAL/TALK.
- 3) Set 2W/4W to 2W.
- 4) Set BRIDGE/TERM to the desired position (see paragraph 4.04).
- 5) Set the 135 Ω /900 Ω /600 Ω switch to match the line impedance.
- 6) Set the NORM/REV switch to NORM.
- 7) For single 2-wire line, connect the line under test to the NORM SEND 310 jack or 5-way binding posts.
- 8) Connect the Model 43-01 chassis ground post $\equiv$ to the local ground or the sleeve (shield) of the 2-wire line undergoing test.
- 9) Connect the lineman's handset to the DIAL/TALK 310 jack.
- 10) Depress the off-hook button or turn on the off-hook switch on the lineman's handset.
- 11) Listen for a dial tone from the handset, then proceed to dial the desired number.

- 12) When the call is answered, set the HOLD/OFF switch to the HOLD position.
- 13) To return to the testing mode of operation, set the DIAL-TALK/MEAS switch to the MEAS position.

4.11 To dial-up on a double 2-wire line, proceed as follows:

- 1) Set the HOLD/OFF switch to OFF.
- 2) Set DIAL-TALK/MEAS to DIAL/TALK.
- 3) Set 2W/4W to 2W.
- 4) Set BRIDGE/TERM to the desired position (see paragraph 4.04).
- 5) Set the $135\ \Omega/900\ \Omega/600\ \Omega$ switch to match the line impedance.
- 6) Set the NORM/REV switch to NORM.
- 7) Connect the first line under test to the NORM SEND 310 jack or 5-way binding posts.
- 8) Connect the Model 43-01 chassis ground post $\perp$ to the local ground or the sleeve (shield) of either 2W line undergoing test.
- 9) Connect the lineman's handset to the DIAL/TALK 310 jack.
- 10) Depress the off-hook button or turn on the off-hook switch on the lineman's handset.
- 11) Listen for the dial tone from the handset, then proceed to dial the desired number.
- 12) When the call is answered, set the HOLD/OFF switch to the HOLD position.
- 13) Connect the second line under test to the NORM RCV 310 jack or 5-way binding posts.
- 14) Set the NORM/REV switch to REV. The lineman's handset is now connected to the NORM RCV jack.
- 15) Verify that a dial tone is present in the lineman's handset when the off-hook button is depressed.
- 16) Dial the second desired number.
- 17) When the calling party answers, set the DIAL-TALK/MEAS switch to MEAS in order to place both lines in the normal test mode of operation.

- 18) The lineman's handset is now disconnected from both lines and can be unplugged or left plugged into the DIAL/TALK 310 jack without affecting tests or measurements.

Note: To redial because of any error or a busy line during any of the previous procedures, simply momentarily release or switch off the off-hook switch on the lineman's handset. Then redial the desired number as previously discussed.

4.12 Supervisory talk/listen functions can interrupt normal measurements at any time by reconnecting the lineman's handset to the DIAL/TALK 310 jack and setting the DIAL-TALK/MEAS switch to the DIAL/TALK position. To access the right-hand jacks, set the NORM/REV switch to the NORM position and to access the left-hand jacks, set the NORM/REV switch to the REV position. Normal measurement operation can be restored by setting the DIAL-TALK/MEAS switch to MEAS, as long as the HOLD/OFF switch is left in the HOLD position.

The lineman's handset can be used as a private monitor of the signal being measured by the Model 43-01 by connecting the lineman's handset to the DIAL/TALK 310 jack and setting the 2W/4W switch to the 4W position. To avoid local sidetones and acoustical noise pick-up, set the lineman's handset off-hook switch to the on-hook position. This is a convenience when the sound from the Model 43-01 monitor may be objectionable to others in the vicinity or when privacy is desired. Using this method, the lineman's handset monitors the selected receive pair with a nominal fixed gain of 0 dB.

G. 2W Answer

4.13 The Model 43-01 can answer an incoming call in two different ways. The first method uses the facilities provided by the Model 43-01, whereas the second method uses a lineman's handset or equivalent external facility. The first method can be used only where one 2-wire line is being answered. If two 2-wire lines are to be answered, it is necessary to use the second method.

4.14 First Method

Set the Model 43-01 switches to the following configuration:

- 1) BRIDGE/TERM to BRIDGE.
- 2) HOLD/OFF to OFF.
- 3) Connect the incoming 2-wire line to the NORM RCV 310 jack or 5-way binding posts.
- 4) Set DIAL-TALK/MEAS to MEAS.
- 5) Set the measure function switch to LEVEL.
- 6) Turn on the MONITOR volume.
- 7) Set the $135\ \Omega/900\ \Omega/600\ \Omega$ switch to match the line impedance.
- 8) Listen for the incoming ring. When the ringing signal is heard, turn the HOLD/OFF switch to the HOLD position. The line is now answered.
- 9) Set BRIDGE/TERM to the desired position (see paragraph 4.04).
- 10) Set NORM/REV to NORM to receive on a 2-wire line. Set NORM/REV to REV to send on a 2-wire line.

4.15 Second Method

To perform this method, a lineman's handset is required. Perform the following procedure:

- 1) Set HOLD/OFF to OFF.
- 2) Select DIAL-TALK/MEAS to DIAL/TALK.
- 3) Set 2W/4W to 2W.
- 4) Set BRIDGE/TERM to BRIDGE.
- 5) Connect the 2-wire lines to be answered to the NORM SEND and the NORM RCV 310 jacks.
- 6) Set the $135\ \Omega/900\ \Omega/600\ \Omega$ switch to match the line impedance.
- 7) Connect the lineman's handset to the DIAL/TALK 310 jack. Make sure the lineman's handset switch is set to the on-hook position.
- 8) When an incoming call is identified, answer by setting the lineman's handset switch to the off-hook position.
- 9) Set the HOLD/OFF switch to HOLD.
- 10) If only one 2-wire line is being answered, go to the normal measure-

ment mode by setting the DIAL-TALK/MEAS switch to the MEAS position.

- 11) If a second 2-wire line is to be answered, set NORM/REV to REV and leave the DIAL-TALK/MEAS switch in the DIAL/TALK position.
- 12) Set the lineman's handset switch to the on-hook position.
- 13) When an incoming call is identified, answer it by setting the lineman's handset switch to the off-hook position.
- 14) To go to the normal measurement mode of operation, set the DIAL-TALK/MEAS switch to the MEAS position.
- 15) Select BRIDGE or TERM as desired for the receive 2-wire line (see paragraph 4.04).
- 16) Select send or receive by setting the NORM/REV switch to the appropriate position. (See paragraph 4.05).

4.16 After going to the normal measurement mode of operation, the lineman's handset may be left connected to the Model 43-01 and be used as a monitor for the receive signal by setting the 2W/4W switch to 4W.

5. RECEIVE LEVEL AND FREQUENCY MEASUREMENT

5.01 This section describes the operating procedure for the Model 43-01 when performing receive level and frequency measurements.

5.02 Overrange and underange condition indicators are provided to alert the operator when the level and/or frequency of the signal being measured exceeds the measurement capacities of the Model 43-01. Refer to Figure 6 while performing the procedures in this section.

A. Measurement

5.03 To perform a receive level and frequency measurement, proceed as follows:

- 1) Perform the required line interface procedures in Section 4.
- 2) Set the measure function knob to the LEVEL position.
- 3) The left-hand display will indicate the receive level in dBm referenced to the selected terminating impedance.

- 4) The right-hand display will indicate the received frequency in kHz. The right-hand display will have a maximum frequency reading capability of 19.999 kHz when the GENERATOR knob is set to the VF (4), .403, 1.004, or 2.809 positions. The frequency counter will read up to 199.99 kHz when the GENERATOR knob is set to the WB (120) or the PROG (20) positions.

B. Overrange and Underrange Indications

5.04 If the receive signal exceeds the measurement capacities of the Model 43-01, one of the following overrange or underrange indications will occur:

- 1) If the level goes above +10 dBm, the left-hand display will blank with the exception of the positive sign indicating that level overrange condition exists.
- 2) If the level goes below -90 dBm, the left-hand display will blank with the exception of a negative sign, indicating that a level underrange condition exists.

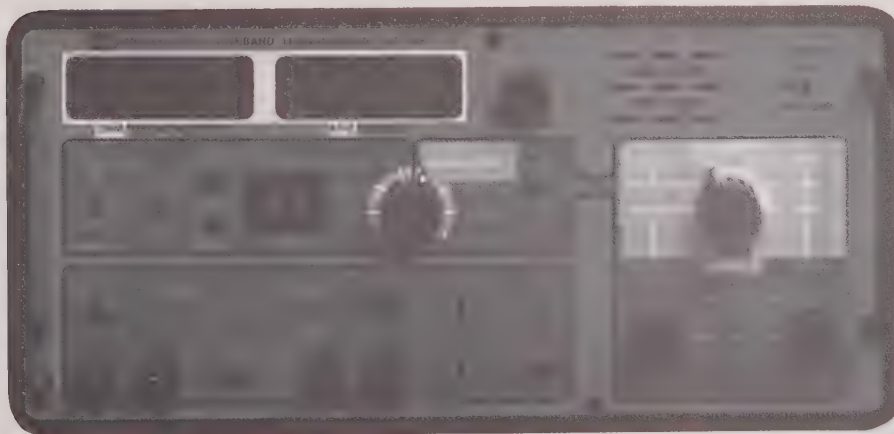


Figure 6. Receive Level and Frequency Measurements

- 3) If the received frequency is above 19.99 kHz when the GENERATOR knob is in the VF (4), .403, 1.004 or 2.809 positions or above 199.99 kHz when the GENERATOR knob is in the WB (120) or PROG (20) positions the righthand display will blank with the exception of a positive sign.
- 4) If the received frequency is below the measurement capability of the Model 43-01 the right-hand display will indicate all zeros.

6. NOISE MEASUREMENT

6.01 This section describes the operating procedure for the Model 43-01 when performing noise measurements. The user can make the following noise-weighted filter measurements:

- 1) C-message with or without tone.
- 2) 3 kHz flat with or without tone.
- 3) Program with or without tone.
- 4) 15 kHz flat with or without tone.
- 5) 50 kBit (497 F) with or without tone
- 6) 50 kHz flat with or without tone.

Refer to Figure 7 while performing the procedures in this section.

A. Measurement

6.02 To perform a noise measurement, proceed as follows:

- 1) Perform the line interface procedures given in Section 4.
- 2) Set the measure function knob to NOISE (W/T) to measure the noise on channels having a holding tone. If a holding tone is not on the channel, set the measure function knob to the NOISE (WO/T) position.

- 3) Set the WGTD/FLAT switch to the WGTD position if C-message, program or 50 kBit (497 F) filter weighting is required. Set the WGTD/FLAT switch to the FLAT position if 3 kHz flat, 15 kHz flat, or 50 kHz flat filter weighting is desired.
- 4) Set the GENERATOR knob to the VF (4) position for C-message or 3 kHz flat weighting. Set the GENERATOR knob to PROG (20) for program or 15 kHz flat weighting. Set the GENERATOR knob to the WB (120) position for 50 kBit (497F) and 50 kHz flat weighting.

Note: With the GENERATOR knob set to the .403, 1.004 or 2.809 positions the C-message or 3 kHz flat weighting filters are selected depending upon the position of the WGTD/FLAT switch.

- 5) The left-hand display will indicate the received noise expressed in dBrn.

6.03 The right-hand display will be blank during noise measurements.

6.04 The user can determine the signal-to-noise ratio of a channel with holding tone by first measuring the circuit noise with the measure function knob set to the NOISE



Figure 7. Noise Measurement

(WO/T) position, and then measuring the circuit noise with the measure function knob in the NOISE (W/T) position. By subtracting the second reading from the first, the user can determine the signal-to-noise ratio of the channel.

B. Overrange and Underrange Indications

6.05 If the received noise goes above +100 dBrn, the left - hand display will blank with the exception of the positive sign indicating that an overrange condition exists.

6.06 If the received noise goes below 0 dBrn, the left - hand display will blank with the exception of the negative sign indicating that an underrange condition exists.

7. IMPULSE NOISE MEASUREMENT

7.01 This section discusses the operating procedures for the Model 43-01 when performing impulse noise measurements. Refer to Figure 8 while performing the procedures in this section.

WARNING: Do not change any front panel switch settings once the impulse noise measurement is started. Doing so may cause invalid data to be recorded.

7.02 To perform impulse noise measurements, proceed as follows:

- 1) Perform line interface procedures given in Section 4.
- 2) Set the DBRN thumbwheel switches to the desired low threshold level.

Note: Threshold spread between LOW and MID and MID and HI is preset to 4 dB.

- 3) Set the TIMER MINUTES switch to 5, 15, or CONT as desired.
- 4) Set the WGTD/FLAT switch to WGTD for C-message, Program, 50 kBIT (497 F) filter weighting. Set the WGTD/FLAT switch to FLAT for

3 kHz flat, 15 kHz flat, or 50 kHz flat filter weighting.

- 5) Set the GENERATOR knob to VF (4) for C-message or 3 kHz flat. Set the GENERATOR knob to PROG (20) for Program, or 15 kHz flat. Set the GENERATOR knob to WB (120) for 50 kBit (497F) or 50 kHz flat filter weighting.

Note: With the GENERATOR knob set to the .403, 1.004 or 2.809 positions the C-message or 3 kHz flat weighting filters are selected depending upon the position of the WGTD/FLAT switch.

- 6) Momentarily press the TIMER START/STOP switch to the START position.
- 7) The left-hand display will indicate the elapsed time in minutes that the impulse noise measurement has been in-process.
- 8) By setting the measure function knob to the LOW, MID, and HI positions, the right-hand display will indicate the accumulated low, mid, and high impulse noise counts, respectively.



Figure 8. Impulse Noise Measurement

7.03 The TONE PRESENT indicator will be lit whenever a valid holding tone is present. If for any reason, the holding tone is lost during impulse noise measurements, the TONE INTERRUPT indicator will light and remain lit until the impulse noise measurement is started again.

7.04 The user can monitor the receive level and frequency without affecting the impulse noise measurement by setting the measure function switch to the LEVEL position.

8. SEND LEVEL AND FREQUENCY SETUP

8.01 This section describes the send level and frequency setup procedures for the Model 43-01. Refer to Figure 9 while performing the procedures in this section.

8.02 In order to set up the send level, proceed as follows:

- 1) Perform the line interface procedures in Section 4.
- 2) Set the measure function knob to SEND.
- 3) Set the LEVEL VAR/-16DBM/QUIET switch to the VAR position for a variable level adjustment, to -16DBM for fixed -16 dBm output level, or to QUIET for quiet termination on a send line.
- 4) If the LEVEL VAR/-16 DBM/QUIET switch is set to the VAR position, adjust the LEVEL VAR knob for the desired send level as indicated in the left-hand display of the Model 43-01.

8.03 Perform the following steps for the send frequency setup:

- 1) Set the GENERATOR knob to the WB (120) position for a variable generator from 1250 Hz to 120 kHz. Set the GENERATOR knob to PROG (20) for a variable generator from 250 Hz to 24 kHz. Set the GENERATOR knob to the VF (4) position for a variable generator from 50 Hz to 4.8 kHz. When the GENERATOR knob is in any of the three previous positions, the VAR knob is used to set the send frequency within the indicated ranges. The right-hand display will display the send frequency.
- 2) For fixed frequencies of 403, 1004, or 2809 Hz, set the GENERATOR knob to the .403, 1.004 or 2.809 position, respectively.



Figure 9. Send Level and Frequency Setup

9. MONITOR

9.01 This section describes the operation of the Model 43-01 audio monitor. Refer to Figure 10.

9.02 The Model 43-01 MONITOR provides automatic gain control (AGC) when the measure function knob is in the LEVEL, NOISE (W/T), NOISE (WO/T) or SEND position. A fixed gain, determined by the DBRN thumbwheel setting, is provided when the measure function knob is in the LOW, MID or HI position.

Since up to 90 dB of AGC is provided, the noise background will change dramatically when the measure function knob is in the LEVEL, NOISE (W/T), NOISE (WO/T) or the SEND position.

Any user-selected filter weighting can be applied to the monitor signal. In the case

when the measure function knob is set to the NOISE (WO/T) position, the user can monitor any of the noise weighting filter signals without the notch in-line.

When the measure function knob is set to the LOW, MID, HI or NOISE (W/T) position, the signal being monitored is the selected noise weighting filter plus the notch which removes any 1 kHz test tone that may be present. This provides the user with the ability to listen to the notched output with fixed gain when in the LOW, MID or HI modes or with a notched AGC'd output in the NOISE (W/T) mode as desired. This is particularly useful in trouble-shooting certain types of noise and crosstalk problems.

9.03 The volume of the monitor signal is controlled by the MONITOR knob. The user can turn the monitor off by setting this knob to the OFF position.

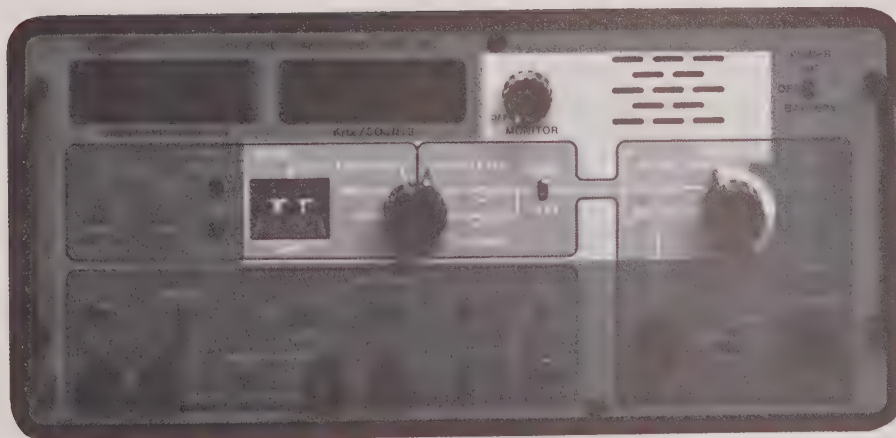


Figure 10. Monitor

10. SELF-TEST

10.01 This section describes the procedure for self-testing the Model 43-01. These procedures are to be used for self-test purposes only, and are not intended for calibration. A looping cord is required to do the self-test. Perform the following self-test procedures in sequence. Refer to Figure 11.

A. Initial Switch Settings

- 1) Connect the ac power cord to the rear panel receptacle and power source.
- 2) Connect the looping cord from the NORM REC jack to the NORM SEND jack.
- 3) Set BRIDGE/TERM to the TERM position.
- 4) Set HOLD/OFF to OFF.
- 5) Set DIAL-TALK/MEAS to MEAS.
- 6) Set the TIMER 5/15/CONT switch to the 5 position.
- 7) Set the DBRN thumbwheel switches to 76.
- 8) Set the measure function knob to SEND.
- 9) Set WGTD/FLAT to FLAT.
- 10) Set the GENERATOR knob to 1.004.
- 11) Set the LEVEL VAR/-16DBM/QUIET switch to -16DBM.

- 12) Set the POWER switch to the AC position.
- 13) Adjust the MONITOR knob for a comfortable listening level.

B. Generator, Level Meter and Frequency Counter Checks

- 1) With the initial switch settings completed the left-hand display should read -16.0 dBm $\pm$ 0.1 dB and the right-hand display should read 1.004 kHz $\pm$ 0.001 kHz.
- 2) Set the GENERATOR knob to 2.809. The left-hand display should read -16.0 dBm $\pm$ 0.2 dB. The right hand display should read 2.809 kHz $\pm$ 0.001 kHz.
- 3) Set the GENERATOR knob to .403. The left-hand display should read -16.0 dBm $\pm$ 0.2 dB. The right-hand display should read 0.403 kHz $\pm$ 0.001 kHz.
- 4) Set the GENERATOR knob to the VF (4) position.
- 5) Set the VAR knob fully counterclockwise.

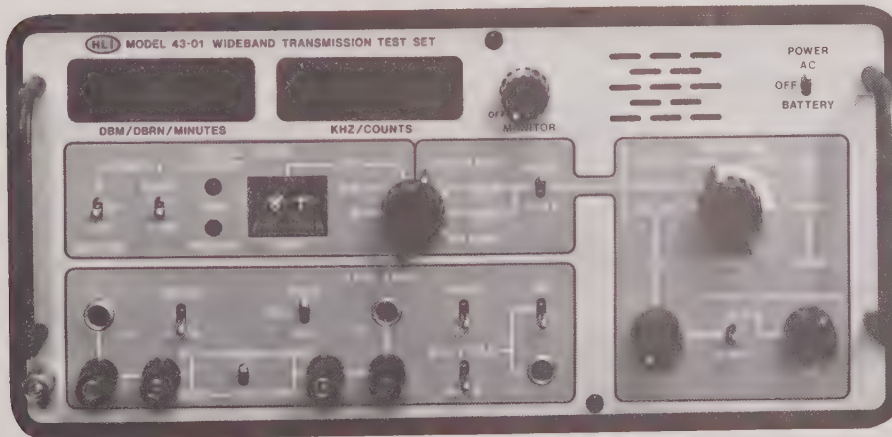


Figure 11. Self - Test

- 6) Slowly rotate the VAR knob clockwise. Verify that the left-hand display reads $-16.0 \text{ dBm} \pm 0.2 \text{ dB}$ over the frequency range and the right-hand display goes from a minimum of 0.050 kHz or less to a maximum of at least 4.800 kHz .
- 7) Set the GENERATOR knob to the PROG (20) position.
- 8) Set the VAR knob fully counter-clockwise.
- 9) Slowly rotate the VAR knob clockwise. Verify that the left-hand display reads $-16.0 \text{ dBm} \pm 0.5 \text{ dB}$ over the frequency range. Also verify that the right-hand display goes from a minimum of 0.25 kHz or less to a maximum of at least 24.00 kHz .
- 10) Set the GENERATOR knob to the WB (120) position.
- 11) Set the VAR knob fully counter-clockwise.
- 12) Slowly rotate the VAR knob clockwise. Verify that the left-hand display reads $-16.0 \text{ dBm} \pm 0.5 \text{ dB}$ over the frequency range. The right hand display should go from a minimum of 1.25 kHz or less to a maximum of at least 120.00 kHz .
- 13) Set the GENERATOR knob to the 1.004 position.
- 14) Set the LEVEL VAR/ -16 DBM/QUIET switch to the QUIET position. Verify that the left-hand display blanks with the exception of a negative sign and the right-hand display reads all zeroes.
- 15) Set the LEVEL VAR/ -16 DBM/QUIET switch to the VAR position.
- 16) Set the LEVEL VAR knob fully counter-clockwise. Verify that the left-hand display reads -40 dBm or less.
- 17) Slowly rotate the LEVEL VAR knob clockwise. Note that the left-hand display reading steadily increases to $+10 \text{ dBm}$ or more when the fully clockwise position is reached.
- 18) Set the LEVEL VAR/ -16 DBM/QUIET switch to the -16 DBM position.
- 19) Set the measure function knob to the LEVEL position. Note that the left-hand display reads -16.0 dBm

$\pm 0.1 \text{ dB}$ and the right-hand display reads 1.004 kHz .

C. Noise Meter and Filter Checks

- 1) Set the measure function knob to NOISE (WO/T).
- 2) Set the WGTD/FLAT switch to FLAT.
- 3) Set the GENERATOR knob to 1.004. Verify that the left-hand display reads $74 \text{ dBm} \pm 1 \text{ dB}$.
- 4) Set the GENERATOR knob to 2.809. Verify that the left-hand display reads $72 \text{ dBm} \pm 1 \text{ dB}$.
- 5) Set the WGTD/FLAT switch to WGTD. Verify that the left-hand display reads $72 \text{ dBm} \pm 1 \text{ dB}$.
- 6) Set the GENERATOR knob to 1.004. Verify that the left-hand display reads $74 \text{ dBm} \pm 1 \text{ dB}$.
- 7) Set the GENERATOR knob to .403. Verify that the left-hand display reads $63 \text{ dBm} \pm 1 \text{ dB}$.
- 8) Set the GENERATOR knob to 1.004.
- 9) Set the measure function knob to NOISE (W/T). Note that the left-hand display reading is 24 dBm or less.
- 10) Set the measure function knob to the SEND position.
- 11) Set the GENERATOR knob to PROG (20).
- 12) Adjust the VAR knob for a frequency reading of 0.40 kHz in the right-hand display.
- 13) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads $65 \text{ dBm} \pm 2 \text{ dB}$.
- 14) Set the measure function knob to SEND.
- 15) Adjust the VAR knob for a frequency reading of 1.00 kHz in the right-hand display.
- 16) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads $74 \text{ dBm} \pm 1 \text{ dB}$.
- 17) Set the measure function knob to SEND.
- 18) Adjust the VAR knob for a frequency reading of 10.00 kHz in the right-hand display.

- 19) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 66 dBrn $\pm$ 4 dB.
- 20) Set the measure function knob to SEND.
- 21) Set the WGTD/FLAT switch to FLAT.
- 22) Adjust the VAR knob for a frequency reading of 15.00 kHz in the right-hand display.
- 23) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 71 dBrn $\pm$ 1 dB.
- 24) Set the measure function knob to SEND.
- 25) Adjust the VAR knob for a frequency reading of 1.00 kHz in the right-hand display.
- 26) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 74 dBrn $\pm$ 1 dB.
- 27) Set the measure function knob to SEND.
- 28) Set the GENERATOR knob to WB (120).
- 29) Adjust the VAR knob for 2.00 kHz.
- 30) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 74 dBrn $\pm$ 1 dB.
- 31) Set the measure function switch to SEND.
- 32) Adjust the VAR knob for 50.00 kHz.
- 33) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 71 dBrn $\pm$ 1 dB.
- 34) Set the measure function knob to SEND.
- 35) Set the WGTD/FLAT switch to WGTD.
- 36) Adjust the VAR knob for 1.25 kHz.
- 37) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 74 dBrn $\pm$ 1 dB.
- 38) Set the measure function knob to SEND.
- 39) Adjust the VAR knob for 37.00 kHz.
- 40) Set the measure function knob to NOISE (WO/T). Verify that the left-hand display reads 68 dBrn $\pm$ 2 dB.

D. Impulse Noise Check

- 1) Set the GENERATOR knob to 1.004.
- 2) Set the measure function switch to LOW.
- 3) Momentarily press START/STOP to the START position. Note the TONE PRESENT indicator is lit and the TONE INTERRUPT indicator is not lit.
- 4) Remove the looping cord and note that the TONE PRESENT indicator is not lit and the TONE INTERRUPT indicator is lit.
- 5) Reconnect the looping cord. Note that the TONE PRESENT indicator is lit and that the TONE INTERRUPT indicator remains lit.
- 6) Momentarily press START/STOP to the START position. Note that the TONE INTERRUPT indicator is not lit.
- 7) Set the GENERATOR knob to WB (120).
- 8) Set the WGTD/FLAT switch to FLAT.
- 9) Set the measure function switch to SEND.
- 10) Adjust the VAR knob for 2.00 kHz.
- 11) Momentarily press START/STOP to the START position.
- 12) Set the measure function switch to LOW, then MID and then HI. Note that the LOW counter is counting and the MID and HI counters are not counting.
- 13) Set the DBRN thumbwheel switches to 72.
- 14) Set the measure function switch to LOW, then MID and then HI. Note that the LOW and MID counters are counting and the HI counter is not counting.
- 15) Set the DBRN thumbwheel switches to 68.
- 16) Set the measure function switch to LOW, then MID and then HI. Note that the LOW, MID and HI counters are counting.
- 17) Set the DBRN thumbwheel switches to 60.

- 18) Momentarily press START/STOP to the START position.
- 19) After the TIMER times out at 5.0 minutes, use the measure function switch to read the LOW, MID and HI counts. Note they all read 2250 counts $\pm 10\%$.

11. THEORY OF OPERATION

A. General

11.1 Input and output connection is made via WECO type 310 jacks and 5-way binding posts. This flexibility accommodates a 310 plug, standard dual banana plug, or a wire lead connection. When the 5-way binding posts are used, the sleeve (ground) connection is made to the ground ($\oplus$) terminal. The 5-way binding posts are the same as the tip and ring connections on a 310 plug. The input and output connections are balanced. Both input and output have over voltage protection provided by spark gaps connected from tip-to-ground and ring-to-ground. The NORM/REV toggle switch reverses the roles of the send and receive connections, and facilitates bi-directional measurements while holding a 2-wire line.

11.2 Refer to Figure 12 for an overall block diagram of the Model 43-01.

B. Interface

11.3 Input Circuit: The input circuit consists of two polarized dc blocking capacitors, switch selectable terminating resistors of 600 Ω , 900 Ω , and 135 Ω , BRIDGE/TERM switch to disconnect all terminating resistors, and an input transformer. The transformer output feeds the input buffer (IC10) through a passive roofing filter and high frequency compensation network. The output of IC10 is gain normalized to 0.7746 V (0 dBm at 600 Ω) for 0 dBm input, regardless of the impedance selected. The input circuitry is located on the 4301-402 (I/O) circuit board with the exception of the terminating resistors and the front panel controls which are on the 4301-0-2-102 (INTERFACE) circuit board.

11.4 Output Circuit: The generator output level is a fixed +4 dBm and is connected to the fixed level attenuator and front panel level controls. The fixed or variable level is switch selected, normalized in send level at IC22, and adjusted for output impedance level at IC21. Both halves of IC21 act as a

push-pull driver for the output transformer. The output transformer secondary is series connected for 600 Ω and 900 Ω , and parallel connected for 135 Ω . The transformer output is connected to the appropriate resistors for the selected output impedance. A pair of polarized capacitors provide dc blocking. The output circuit is located on the 4301-402 (I/O) circuit board, with the exception of the front panel controls and one of the impedance selection resistors which are on the 4301-0-2-102 (INTERFACE) circuit board.

11.5 Hold Circuits: The send and receive hold circuits are electrically identical and consist of a full wave rectifier and an electronic constant current load. Q3 (Q6) is the current carrying path, and Q1 (Q4) senses the voltage drop across R131 (R136) to regulate the input current to Q2 and Q3 (Q5 and Q6), which are connected as a Darlington amplifier. R129 (R134) will shunt currents of Q2 (Q5) away from Q3 (Q6) to prevent unwanted conduction in Q3 (Q6). Both hold circuits are located on the 4301-402 (I/O) circuit board and the front panel HOLD switch is on the 4301-0-2-102 (INTERFACE) circuit board.

11.6 Dial/Talk Circuit: The dial/talk circuit has two operating modes controlled by the 2W/4W (2-wire/4-wire) switch. In 2-wire dial/talk operation, the tip and ring connections of the send circuit are directly connected to the tip and ring of the headset jack. The send circuit electronic hold is bypassed for 2W dial/talk, so that the handset can control on-hook and off-hook conditions and dial out on the 2W line.

11.7 When the 4W dial/talk mode is selected, the handset tip and ring connections are connected to the primary side of the send transformer in place of the generator. The Model 43 provides internal talk battery to the handset. Communication can be established over the send line, but the handset cannot dial out. A receive circuit "leak" through R13 and C1 on the interface board permits the user to listen on the receive path and talk on the send path of a typical 4W system. When dial/talk is not selected, the handset remains connected

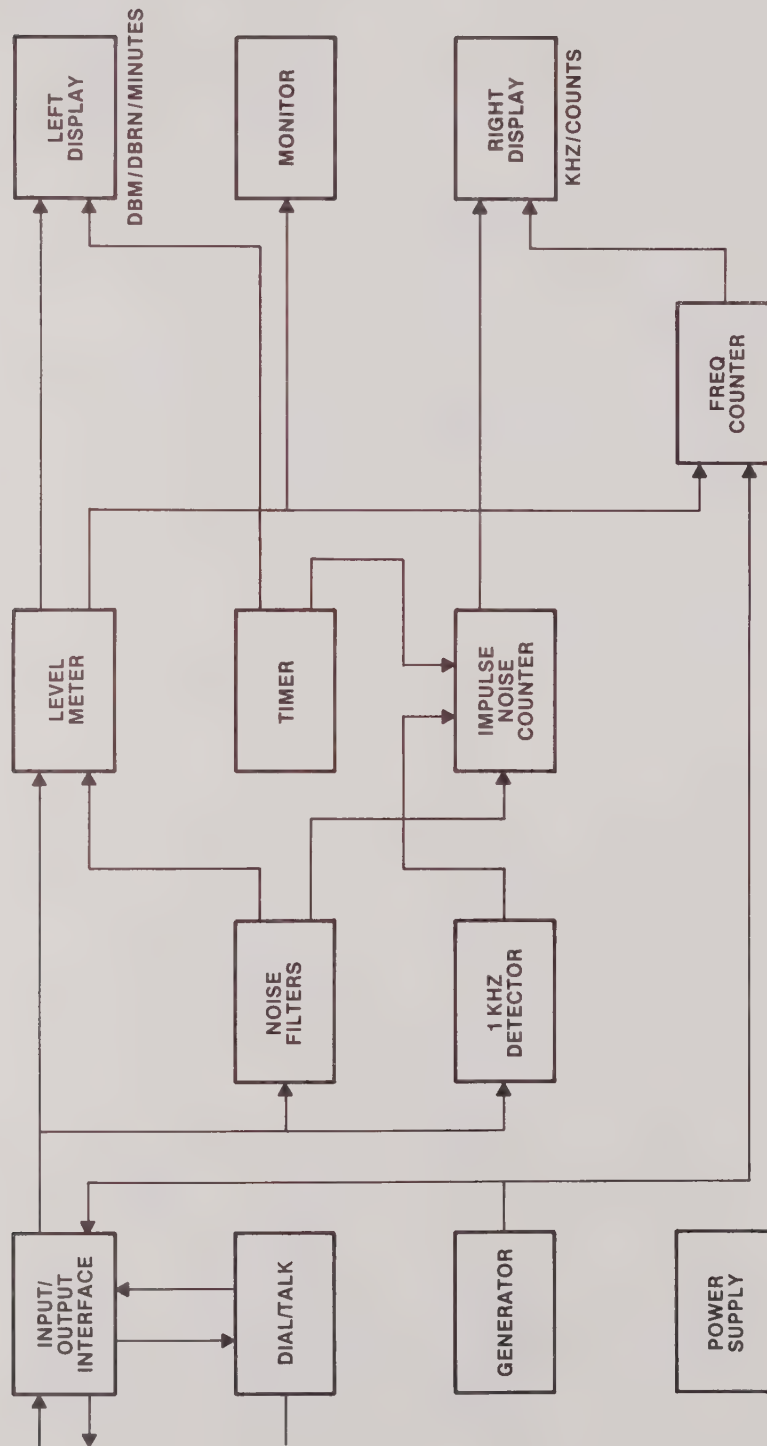


Figure 12. Model 43-01 Block Diagram

to talk battery and to the receive circuitry, so that the user may monitor the input through the handset when making measurements. This is useful when the monitor speaker disturbs others nearby.

C. Noise Filters

11.8 The noise filters include six noise weighting filters, a 1010 Hz notch filter, and electronic switching circuitry to select the desired noise filter. All noise filter circuitry is located on the 4301-402 (I/O) circuit board. All filter specifications conform to Bell PUB 41009 specifications.

D. Level Meter

11.9 Refer to Figure 13 for a block diagram of the level meter. The level meter consists of an autorange amplifier, detector, voltage reference, comparator and VCO, and up/down counter. The up/down counter steps the autorange amplifier up or down in 1 dB steps from 0 dB to 99 dB. The result is a log converter with wide dynamic range and extended high frequency response. The up/down counter also steps the voltage reference in 0.05 dB steps to complete the logarithmic measurement of the ac signal with 0.05 dB resolution. The resulting up/down counter state is digitally scaled to produce the correct level reading on the display.

11.10 Autorange Amplifier: The autorange amplifier consists of five amplifier stages controlled by the up/down counter. The -10/+30 dB stage provides either a gain of +30.0 dB or a loss of 10.0 dB, to provide a 40 dB step of gain when the input signal falls below -30.0 dBm. The 10 dB loss above -30.0 dBm adjusts the autorange amplifier to 0 dBm output at the maximum input level of +10.0 dBm. The -10/+30 dB stage uses IC14, IC17, IC23, and IC24 on the I/O board. The output of the -10/+30 dB stage feeds a 2-pole Butterworth low-pass filter with a corner frequency of 333 kHz to establish the noise bandwidth of the level meter.

11.11 The two 0/20 stages are basically the same as the 0/10 stage. Each is realized by a

noninverting amplifier stage with 20 dB (or 10 dB) gain. To avoid gain errors due to the finite gain-bandwidth product of the amplifiers, the two 20 dB stages are bypassed when not required. The first 20 dB stage uses IC27 and part of IC28. The second 20 dB stage uses IC23 and part of IC28. IC15 performs the bypass function previously mentioned. IC16 and part of IC9 are used for the 10 dB stage. All amplifier stages except the -10/+30 dB stage are located on the 4301-302 (ANALOG) circuit board.

11.12 The 0 to 9 dB amplifier uses a noninverting amplifier stage with eight 1 dB steps. An additional step is accomplished by attenuating the input to IC14 by 8 dB in the steps 0 dB through 7 dB. When 8 dB gain is required, the gain of amplifier IC14 returns to 1 dB, but with an 8 dB high input signal. The remaining 1 dB step is accomplished in the same manner, with 1 dB of additional gain in IC14. The 0 to 9 dB amplifier uses IC14, IC8, and part of IC9.

11.13 Detector: A full-wave detector with two operating modes is used. For level measurements the detector configuration permits a full-wave average of the amplified input signal. For noise measurements the detector switches to a quasi-RMS mode. The detector uses IC19, IC6, and IC7 on the 4301-302 (ANALOG) circuit board.

11.14 Counter Control: The up/down counter control starts with a difference amplifier which subtracts the reference voltage from the detector output voltage and amplifies the resulting error voltage. The error voltage feeds both a comparator and a voltage controlled oscillator. The comparator determines the direction the counter will run, and the voltage controlled oscillator determines how fast the counter will count. As the error voltage approaches zero, the counter and the rate of change of the autorange steps slow down and eventually stop. This technique creates a true proportional control servo loop controlled by the reference voltage and the input signal. The counter control uses part of IC4 as the difference amplifier and part of IC2 as the comparator. The VCO is made up of IC1, and

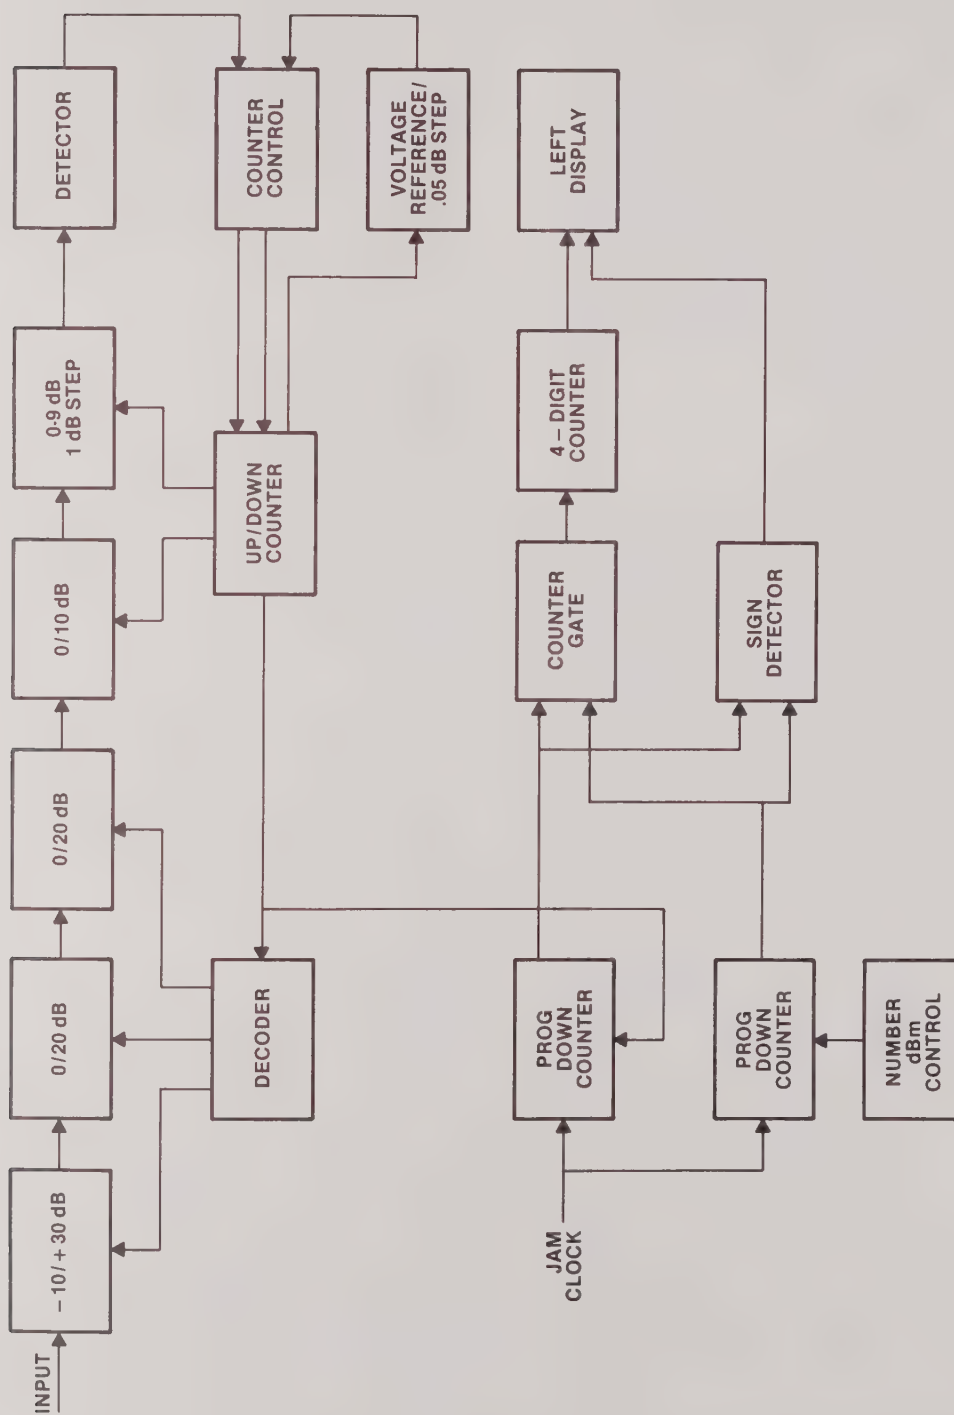


Figure 13. Level Meter Block Diagram

parts of IC2, IC5, and IC13. The counter control is located on the 4301-302 (ANALOG) board.

11.15 Voltage Reference and .05 dB Steps: The reference amplifier is a summing amplifier stage which adds .05 dB steps of voltage to the 6 V reference to control the difference amplifier. The .05 dB steps are controlled by the first two stages of the up/down counter and provide 0.05 dB resolution for the servo loop.

11.16 Up/Down Counter and Decoder: The up/down counter has a range from 0000 to 9995. Since the autorange amplifier is pre-scaled by 10 dB, 0000 corresponds to +10.0 dBm and 9995 corresponds to -89.95 dBm. The counter has 3 BCD stages and one binary stage. The binary stage controls the .05 dB half digit, and the 3 BCD stages count in .1, 1.0, and 10.0 dB steps. Anti-rollover protection is provided by part of IC13 to force the counter to stop when the high or low extreme is reached. The counter consists of IC20, IC32, IC33, and IC21. All up/down counter components are located on the 4301-302 (ANALOG) circuit board. The decoder is a digital logic circuit that converts the BCD code (1-2-4-8) to a 1-2-2-4 code to match the sequence of the autorange amplifiers.

11.17 Programmable Down Counters: The level meter utilizes two programmable down counters to scale the level output to a 0 dBm reference or a 0 dBm reference. The first counter, IC35 on the analog board, receives four digits of information from the up/down counter. The second counter, IC1 on the digital board, receives four digits of preset information, which correspond to +10.00 dBm for level, or 100.0 dBm for noise. The two presets correspond to the maximum reading in level or noise modes. The two programmable down counters start simultaneously and, through two OR gates and one exclusive OR gate, provide the logic signal whose pulse width is proportional to the displayed level.

11.18 Number Jam Logic: The number jam logic provides the two preset numbers for the programmable down counters plus a simulta-

neously reset signal so that both counters start at the same time. The number jam logic consists of IC21, IC22, and IC12 on the 4301-102 (DIGITAL) board.

11.19 In level mode the outputs of two programmable down counters are compared by a set/reset flip-flop at IC23. The last counter to remain counting determines the sign of the display. The sign detector is located on the 4301-102 (DIGITAL) board.

11.20 Counter Gate: The counter gate uses the pulse width proportional to level from IC22 to gate in 100 kHz clock pulses while active. The counter gate is IC14 and counting is controlled by IC3 and IC13 for timing. The rounding off algorithm is implemented by IC4. This adds .05 dB to the counts, and truncates the .01 dB digit to achieve a valid .05 dB rounded off to the next highest tenth of a dB. The counter gate is located on the 4301-102 (DIGITAL) board.

11.21 Level meter Counter: The level meter counter receives gate signals from the counter gate circuit and provides a multiplexed complementary BCD output to the display. The counter is IC39 on the 4301-102 (DIGITAL) board.

E. Timer

11.22 The timer consists of circuitry to display time, stop at predetermined intervals, and enable impulse counts. The four elements of the timer are the timer, display, counter, the 5/15 minute timer, and the switching transient detector. When the START switch is released, IC24 is enabled and divides the 10 Hz clock by a factor of 6 to 1-2/3 Hz. The 1-2/3 Hz clock signal corresponds to .01 minute and appears simultaneously at the 5/15 minute timer and the time display counter. Unless otherwise noted, all timer components are located on the 4301-102 (DIGITAL) board.

11.23 Time Display Counter: The time display counter, IC49, receives the 1-2/3 Hz clock pulse, (.01 minute) and counts up to 99.99 minutes before rolling over. Since only

tenths of minutes are required to be displayed, the counter digit selects are shifted one place to the right, so that the hundredths digit is the least significant digit and is blanked by logic circuits in the left display.

11.24 5/15 Minute Timer: The 5/15 minute timer consists of four decade counters and logic gates to initiate a stop pulse when 5 minutes or 15 minutes is selected by the front panel controls. There is also provision to select continuous operation, which disables the stop pulse. The start pulse comes from IC35 and IC34. The 4-decade counters are IC45 and IC55, and the logic gates consist of IC65, IC54, IC16 and IC17.

F. Impulse Noise Counter

11.25 The impulse noise counter receives an input signal from the output of the notch filter on the I/O board. The impulse noise counter consists of the impulse noise amplifier, the threshold comparators, and three 4-digit counters.

11.26 Impulse Noise Amplifier: The impulse noise amplifier has a gain range from 0 dB (99 dBrn on thumbwheel) to 59 dB (40 dBrn on thumbwheel). This programmed gain is the 9's complement of the threshold shown on thumbwheel switch. The amplifier consists of two 0/20 dB amplifier stages (IC30, IC31, IC25), one 0/10 dB amplifier stage (IC24, IC25), and one 0 to 9 dB amplifier stage with 1 dB steps (IC24, IC25, IC29). All amplifier components are located on the 4301-302 (ANALOG) board.

11.27 Threshold Comparators: The output of the impulse noise amplifier is connected to six comparators (IC17, IC18) configured for three positive threshold levels and three negative threshold levels. The positive and negative threshold comparators corresponding to one limit (LOW, MID, or HIGH) are wire-OR'd together into a 143 millisecond nonretriggerable one-shot. The 143 millisecond period provides the 7/second maximum counting rate. The reset of the one-shots is controlled by the inhibit line and inhibits impulse counts as determined by the timer or the 1 kHz tone detector.

All threshold detector components are located on the 4301-320 (ANALOG) board.

11.28 4-Digit Impulse Counters: Three identical 4-digit counters accumulate the impulse counts detected by the threshold circuits, and are reset when the START switch is released. The counters operate in a continuous transfer mode, so that counts can be monitored while the test is in progress. The 4-digit counters are all located on the 4301-102 (DIGITAL) board, and are selected by the right display.

11.29 1 kHz Tone Detector: The 1 kHz tone detector receives the input signal on the I/O board, is filtered by a passive R-C bandpass filter and then amplified by IC18. At an input frequency of 1 kHz, the net gain to the output of R18 is 20 dB. The amplified signal is then fed to a limiter, IC18, on the analog board. The limiter has hysteresis and is biased in such a way that an input signal of less than -40 dBm does not activate it. The limiter output is then connected to the digital board, where IC53, IC54, IC43, IC33, IC34, and IC44 form a 1 kHz tone detector. Frequency counts from 960 Hz to 1030 Hz cause the TONE PRESENT indicator to turn on. If impulse noise-with-tone measurements are being made, loss of the holding tone inhibits the impulse noise counters for as long as the holding tone is lost. If there is no holding tone at the beginning of the impulse noise test, it is assumed that impulse noise-without-tone measurements are being made and the impulse noise test will be enabled until stopped by the 5/125 minute timer, or by the STOP switch.

11.30 Switching Transient Detector: The switching transient detector senses changes in the logic levels at the function switch and activates a 1/2 second one-shot. The one-shot inhibits the impulse noise counter when interfering instrument induced transients might be present. The detection of the transient is done with IC52, and IC43. The one-shot, IC35, controls IC6 to momentarily inhibit the impulse noise counter.

G. Frequency Counter

11.31 The frequency counter receives inputs from the autorange amplifier for receive frequency or from the generator board for send frequency. The frequency counter limiter is IC12 and part of IC18 on the analog board. IC12 is also used to double the input frequency for 1 Hz resolution measurements. For 10 Hz resolution the direct (not doubled) receive frequency directly feeds the counter. For send frequency measurement a signal that is 16 times the send frequency is received from the generator board. In the program and wideband modes, the generator board pre-scales by 10 so that the signal is 1.6 times the send frequency. For send frequencies the frequency counter uses an 80 Hz timebase instead of 50 Hz to scale the frequency correctly.

11.32 The frequency counter is a 4-digit LSI counter of the same type used for the level, time, and impulse displays, but has additional control logic. The frequency counter update rate is 1/second for 1 Hz resolution receive frequency measurements and 5/second for all other frequency measurements. The counter gate time is 500 ms for 1 Hz resolution receive frequency, 100 ms for 10 Hz resolution receive frequency, and 62.50 ms for all send frequency measurements. The frequency counter, IC26, is connected to the right display, and the control logic for timing is determined by IC41 and IC32. The frequency counter gate is IC52 and IC6. The half digit and overrange logic is IC19, IC20, IC30, and part of IC6. Selection of the correct update rate, signal input, and timebase is done at IC51 and IC61. All the above components are located on the 4301-102 (DIGITAL) board.

H. Displays

11.33 Left Display: The display receives the multiplexed complementary BCD from the level meter counter (IC39) or from the impulse noise timer (IC44). Selection of the desired signal is done with tri-state buffers (IC23, IC38, IC48, IC58). Leading zero blanking is detected by IC59 and IC18, and gated

into the LSI display driver (IC72) by IC69, which also inverts the BCD. IC68 controls the digit selects to the LSI display driver using a strobe signal from IC25. The purpose of the strobe signal is to insure valid data on both edges of the digit select received by the LSI display driver. The display consists of four 0.3" high-efficiency red LED's with a segment current of approximately 3 mA. The displays are D1, D2, D3, and D4. All display components are located on the 4301-102 (DIGITAL) board.

11.34 Right Display: The right display receives the multiplexed complementary BCD signals from the frequency counter or impulse noise counters as selected by the front panel function switch. The outputs from the individual counters are selected with tri-state buffers (IC27, IC28, IC37, IC38, IC47, IC48, IC57, IC58). Leading zero blanking is detected by IC29 and IC18, and gated into the LSI display driver (IC71) with IC67, which also inverts the BCD information. IC66 inputs the digit selects to the LSI display driver using a universal strobe signal from IC25. The purpose of the strobe signal is to insure valid data on both edges of the digit select received by the LSI display driver. The display consists of four 0.3" high-efficiency red LED's with a segment current of approximately 3 mA. The displays are D5, D6, D7, D8, and D9. All display components are located on the 4301-102 (DIGITAL) board.

I. Monitor

11.35 The monitor circuit uses an audio amplifier IC located on the interface board plus a speaker and volume control. The monitor input comes from the autorange amplifier in all level or noise measurement modes, and from the impulse noise amplifier in all impulse noise modes. The selection of input signal is done by IC3 on the ANALOG board. The monitor volume control has an off position which disconnects power to the monitor amplifier to conserve energy for battery operation.

J. Generator

11.36 Refer to Figure 14 for a detailed block diagram of the generator. All generator components are located on the 4301-202 (GENERATOR) board.

11.37 Crystal Oscillator: The crystal oscillator is an accurate and stable frequency source for the frequency counter timebase and the fixed frequencies selectable by the front panel GENERATOR switch. The oscillator frequency is 4 MHz, and is divided down to 1 MHz for the send timebase generator.

11.38 Divider Chain: The divider chain produces timing and clock signals required by the level meter, displays, and frequency counter. The divider chain uses IC7, IC17, IC15, and IC16.

11.39 Send Timebase Generator: The send timebase generator provides both timebase and clock input to the frequency counter for send frequency measurements. IC10 provides an 80 Hz timebase for the frequency counter gate since the send signal to the frequency counter is 16 times the output frequency in the VF band, and 1.6 times the output frequency for the program and wideband modes. The prescaling by 10 and mode switching is provided by IC23 and portions of IC17, IC18, and IC1.

11.40 Fixed Frequency Generator: The fixed frequency generator is a programmable divider with a total of six possible divide ratios. The three fixed frequency divide ratios are 620, 249, and 89 which provides 401.23, 1004.02, and 2808.99 Hz, respectively, at the output of the ordinate generator. The fixed frequency generator also provides divide ratios of 1, 5, and 25 for variable frequency operation, so that a single voltage controlled oscillator can be used for the three frequency bands. The fixed frequency generator uses IC3, IC12, IC1, and IC2.

11.41 Voltage Controlled Oscillator: The voltage controlled oscillator is an integrated circuit VCO with a discriminator stabilized loop to control frequency. The VCO signal

from IC4 is converted to a logic pulse at IC5. The mean value of the logic pulse is integrated (IC19) with a dc reference voltage determined by the front panel frequency control to produce the desired output frequency. The design range of the VCO is from 16 kHz to 2 MHz, which provides bands of 50 Hz to 8 kHz, 200 Hz to 25 kHz, or 1000 Hz to 125 kHz, depending on the divide ratio selected in the fixed frequency generator.


11.42 Ordinate Generator: The ordinate generator uses an 8-state shift register connected as a Johnson counter. The shift register (IC14) receives synchronization signals from IC13 and IC6 and input clock from the fixed frequency generator. The shift register outputs are summed together with a resistor weighting network (R45 to R52). The output of the weighting network is a 16 ordinate sine wave, which is fed to the tracking filter.

11.43 Tracking Filter: The tracking filter consists of a two-section voltage variable low pass filter with an amplitude stabilized control loop. Each section of the low pass filter uses an OTA (operation transconductance amplifier) as the tuned element with a selected capacitance determined by the frequency band. The filter output is amplified and rectified by IC25. Half of IC19 provides the control loop integrator and additional carrier frequency filtering. The output of IC19 controls the bias current of the OTA's via Q3. The stabilized amplitude is adjusted for a level 6 dB below the ordinate generator input. This effectively sets each low pass filter to the -3 dB point. The amplitude stabilized signal is low pass filtered by IC27 and fed to the level control circuitry on the interface board.

K. Power Supply

11.44 The power supply provides the regulated dc voltages required by the Model 43-01 and the battery charger if the battery option is installed.

11.45 The power transformer has a dual primary which is wired in parallel for 115 V ac or series for 220 V. The transformer has two secondary windings. The 30 V CT winding is

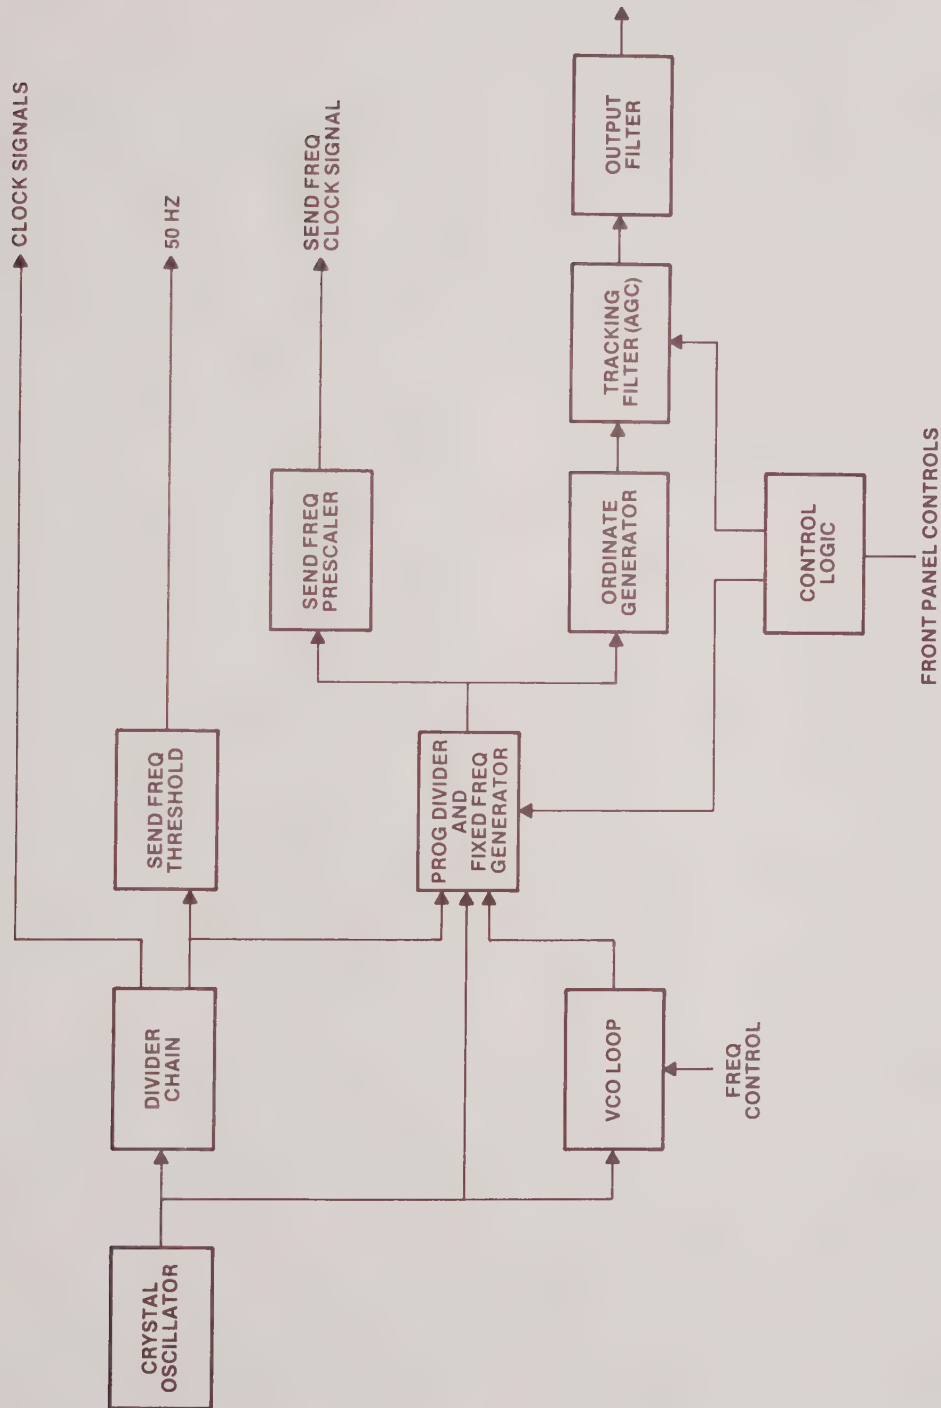

FRONT PANEL CONTROLS

Figure 14. Generator Block Diagram

for the ± 9 V supply and the two 9 V battery chargers, and the 10 V winding is for the 5 V supply and 5 V battery charger. The battery chargers are active whenever the unit is connected to the ac line. Battery charging can also be done simultaneously with ac operation. The battery charging current with the Model 43 off is nominally 120 mA, requiring 14-16 hours to charge a 1.2 AH battery pack for an estimated $4\frac{1}{2}$ hours of battery life per charge.

12. CIRCUIT LEVEL TROUBLESHOOTING

A. General

12.1 The following sections describe the general procedures to be used in locating malfunctions. Where appropriate, performance standards, voltage levels, or waveform descriptions are provided to assist in the troubleshooting procedure. Unless otherwise stated, all voltage and frequency tolerances are $\pm 10\%$ and all dB tolerances are ± 0.1 dB. When a circuit has the proper input signal, but the correct output cannot be measured, the components associated with that circuit should be checked and replaced if defective. Before detailed troubleshooting is undertaken, the power supply voltages should be checked. Low supply voltages may result from a malfunctioning power supply or excessive current being drawn by a defective circuit. A defective integrated circuit may often be located by feeling the case temperature. Normally, the integrated circuits are moderately warm to the touch. However, when defective, they can become extremely warm, causing a painful sensation when touched.

12.2 Accepted practices should be followed when repair is undertaken on mainframe components or the printed circuit boards. Recommended troubleshooting techniques are based on signal tracing methods where a known receive signal is used and the level and waveforms are verified as the signal progresses through the circuitry.

12.3 To gain access to the printed circuit board test and calibration points, refer to Section 14. Once the desired board is removed, insert the appropriate printed circuit extension board in the Model 43-01 slot.

B. Power Supply

12.4 The power supply provides outputs of $+0.9$ V dc ± 0.2 V at XA-5 Pin 15, -9.0 V dc ± 0.2 V at XA-5 Pin 12, and $+5.00$ V dc ± 0.25 V at XA-5 Pin 10. The range of dc voltage at the regulator inputs is:

$+18$ to $+23$ V dc at D2 cathode
 -18 to -23 V dc at D3 anode
 $+12$ to $+15$ V dc at D5 cathode

12.5 The power transformer secondary should be 10 V ac from Pin 2 to Pin 3 (floating measurement) of J1 and 30 V ac from Pin 7 to Pin 8 of J1. All components and measurement points are located on the 4301-501 (POWER SUPPLY) board.

12.6 The battery pack is made of three independent nickel-cadmium batteries. Each 9 V battery (two used) has eight cells with a cutoff voltage (fully discharged point) of 8.8 V dc. At full charge the battery voltage can be as high as 11.0 V dc. The 5 V battery has four cells with a cutoff voltage of 4.4 V dc. At full charge the battery voltage can be as high as 5.5 V dc.

C. Generator

12.7 The generator board contains all generator components, and generator outputs include not only the sine wave output, but all timing signals used by the Model 43. A generator failure could appear to be a failure of some other circuit simply due to a lack of timing signal.

12.8 Crystal Oscillator: The crystal oscillator is a CMOS unbuffered gate oscillator circuit with a 4 MHz 32 pf parallel load crystal. When operating correctly IC9 Pin 12 will have a 0 V to 9 V square wave at 4.000 MHz $\pm 0.005\%$.

12.9 Divider Chain: The divider chain has several stages. IC8 divides the 4 MHz by 4 to feed a 1 MHz clock to IC10 Pin 1, IC3 Pin 8, and IC7 Pin 2. IC7 is a dual $\div 10$ counter and provides a 100 kHz output for the level meter at Pin 6 and 10 kHz output for the multiplexed BCD on the digital board at Pin 14. IC15 and IC16 further divide the signal to provide 50 Hz, 10 Hz, 5 Hz, and 1 Hz clocks. The logic amplitude of all clock signals below 10 kHz is 5 V. IC8 and IC7 are run at $+9$ V and the 100 kHz and 10 kHz outputs are buffered and translated to 5 V logic by IC17.

12.10 Send Timebase Generator: IC10 receives the 1 MHz clock signal and divides down to 80 Hz at a 1 μ s pulse width. The 9 V logic output at IC10 Pin 23 is buffered and translated to 5 V logic by IC17.

12.11 Fixed Frequency Generator: The input to IC2 Pin 9 is 4 MHz for 2809 and 1004 Hz, 1 MHz for 403 Hz, and the VCO output for the variable frequency modes. For the wideband tuning range IC2 is bypassed by IC1 Pin 11, Pin 12, and Pin 13. The programmable divider output at IC12 Pin 9 will be the following:

GENERATOR switch	Frequency
WB (120)	VCO (IC4 Pin 4)
PROG	VCO $\div$ 5
VF	VCO $\div$ 25
403	6451.61 Hz
1004	16064.26 Hz
2809	44943.82 Hz

12.12 Voltage Controlled Oscillator: The VCO output (IC4 Pin 4) is divided by two at IC6 Pin 13. IC5 is configured as a precision one-shot to provide one $\frac{1}{4}$ μ s pulse for each positive edge of the signal at IC6 Pin 13. The output pulse at IC5 Pin 13 is a 6 V logic level. The integrator output (IC19 Pin 7) drives the VCO to the desired output frequency, which is the frequency at which the current in R1 is equal to the current in R2, less the offset adjustment current in R6.

12.13 Ordinate Generator: The ordinate generator input clock (Pin 9 of IC14) from the programmable divider is 16 times the desired output frequency and is a 9 V logic level. The ordinate generator stepped sine-wave output is observable at the negative side of C48 at a level of +4 dBm.

12.14 Tracking Filter: The ordinate generator level drops to -43 dBm at IC26 Pin 3. The tracking filter normally tunes for an output level of +4 dBm at IC25 Pin 1. If this output is 6 dB high, then a problem with the capacitors or the relays controlling the capacitors should first be checked. The current in R73 is a maximum of approximately 1 mA at maximum output frequency on any range, and ap-

proximately 16 μ A at lowest frequency on any range.

12.15 The signal at the anode of D3 is a half wave rectified sinewave. Full wave rectification is accomplished by summing the input signal through R66 with the half wave signal through R67 with twice the current. The output at IC19 Pin 1 is a negative dc voltage when the circuit is working correctly and should never be more negative than -6 V dc.

D. Interface

12.16 Output Circuit (I/O Board): An actual output level of 0 dBm into a 600 Ω load requires signal levels of +3.5 dBm at IC21 Pin 7 and IC21 Pin 1. The send level adjustments at IC21 Pin 1 are intended to trim the actual output level once the correct send level is established at IC22 Pin 6 (0 dBm for 0 dBm transmitted).

12.17 Input Circuit (I/O Board): The input circuit has unity gain to IC10 Pin 6 at a terminated 600 Ω impedance. Other impedances are normalized to 0.7746 V at 0 dBm at or before IC10. The high frequency response with 600 Ω impedance level is trimmed by C122 at 100 kHz for 0.1 dB maximum flatness error.

12.18 Hold Circuits: The hold circuits produce a holding current of 23 mA minimum at 46 V dc and a 40 mA maximum at 53 V dc, tested with a power supply which is current limited to 100 mA.

12.19 Dial/Talk Circuit: If the Model 43 is functioning normally except for the dial/talk function, then visually and electrically inspect the DIAL/TALK and 2W/4W switches.

E. Noise Filters

12.20 The following tables list nominal signal levels in dBm at various test points and were measured on a known good filter of the same type. A variation of more than 1 or 2 dB gives an indication of a defective component in that particular filter stage. The input level for all signals is -16 dBm. If the Model 43

under test has a known good generator and send circuit, then a loopback connection is satisfactory. Set the Model 43 to -16 dBm send level and set the function switch to SEND mode to monitor the test frequency. Since the output of the 15 kHz flat filter feeds the 3 kHz flat filter, the 15 kHz flat filter should be checked before the 3 kHz flat filter.

TABLE B. C-MSG FILTER CHECKS

FREQ. (Hz)	IC8-7 (dBm)	IC8-1 (dBm)	IC3-7 (dBm)	IC3-1 (dBm)
403	-17.9	-27.1	-26.9	-26.7
1004	-16.2	-17.9	-17.3	-16.1
2809	-16.0	-28.2	-21.5	-18.6

TABLE C. PROGRAM FILTER CHECKS

FREQ. (kHz)	IC11-7 (dBm)	IC11-1 (dBm)	IC6-1* (dBm)
0.4	-28.2	-28.3	-24.6
2	-14.9	-15.6	-11.4
10	-10.4	-26.8	-21.6

*Pin 7 on Rev B and later circuit boards

TABLE D. 50 kB FILTER (497 F) CHECKS

FREQ. (kHz)	IC19-7 (dBm)	IC19-1 (dBm)	IC15-7 (dBm)	IC15-1 (dBm)
0.050	-18.8	-18.8	-16.3	-18.7
1	-16.1	-16.0	-13.6	-16.0
45	-16.7	-25.0	-15.8	-27.5

TABLE E. 15 kHz FLAT FILTER CHECKS

FREQ. (kHz)	IC1-1 (dBm)
1	-16.0
15	-19.0
30	-18.3

TABLE F. 3 kHz FLAT FILTER CHECKS

FREQ. (kHz)	IC1-1 (dBm)
1	-16.0
3	-19.0
6	-28.3

12.21 To check the notch filter set the Model 43-01 filter switch to FLAT and the GENERATOR switch to PROG (20). The other noise filters should be checked first: Table G below lists the correct signal levels.

TABLE G. NOTCH FILTER CHECKS

FREQ. (Hz)	IC4-1 (dBm)
100	0.0 ± 0.3 dB
403	0.0 + 0.3, -1.5 dB
862	-1.5 ± 1.0 dB
995	-50 max
1025	-50 max
1182	-1.5 ± 1.0 dB
1700	-0.2 ± 0.3 dB

F. Level Meter

12.22 Due to the servo loop operation of the level meter, troubleshooting of the level meter circuitry requires that each section be isolated and checked independently. The proper sequence of tests should be followed.

12.23 Detector Test: The detector circuitry can be tested by inputting a known signal and monitoring the detector outputs. Proceed as follows:

- 1) Disconnect the positive ends of C33 and C41 on ANALOG board, and inject 1 V RMS sine wave at 1 kHz.
- 2) The detector output voltage at IC4 Pin 5 should be approximately 1 V dc in both level and noise modes. This dc output voltage should be flat over the frequency range of 30 Hz to 100 kHz.
- 3) Remove the signals and reconnect C33 and C41.

12.24 Counter Control Test: The two outputs of the counter control circuit are up/down control to Pin 10 of each of the counters, and clock pulses to Pin 15 of each of the counters (IC21, IC33, IC32, IC20). With a voltage of between .6 and .7 V dc, the VCO should stop. When the voltage at IC4 Pin 5 is changed to -6 mV, the counters should start counting up; when the voltage at IC4 Pin 5 is changed to +6 mV, the counters should start counting down. A 6 mV change causes the VCO frequency to be about 100 Hz.

The circuit can be tested as indicated below:

- 1) Connect a short clip lead across C40.
- 2) Connect variable dc power supply to IC4 Pin 5.
- 3) Connect a dc voltmeter to IC4 Pin 7.
- 4) Adjust the dc power supply for a reading of 0 V dc. The voltage at IC4 Pin 5 should be approximately 0.6 to 0.7 V dc.
- 5) The gain of IC4 is 11.0 so that +0.1 V change at IC4 Pin 5 should produce a +1.1 V change in the output. To be sure that IC37 does not interfere, start with some positive voltage at IC4 Pin 7, then add +0.1 V change to the input and look for a 1.1 V change in the output.
- 6) The VCO sensitivity is approximately 1.5 kHz per volt, so that +2 V dc at IC4 Pin 7 produces a clock frequency at IC2 Pin 1 of 3 kHz $\pm$ 20%.
- 7) The hysteresis level of the up/down comparator at IC2 Pin 5 should be $\pm$ 64 mV dc. When IC4 Pin 7 is at -1 V dc, IC2 Pin 5 should be positive.

12.25 Up/Down Counter Test: Test the up/down counter using the following procedure:

- 1) With the dc power supply at IC4 Pin 5, apply +1 V dc and observe that counter quickly counts down to all zeros. Examine all Q outputs of IC21, IC33, IC32, and IC20. The display should blank except for a plus (+) sign. Analog board Pin 18 should be +5 V dc $\pm$ 1 V and Pin 17 should be 0.0 V dc $\pm$ 0.1 V.

- 2) Ground IC4 Pin 5, or apply a voltage of +0.3 V dc or less and observe that counter quickly counts to 99.95 and stops. Examine the Q outputs of the counters for:

	PIN 2	PIN 14	PIN 11	PIN 6
IC21	+9 V	0 V	0 V	+9 V
IC33	+9 V	0 V	0 V	+9 V
IC32	+9 V	0 V	0 V	+9 V
IC20	+9 V	+9 V	+9 V	+9 V

- 3) By carefully adjusting the dc power supply, it is possible to stop at any desired reading and test the ac gain stages. Refer to Table H.
- 4) Remove the clip lead from C40.

G. Impulse Noise Counter

12.26 If the level and noise-with-tone measuring functions are operating correctly, proceed with the following tests.

12.27 Impulse Noise Amplifier (ANALOG Board): With an input signal of 403 Hz, check the gain from XA-3 Pin S (P2 Pin S on ANALOG Board) to IC24 Pin 1. Refer to Table I.

12.28 Threshold Comparators (ANALOG Board): The output of the impulse amplifier (IC24 Pin 1) is coupled through an RC filter network to IC17 Pin 4, 6, 9, and 11 and IC18 Pins 4 and 11. The nominal threshold voltages are:

	PIN 5	PIN 7	PIN 8	PIN 10
IC17	+5.483	+3.460	-3.460	-5.483
IC18	+2.175	—	—	-2.195

12.29 The outputs of the comparators connect to one-shots IC10, and IC11. The pulse width from each one-shot is 143 milliseconds, active low at IC10 Pins 6 and 10, and IC11 Pin 6.

TABLE H. LEVEL METER GAINS STAGES

DISPLAY LEVEL MODE	-10/+30 (I/O BOARD)	0/+20 IC27	0/+20 IC23	0/+10 IC16	1 dB STEPS IC14
+0.1 to +9.9	-10	0	0	0	0
+9.1 to +8.9	-10	0	0	0	1
+7.1 to +7.9	-10	0	0	0	2
+6.1 to +6.9	-10	0	0	0	3
+5.1 to +5.9	-10	0	0	0	4
+4.1 to +4.9	-10	0	0	0	5
+3.1 to +3.9	-10	0	0	0	6
+2.1 to +2.9	-10	0	0	0	7
+1.1 to +1.9	-10	0	0	0	8
+0.1 to +0.9	-10	0	0	0	9
-0.1 to -0.9	-10	0	0	10	0
-10.1 to -10.9	-10	20	0	0	0
-20.1 to -20.9	-10	20	0	10	0
-30.1 to -30.9	+30	0	0	0	0
-40.1 to -40.9	+30	0	0	10	0
-50.1 to -50.9	+30	20	0	0	0
-60.1 to -60.9	+30	20	0	10	0
-70.1 to -70.9	+30	20	20	0	0
-80.1 to -80.9	+30	20	20	10	0

12.30 4-Digit Impulse Counters (Digital Board): IC36, IC46, and IC56 are the 4-digit counters. For any suspected counter, establish continuous counts at the input (Pin 7) and check Pin 9 for 5 V 1000 Hz square wave and Pin 6 for a high logic level. Then observe the outputs to verify that counts are accumulating. Replace counter if defective.

12.31 Switching Transient Detector: IC35 Pin 11 is normally high, with a momentary low when each function switch position is selected. The output at IC35 Pin 10 is a positive pulse for ½ second whenever Pin 11 goes low. If the input at IC35 Pin 11 does not go low, then IC43, IC32, and IC52 should be checked. If the impulse test is in progress, the high level at IC6 Pin 11 should be interrupted by the ½ second interval when the function switch changes positions. If this condition is not obtained, check Pins 11, 12, and 13 of IC6. Verify that the level at IC44 Pin 4 is high when the timer is running. (If test was started with holding tone present and the holding tone is gone, then IC44 Pin 4 will stay low until the holding tone returns.)

TABLE I. IMPULSE NOISE GAIN

Threshold (dBrn)	Gain (dB)	Likely Failure If Negative Result
99	9	IC24
98	1	IC24, IC29
97	2	IC29
96	3	IC29
95	4	IC29
94	5	IC29
93	6	IC29
92	7	IC29
91	8	IC25
90	9	IC25
80	19	IC24, IC25
70	29	IC31, IC30
60	39	IC25
50	49	IC31, IC30
40	59	IC31

12.32 1 kHz Tone Detector: The level at IC18 (I/O Board) Pin 5 is 10 dB lower than the input signal level at a frequency of 1000 Hz. The overall gain from IC10 Pin 6 to IC18 Pin 5 is 20 dB at 1 kHz. With -16 dBm input at 1004 Hz, IC18 Pin 7 should be +4 dBm $\pm$ 1 dB. If this signal level is present, check the analog board. The limiter output (IC18 Pin 1, ANALOG Board) should be a +5, -9 V square wave at 1004 Hz. The square wave should stop when the input level is reduced to -40 dBm $\pm$ 2 dB.

12.33 All remaining circuitry, except for the LED and driver, is on the DIGITAL Board. If the 1004 Hz square wave is present at IC53 Pin 1, check XA-1 Pin 4 for a 5 V logic level. If Pin 4 is high, the green LED (TONE PRESENT) must be on. If not, check LED and driver transistor on the INTERFACE Board. If Pin 4 is low, check the following:

- 1) 4 Hz square wave at IC53 Pins 7 and 15.
- 2) 5 V logic level at IC53 Pin 2.
- 3) Presence of counter outputs at IC53 Pins 6, 12, and 13.
- 4) Logic pulse at 5 Hz rate at IC54 Pin 10 and high for approximately 44 ms. If no pulse is present, IC33 is probably defective.

12.34 Tone Interrupt LED: If the TONE INTERRUPT is the only nonfunctional indicator, check for 5 V logic level at XA-1 Pin 3 on the INTERFACE Board. The TONE INTERRUPT LED should be on if the function switch is in one of the impulse noise positions and the START switch is pressed without 1 kHz present. If the logic level at XA-1 Pin 3 is 5 V but the indicator is not on, check the indicator LED D1 and driver transistor Q1 on the interface board. If the logic level is low, check IC44 and IC33 on the digital board.

H. Timer

12.35 Troubleshoot the timer with an oscilloscope to check for logic levels on the digital board. A low level is 0 V dc and a high level is +5 V dc. IC34 Pin 12 should be high after power-up and low after the START button is released. If IC34 Pin 12 is low, the timer

should be running. Check for 1-2/3 Hz at IC24 Pin 1 and IC15 Pin 2. If absent, check for 10 Hz clock at IC24 Pin 14.

12.36 Time Display Counter: Check for the 1-2/3 Hz clock at IC49 Pin 7. Verify that Pin 6 is high, and the 1 kHz scan clock is present at Pin 9. If the preceding measurements are correct, observe the outputs at IC49. If IC49 outputs are changing but the display is not, check the outputs of the tri-state buffer (Pin 1 of IC38 and IC58 must be low). If the display fails to indicate, refer to left display troubleshooting information.

12.37 5/15 Minute Timer: With 1-2/3 Hz present at IC45 Pin 10 (timer running), check outputs of counter chain: IC45 Pin 14, period of 0.6 second; IC45 Pin 6, period of 6 seconds; IC55 Pin 11, period of 12 seconds; IC55 Pins 13 and 14, period of 60 seconds; IC55 Pin 3, period of 120 seconds. If the preceding are okay, then the individual gates of IC65 and Pins 3, 4, 5, and 6 of IC54 should be checked for correct logic function.

I. Frequency Counter

12.38 Verify that the level meter is functioning correctly. Apply an input signal of -16 dBm at 1 kHz and observe 0 dBm $\pm$ 1.5 dB signal at IC18 Pin 8 on the ANALOG Board. If this signal is present, IC12 Pin 3 should have a square wave at the same frequency, and IC12 Pin 10 should have narrow pulses at twice the input frequency. Both of these have a 5 V logic level.

12.39 The remaining circuitry for the frequency counter is on the DIGITAL Board which has 5 V logic unless otherwise noted. The frequency counter gate input is IC52 Pin 13. IC51 and IC61 select the desired counter input. The counter gate control signal is at IC52 Pin 12. A gated burst can be viewed at IC26 Pin 7; check IC6 and IC52. Set GENERATOR switch to WB and check counter IC26 for the following inputs:

- 1) Pin 9, 1000 Hz square wave
- 2) Pin 5, 5 Hz pulse rate, low for 20 milliseconds
- 3) Pin 6, 5 Hz pulse rate, low for 20 milliseconds

12.40 The outputs of IC26 should be indicating the correct frequency in multiplexed complementary BCD format.

J. Displays

12.41 Left Display: Check for 1-2-4-8 multiplexed BCD data at IC69 Pins 4, 10, 11, and 3. Use an oscilloscope with an external trigger connected to IC68 Pin 8. The BCD data observed should match the display. If not, check IC72 for the correct outputs. With a common anode display IC72 outputs are active low to light an individual LED segment. If the BCD data at IC69 outputs does not correspond to the desired counter output, check the tri-state buffers. Verify that buffers from the other counter are not active.

12.42 The leading zero blanking is detected by IC59. For each scan of the multiplexed BCD, the most significant digit initiates the blanking with a clock pulse to IC18. IC59 detects the presence of nonzero information and resets IC18. The correct input from IC69 to IC72 for blanking is all 5 V logic levels.

12.43 Right Display: Check for 1-2-4-8 multiplexed BCD data at IC67 Pin 3, 4, 10, and 11. Use an oscilloscope with an external trigger connected to IC66 Pin 8. The BCD data observed should match the display. If not, check IC71 for the correct outputs. With a common anode display IC71 outputs are active low to light an individual LED segment. If the BCD data at IC67 outputs does not correspond to the desired counter output, check the tri-state buffer (active low). Verify that buffers for the other counters are not active.

12.44 The leading zero blanking is detected by IC29. For each scan of the multiplexed BCD, the most significant digit initiates the blanking with a clockpulse to IC18. IC29 detects the presence of nonzero information and resets IC18. The correct input from IC67 to IC71 for blanking is all 5 V logic levels.

K. Monitor

12.45 Check for presence of input signal (0 to -6 dBm in LEVEL mode) at the monitor input XA-3 Pin Y on the interface board. If input signal is present, check for speaker continuity from Pin 3 to Pin 4 on the INTERFACE Board (cable harness connections) with an ohmmeter. If continuity exists and a small click is heard in the speaker, replace IC1.

13. CALIBRATION

A. General

13.1 The following procedures are used to recalibrate the Model 43. Recalibration is normally required when maintenance has been performed on associated circuitry or when there is reason to suspect that calibration is no longer accurate.

B. 6 V Reference (ANALOG Board):

- 1) Connect DMM common lead to XA-3 Pin W and "hot" lead to IC26 Pin 7.
- 2) Adjust R45 (near IC26) for a reading of $-6.000\text{ V dc} \pm 0.001\text{ V dc}$ on the DMM.

C. Send Level Adjustment (I/O Board)

- 1) Set GENERATOR to 1004 Hz.
- 2) Connect ac voltmeter common lead to chassis and "hot" lead to IC22 Pin 6.
- 3) Adjust variable level for a reading of $0.00\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.
- 4) Remove the test leads.
- 5) Connect a precision ($\pm 0.1\%$) 600 Ω termination to the Model 43 output (do not use a loopback connection).
- 6) Connect the ac voltmeter across the send output terminals.
- 7) Adjust R114 (I/O Board) for a reading of $0.00\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.
- 8) Switch Model 43 to 900 Ω , and connect a precision ($\pm 0.1\%$) 900 Ω termination.
- 9) Adjust R115 (I/O Board) for a reading of $+1.75\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.
- 10) Switch Model 43 to 135 Ω , and connect a precision ($\pm 0.1\%$) 135 Ω termination.
- 11) Adjust R111 for a reading of $-6.50\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.

D. Generator Fixed Level (GENERATOR Board)

- 1) Connect the precision (0.1%) 600 Ω termination to the Model 43 output.

- 2) Switch the Model 43 to 600 Ω operation.
- 3) Set the LEVEL switch for fixed -16 dBm .
- 4) Adjust R69 on the generator board for a reading of $-16.00\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.

E. Low Frequency Limit (GENERATOR Board)

- 1) Set the Model 43 function switch to SEND mode and the GENERATOR switch to VF (4).
- 2) Set the variable frequency control fully counterclockwise.
- 3) Verify that the Model 43 frequency display indicates a frequency from 30 to 40 Hz. If outside this range, adjust R59 to 35 Hz $\pm 2\text{ Hz}$.

F. High Frequency Response (I/O Board)

- 1) Set the send frequency to 4 kHz $\pm 10\text{ Hz}$ on the VF (4) kHz range.
- 2) Connect the Model 43 in a loopback, 600 Ω terminated configuration.
- 3) Connect the ac voltmeter to the receive terminals.
- 4) Adjust the send level for a reading of $0.00\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.
- 5) Move the ac voltmeter common lead to the chassis, and the "hot" lead to IC10 Pin 6.
- 6) Verify a reading of $0.00\text{ dBm} \pm 0.05\text{ dB}$ on the ac voltmeter.
- 7) Reconnect the ac voltmeter to the receive terminals and switch the GENERATOR control to the WB (120) range.
- 8) Adjust the send frequency to 100 kHz $\pm 2\text{ kHz}$.
- 9) Note the ac voltmeter reading, then move the ac voltmeter to IC10 Pin 6.
- 10) Adjust C122 for the same reading on the ac voltmeter $\pm 0.05\text{ dB}$.

G. Receive Level Calibration (ANALOG Board)

- 1) Set up the Model 43 to measure receive level with a loopback 600 Ω terminated configuration with a fixed 1004 Hz output frequency.
- 2) Connect a DMM to the receive terminals.
- 3) Adjust the output level control for a reading of 0.7737 V ac to 0.7755 V ac (0.7746 V ac nominal) on the DMM.
- 4) Carefully disconnect the DMM and reconnect common lead to chassis and "hot" lead to IC2 Pin 6.
- 5) Set the DMM to the most sensitive dc voltage range.
- 6) Carefully adjust R113 for a reading of less than ± 0.010 V dc on the DMM. The Model 43 should indicate a received level of 0.0 dBm.

- 4) Adjust R30 and R159 for null.
- 5) Remove jumper from C30 and C31 and connect from colored end of C28 to uncolored end of C29.
- 6) Adjust R36 and R160 for null.
- 7) Remove jumper from C33 and C34 and connect from colored end of C30 and uncolored end of C31.
- 8) Adjust R43 and R161 for null.
- 9) Remove both jumpers.

H. C-MSG Filter Adjustment (I/O Board)

- 1) Set up the Model 43 to measure NOISE (WO/T)-WGTD with a 600 Ω terminated loopback configuration.
- 2) Adjust the output to 1 kHz at a level of 0.0 dBm (0.7737 V ac on DMM).
- 3) Connect the ac voltmeter common to chassis and "hot" lead to IC14 Pin 7.
- 4) Adjust R14 for a reading of 0.0 dBm ± 0.1 dB on the ac voltmeter.

I. Notch Filter Alignment (I/O Board)

13.2 An ac voltmeter may be used at XA4 Pin 21 for null adjustments, but the Model 43 level display will be acceptable. When monitoring at XA4 Pin 21, connect the ac voltmeter common to XA4 Pin 22, and remember that at filter output levels below -30.0 dBm the gain to that point is 30 dB.

- 1) Set up the Model 43 in a 600 Ω terminated loopback configuration with a received level of 0.0 dBm ± 0.2 dB at 1010 Hz (VF band).
- 2) Set the function switch to NOISE (W/T) and the filter switch to FLAT.
- 3) Connect short jumper from colored end of C30 to uncolored end of C31.

14. BOARD INSTALLATION/ REMOVAL

14.01 This section describes the procedures for installation/removal of individual boards in the Model 43-01. Only the boards and assemblies described below are normally field serviced.

14.02 As shown in Figure 15, the Model 43-01 contains the following boards:

- Digital
- Generator
- Analog
- Input/Output (I/O)
- Power Supply

DANGER: Hazardous voltages exist inside this instrument. Disconnect power cord from unit before proceeding.

14.03 To remove and install individual boards in the Model 43-01, proceed as follows:

- 1) Remove the screws from the side and bottom of the Model 43-01. Refer to Figure 16.
- 2) Pull the case off the unit.
- 3) Disconnect the two Molex connectors from the Power Supply board. (Only if power supply board is to be removed).

WARNING: The Generator board must be removed before the Digital board can be removed.

- 4) Remove the Digital, Generator and Power Supply boards by pulling the boards from the rear of the unit.

WARNING: To avoid damaging the Analog and Input/Output boards, they must be removed together.

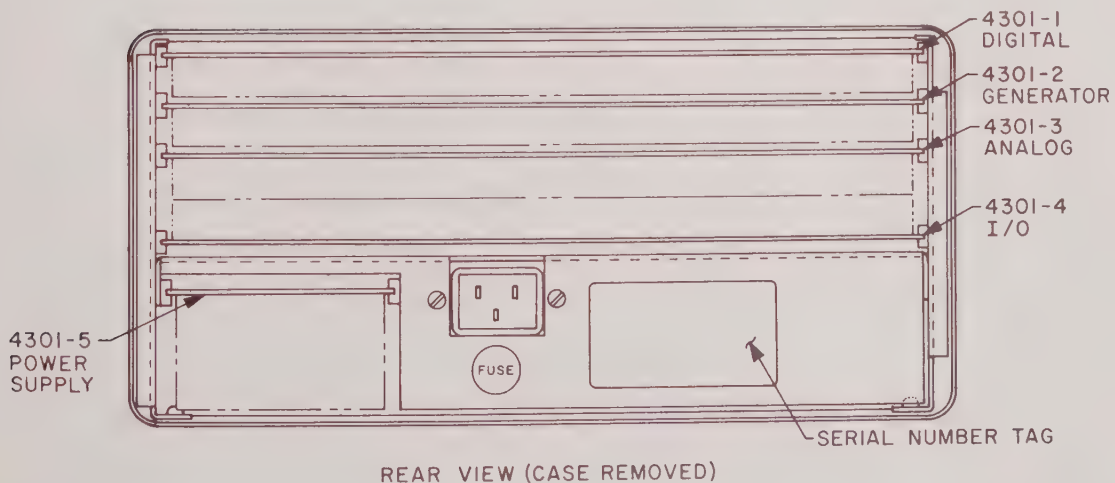


Figure 15. Model 43-01 PC Board Identification

- 5) Pull the Analog board toward the rear approximately $\frac{1}{4}$ inch.
- 6) Pull the Input/Output board toward the rear approximately $\frac{1}{4}$ inch.
- 7) Grasp both the Analog and Input/Output boards, and pull rearward until they both clear the unit.
- 8) To install the boards, reverse the removal procedure, and gently slide them into the Model 43-01 together until they are firmly seated in the edge connector.
- 9) Replace the Model 43-01 case.

14.04 For repair or servicing by HLI, refer to Section 15.

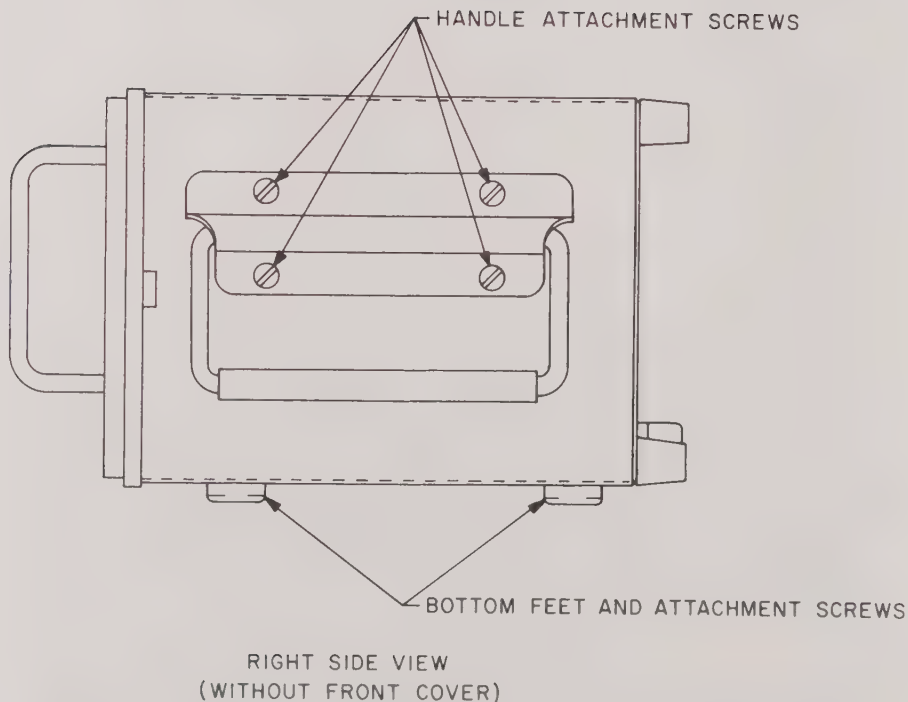


Figure 16. Assembly/Disassembly Screw Locations

15. PACKING, SHIPPING, AND RETURN TO FACTORY

15.01 This section contains procedures to be followed when returning the Model 43-01, or individual boards to the factory for repair or servicing.

Note: Most problems with the Model 43-01 can be isolated to the individual board level because of functional organization. It is recommended, therefore, that the factory be consulted by telephone or letter before shipping the unit.

A. Complete Unit

15.02 The original packing materials and shipping container for the Model 43-01 should be stored for use when shipment, between customer locations or return to factory, becomes necessary.

15.03 If the unit is being returned to HLI for repair or servicing, enclose the following information:

- Type of repair or service required
- Model number and serial number
- Return address
- Listing of symptoms if repair is required
- Name and telephone number of person to contact concerning the repair or service

Keep a copy of all information for yourself and refer to your copy in any correspondence with the factory.

15.04 If original packing materials and shipping container are unavailable, repack the unit as follows:

- 1) Wrap the unit in heavy paper or plastic. Tape loose edges.
- 2) Surround the wrapped unit in 2 to 4 inches (5 to 10 cm.) thick shock-absorbing material.
- 3) Place the package in a strong, double-walled shipping container. Fill excess spaces with newspaper.

- 4) Seal the container securely.
- 5) Mark the container: **FRAGILE - DELICATE ELECTRONIC INSTRUMENT.**

B. Boards

15.05 To remove boards from Model 43-01, refer to Section 14.

C. Individual Boards

15.06 When a board has been extracted from the Model 43-01, handle the board by the top and bottom edges of the board only. DO NOT handle the rear edge connector. Static electricity may damage the CMOS IC's on the board(s).

15.07 If the board is being returned to HLI for servicing or repair, enclose the following information:

- Type of service or repair required
- Model and serial number of the Model 43-01 from which the board was extracted
- Serial number of the board
- Return address
- Listing of symptoms if repair is required
- Name and telephone number of person to contact concerning the repair or service

Retain a copy of all information for yourself and refer to your copy in any correspondence with HLI.

15.08 Boards shipped separately from the factory are enclosed in a special conductive envelope that protects the circuitry from static electricity. This protective envelope should be retained and used for reshipment. If the conductive envelope is not available, DO NOT wrap the board in an ordinary plastic bag or plastic sheeting. Instead, proceed as follows:

- 1) If available, cover the entire rear edge connector with a conductive shorting bar.

- 2) Wrap the board in heavy kraft paper.
- 3) Surround the wrapped unit in 2 to 4 inches (5 to 10 cm.) thick shock-absorbing material.
- 4) Place the package in a strong, double-walled shipping container. Fill excess spaces with newspapers.
- 5) Seal the container securely.
- 6) Mark the container: FRAGILE - DELICATE ELECTRONIC INSTRUMENT

16. PARTS LIST

16.01 This section contains the parts list for the Model 43-01 mainframe and assemblies as listed in Table J.

TABLE J. PARTS LIST FOR MODEL 43-01 ASSEMBLIES

ASSEMBLY NUMBER	DESCRIPTION	PAGE NUMBER
D4301-0	Mainframe	53
D4301-0-0	Case Assy	54
D4301-0-1	Front Cover Assy	54
D4301-0-2	Chassis Assy	54
D4301-0-2-0	Center Deck/Card Guide Assy	55
D4301-0-2-1	Interface PC Bd Assy	57
D4301-0-2-2	Front Panel Assy	57
D4301-1	Digital PC Bd Assy	58
D4301-2	Generator PC Bd Assy	61
D4301-3	Analog PC Bd Assy	64
D4301-4	Input/Output Assy	69
D4301-4-0	Shielded Capacitor Assy	NA
D4301-4-1	Input/Output PC Bd Assy (400 Bd)	70
D4301-5	Power Supply PC Bd Assy	76

****PARTS LIST BY ASSEMBLY****

ASSEMBLY NO: D4301-0
DESCRIPTION: MAINFRAME

REF	DES./QTY	:	STOCK NO.	:	DESCRIPTION
SUB	:		D4301-0-0	:	CASE ASSY
SUB	:		D4301-0-1	:	FRONT COVER ASSY
SUB	:		D4301-0-2	:	CHASSIS ASSY

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-0

DESCRIPTION: CASE ASSY

REF DES./QTY	:	STOCK NO.	:	DESCRIPTION
1	:	19M00010	:	CONN POWER CORD
8	:	23E00002	:	RUBBER FEET
4	:	23E00009	:	BUMPER FEET
8	:	24A06006A	:	SCREW 6-32 X 3/8 BH-SL-SNP
4	:	24A06008A	:	SCREW 6-32 X 1/2 BH-SL-SNP
8	:	24A06104	:	WASHER EXT TOOTH #6
8	:	24A06203	:	NUT HEX 6 - 32 X 1/4 SNP
4	:	24A08004A	:	SCREW 8-32 X 1/4 BH-SL-SNP
1	:	F3701-0-016	:	B HANDLE MODIFIED
1	:	F4301-0-010B	:	D CASE

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-1

DESCRIPTION: FRONT COVER ASSY

REF DES./QTY	:	STOCK NO.	:	DESCRIPTION
2	:	23B00002	:	FASTENER
2	:	23B00003	:	FASTNER
2	:	23B00013	:	LATCH
4	:	24A04102	:	WASHER FLAT #4 SCP
12	:	24B00003	:	RIVET TRUSS HD 1/8 DIA X 3/16 LG BLK
1	:	F4301-0-110E	:	D COVER VACUUM FORMED
1	:	F4301-0-114C	:	B SWITCH OFF BRKT
2	:	F4301-0-116	:	B BRACKET INNER COVER
1	:	F4301-0-117	:	B INNER COVER

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-2

DESCRIPTION: CHASSIS ASSY

REF DES./QTY	:	STOCK NO.	:	DESCRIPTION
4	:	23A00030	:	STANDOFF 3/8 OD X 3/16 8-32 AL
2	:	23C00006	:	KNOB 1/4 BLACK
3	:	23C00007	:	KNOB 1/4 BLACK
8	:	23Z00026	:	CARD GUIDE
8	:	24A04004A	:	SCREW 4-40 X 1/4 BH-SL-SNP
4	:	24A04005A	:	SCREW 4-40 X 5/16 BH-SL-SNP
4	:	24A04104	:	WASHER EXT TOOTH #4
4	:	24A04204	:	NUT HEX 4 - 40 SNP
4	:	24A06004A	:	SCREW 6-32 X 1/4 BH-SL-SNP
4	:	24A06104	:	WASHER EXT TOOTH #6
4	:	24A06301	:	PEM NUT PL-632
4	:	24A08004A	:	SCREW 8-32 X 1/4 BH-SL-SNP
4	:	24A08101	:	WASHER EXT TOOTH #3
4	:	24A08102	:	WASHER FLAT #3
1	:	F4301-0-2-013	:	B PADDING BATTERY PACK
1	:	F4301-0-2-213	:	B SWITCH STOP (OPTIONAL NO BATTERY)
1	:	F4301-0-210A	:	C CARD GUIDE PLATE, LEFT SIDE
1	:	F4301-0-211A	:	C CARD GUIDE PLATE, RIGHT SIDE

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-2-0
 DESCRIPTION: CENTER DECK ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
DT1	1	F4301-0-2-015	C BATTERY PACK SPEC CTRL DWG
C13	2	01A11000A1	CAP CER .01UF GMV 1.6KV
C14	2	01A11000A1	CAP CER .01UF GMV 1.6KV
F1	1	26A00003	FUSE 1/2 AMP SB
T1	1	16B00042	TRANSFORMER POWER
	13	19E00007	CONN MOLEX TERMINAL CRIMP GOLD-PLATED
	2	19E00012	CONN MOLEX 9 CONTACT
	2	19G00003	CONN KEY FLAT CAP
	1	19M00001	CONN POWER 3 CONTACT
	1	19M00014	CONN POWER 3 CONTACT
	2	23A00004	SPACER SPLIT ROLLED 4 X 9/16
	2	23A00092	STANDOFF 3/16 OD X 5/8 4-40 AL
	2	23A00093	STANDOFF 3/16 OD X 3/4 4-40 AL
	4	23A00093	STANDOFF SELF-CLINCHING 1/2 6-32
	2	23B00017	GROMMET
	1	23B00050	HOLDER FUSE
	2	25Z00023	CARD GUIDE 3"
	4	24A04004A	SCREW 4-40 X 1/4 BH-SL-SNP
	5	24A04004C1	SCREW 4-40 X 1/4 UNDER-CUT FH-SL-SNP
	2	24A04016A	SCREW 4-40 X 1 BH-SL-SNP
	4	24A04102	WASHER FLAT #4 SCP
	2	24A04104	WASHER EXT TOOTH #4
	3	24A04204	NUT HEX 4 - 40 SNP
	4	24A04306	PEM NUT S440-0
	4	24A06006A	SCREW 6-32 X 3/8 BH-SL-SNP
	1	24C00004	LUG SOLDER 1411-4
	4	24Z00033	SHEET METAL SCREW #4 X 1/4 PAN HEAD
	10	29E00002	WIRE AWG #24 STRANDED 3000V RED
	10	29F00012	WIRE AWG #24 STRANDED 1000V BLACK
	2	29H00016	TUBING HEAT SHRINK 1/8 BLACK
	2	F3700-038	B FOAM TAPE
	1	F4301-0-2-011A	B RECEPTACLE GUIDE
	1	F4301-0-2-012E	D CENTER DECK
	1	F4301-0-2-014A	C BRACKET BATTERY PACK
	1	F4301-0-2-017B	C TRANSFORMER CASE
	1	F4301-0-2-018A	B TRANSFORMER COVER
	2	F4301-0-2-021	B THREADED STUD 1-1/2 L 4-40

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-2-1

DESCRIPTION: INTERFACE PC BD ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
C1	:	01F22200E	: CAP POLYESTER .22UF 10% 100V
C2	:	01F22200E	: CAP POLYESTER .22UF 10% 100V
C3	:	01H52200	: CAP AL ELEC 220UF -10 +50% 16V
C4	:	01H52200	: CAP AL ELEC 220UF -10 +50% 16V
C5	:	01H42200L	: CAP AL ELEC 22UF 20% 16V
C6	:	01A14700	: CAP CER .047UF 20% 50V
C7	:	01F21000E	: CAP POLYEST 0.1UF 10% 250V
C8	:	01H51000A2	: CAP AL ELEC 100UF 20% 16V
C9	:	01H51000A2	: CAP AL ELEC 100UF 20% 16V
C10	:	01H51000A2	: CAP AL ELEC 100UF 20% 16V
C11	:	01H51000A2	: CAP AL ELEC 100UF 20% 16V
D1	:	11A00001	: DISPLAY LED FLV150 RED
D2	:	11A00002	: DISPLAY LED FLV350 GREEN
IC1	:	09700386	: IC 386
J1	:	19D00012	: CONN PHONE 3 CONTACT PC MT NO THREAD
J2	:	19D00012	: CONN PHONE 3 CONTACT PC MT NO THREAD
J3	:	19D00012	: CONN PHONE 3 CONTACT PC MT NO THREAD
L51	:	17A00003	: SPEAKER 8 OHM 1W
Q1	:	05C04401	: TRANSISTOR NPN 2N4401
Q2	:	05C04401	: TRANSISTOR NPN 2N4401
R1	:	13C11000A3	: RES CARBON 10K 20% .5W 1 TURN
R2	:	13R12000A3	: RES WIREWOUND 20K 5% 2W 10 TURN
R3	:	13B12000A2	: RES CARBON 20K 30% .5W 10 TURN
R4	:	12BD3300	: RES CARBON 330 OHM 5% 1/4W
R5	:	12B12200	: RES CARBON 22K 5% 1/4W
R6	:	12BD3300	: RES CARBON 330 OHM 5% 1/4W
R7	:	12B12200	: RES CARBON 22K 5% 1/4W
R8	:	12FD1620	: RES METAL FILM 162 OHM 1% 1/4W
R9	:	12FD9090	: RES METAL FILM 909 OHM 1% 1/4W
R10	:	12F01780	: RES METAL FILM 1.78K 1% 1/4W
R11	:	12F01150	: RES METAL FILM 1.15K 1% 1/4W
R13	:	12B02000	: RES CARBON 2K 5% 1/4W
R14	:	12D03300	: RES CARBON 330 OHM 5% 1W
R15	:	12F11070	: RES METAL FILM 10.7K 1% 1/4W
R16	:	12F03010	: RES METAL FILM 3.01K 1% 1/4W
R17	:	12FD4990	: RES METAL FILM 499 OHM 1% 1/4W
R18	:	12BD2700	: RES CARBON 2.7 OHM 5% 1/4W
R19	:	12BC1000	: RES CARBON 10 OHM 5% 1/4W
R20	:	12CB2700	: RES CARBON 2.7 OHM 5% 1/2W
R21	:	12CC1000	: RES CARBON 10 OHM 5% 1/2W
R22	:	12CB2700	: RES CARBON 2.7 OHM 5% 1/2W
R23	:	12CC1000	: RES CARBON 10 OHM 5% 1/2W
R24	:	12CB2700	: RES CARBON 2.7 OHM 5% 1/2W
R25	:	12CC1000	: RES CARBON 1.0 OHM 5% 1/2W
S1	:	21E00028	: SWITCH TOGGLE 4PDT CENTER OFF
S2	:	21E00029	: SWITCH TOGGLE 2 POLE 2 THROW CTR OFF
S3	:	21E00036	: SWITCH TOGGLE 2 POLE 2 THROW MOMENT
S4	:	F4301-0-2-110A	: B THUMBWHEEL SWITCH
S5	:	F4301-0-2-114	: B ROTARY SWITCH 7 POS SPEC CTRL DWG
S6	:	21E00023	: SWITCH TOGGLE DPDT
S7	:	F4301-0-2-113	: B ROTARY SWITCH 6 POS SPEC CTRL DWG
S8	:	21E00023	: SWITCH TOGGLE DPDT
S9	:	21E00028	: SWITCH TOGGLE 4PDT CENTER OFF
S10	:	21E00027	: SWITCH TOGGLE 4PDT
S11	:	21E00027	: SWITCH TOGGLE 4PDT
S12	:	21E00027	: SWITCH TOGGLE 4PDT
S13	:	21E00027	: SWITCH TOGGLE 4PDT
S14	:	21E00024	: SWITCH TOGGLE 2 POLE 2 THROW CTR OFF
TR1	:	26D00001	: COMMUNICATIONS GAP
TR2	:	26D00001	: COMMUNICATIONS GAP
TR3	:	26D00001	: COMMUNICATIONS GAP
TR4	:	26D00001	: COMMUNICATIONS GAP

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-2-1

DESCRIPTION: INTERFACE PC BD ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
3	:	19F00018	: CONN EDGE 22 POSITION DUAL CONTACT
2	:	19F00019	: CONN EDGE 15 POSITION DUAL CONTACT
2	:	20D00001	: SOCKET LED
1	:	23E00011	: BUTTON BUMP. .50 DIA .31 THK.06 GROOVE
2	:	24A01016G	: SCREW 1-64 X 1 RH-SL-SNP
2	:	24A01101	: WASHER SPLIT #1
2	:	24A01102	: WASHER FLAT #1
2	:	24A01201	: NUT HEX 1-64
2	:	24A04004A	: SCREW 4-40 X 1/4 BH-SL-SNP
2	:	24A04005A	: SCREW 4-40 X 5/16 BH-SL-SNP
2	:	24A04104	: WASHER EXT TOOTH #4
2	:	24A04106	: WASHER INT TOOTH #4
2	:	24A04204	: NUT HEX 4 - 40 SNP
8	:	24A04303	: PEM NUT KFS2-440
1	:	24A06005F	: SCREW 8/32 X 5/16 FIL HD NYLON
1	:	24Z00048	: WASHER FLAT .875 OD .257 ID X .031 NYL
1	:	F4301-0-2-102C	: C PC D&T INTERFACE BD
1	:	F4301-0-2-111	: B BRACKET THUMBWHEEL SWITCH & LEDS
1	:	F4301-0-2-112A	: B BRACKET GEN CTRL POTS
1	:	F4301-0-2-115	: B SPEAKER MOUNT
1	:	F4301-0-2-116A	: B SPEAKER CONE

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-0-2-2

DESCRIPTION: FRONT PANEL ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
1	:	19C00007	: CONN BINDING POST METAL
4	:	19C00008	: CONN BINDING POST BLACK
2	:	23A00007	: SPACER 3/16 X 1 4-40
4	:	23A00078	: SPACER HEX 1/4 X 1 8-32
4	:	23A00079	: SPACER 1/4 X 3/4 6-32
2	:	23L00003	: HANDLE RD BLACK
2	:	24A04005A2	: SCREW 4-40 X 5/16 NYLOK BH-SL-B00
4	:	24A04101	: WASHER FLAT #6 SNP
2	:	24C00007	: LUG SOLDER 1416-8
1	:	F4301-0-2-211D	: C FRONT PANEL
1	:	F4301-0-2-212B	: C FRAME FRONT PANEL

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-1

DESCRIPTION: DIGITAL PC BD ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
C1	:	01H42200L	: CAP AL ELEC 22UF 20% 16V
C2	:	01H42200L	: CAP AL ELEC 22UF 20% 16V
C3	:	01H42200L	: CAP AL ELEC 22UF 20% 16V
C4	:	01A11000	: CAP CER .01UF 20% 50V
C5	:	01A11000	: CAP CER .01UF 20% 50V
C6	:	01A11000	: CAP CER .01UF 20% 50V
C7	:	01A11000	: CAP CER .01UF 20% 50V
C8	:	01A11000	: CAP CER .01UF 20% 50V
C9	:	01B00100C1	: CAP MICA 100PF 5% 500V
C10	:	01B00015C	: CAP MICA 15PF 5% 500V
C11	:	01B00015C	: CAP MICA 15PF 5% 500V
C12	:	01A11000	: CAP CER .01UF 20% 50V
C13	:	01A11000	: CAP CER .01UF 20% 50V
C14	:	01B00220C	: CAP MICA 220PF 5% 500V
C15	:	01A11000	: CAP CER .01UF 20% 50V
C16	:	01A11000	: CAP CER .01UF 20% 50V
C17	:	01B00220C	: CAP MICA 220PF 5% 500V
C18	:	01H32200L	: CAP AL ELEC 2.2UF 20% 50V
C19	:	01B00033C	: CAP MICA 33PF 5% 500V
C20	:	01A11000	: CAP CER .01UF 20% 50V
C21	:	01A11000	: CAP CER .01UF 20% 50V
C22	:	01A11000	: CAP CER .01UF 20% 50V
C23	:	01A11000	: CAP CER .01UF 20% 50V
C24	:	01A11000	: CAP CER .01UF 20% 50V
C25	:	01A11000	: CAP CER .01UF 20% 50V
C26	:	01H42200L	: CAP AL ELEC 22UF 20% 16V
C27	:	01F24700E	: CAP POLYEST .47UF 10% 100V
D1	:	11C00003	: DISPLAY LED
D2	:	11B00004	: DISPLAY LED
D3	:	11B00004	: DISPLAY LED
D4	:	11B00004	: DISPLAY LED
D5	:	11C00003	: DISPLAY LED
D6	:	11B00004	: DISPLAY LED
D7	:	11B00004	: DISPLAY LED
D8	:	11B00004	: DISPLAY LED
D9	:	11B00004	: DISPLAY LED
D10	:	03A03064	: DIODE SIGNAL 1N3064 75V
D11	:	03A03064	: DIODE SIGNAL 1N3064 75V
IC1	:	07G04057	: IC CMOS 4059A
IC2	:	07G04042	: IC CMOS 4042B
IC3	:	07G04017	: IC CMOS 4017B
IC4	:	07G04510	: IC CMOS 4510B
IC6	:	07G04001A	: IC CMOS 4001B QUAD 2-INPUT NOR
IC7	:	07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC8	:	07G04001A	: IC CMOS 4001B QUAD 2-INPUT NOR
IC9	:	07G04050	: IC CMOS 4050B
IC12	:	07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC13	:	07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC14	:	07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC15	:	07G04067	: IC CMOS 4067UB
IC16	:	07G04067	: IC CMOS 4067UB
IC17	:	07G04053A	: IC CMOS 4053B TRIPLE 2 CH ANLG MPX/DMP
IC18	:	07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC19	:	07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC20	:	07G04042	: IC CMOS 4042B
IC21	:	07G04001A	: IC CMOS 4001B QUAD 2-INPUT NOR
IC22	:	07G04070	: IC CMOS 4070B
IC23	:	07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC24	:	07G04018A	: IC CMOS 4018B DIVIDE BY N SYNC COUNTER
IC25	:	07G04017	: IC CMOS 4017B
IC26	:	07K05007	: IC PMOS 5007

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-1
 DESCRIPTION: DIGITAL PC BD ASSY

REF DES./QTY	STOCK NO.	DESCRIPTION
IC27	: 07G14503	: IC CMOS 14503B
IC28	: 07G14503	: IC CMOS 14503B
IC29	: 07G04068	: IC CMOS 4068B
IC30	: 07G04081	: IC CMOS 4081B
IC31	: 07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC32	: 07G04069	: IC CMOS 4069UB
IC33	: 07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC34	: 07G04013A	: IC CMOS 4013B DUAL D FLIP FLOP
IC35	: 07G14538	: IC CMOS 14538B
IC36	: 07K05007	: IC PMOS 5007
IC37	: 07G14503	: IC CMOS 14503B
IC38	: 07G14503	: IC CMOS 14503B
IC39	: 07K05007	: IC PMOS 5007
IC40	: 07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC41	: 07G04017	: IC CMOS 4017B
IC42	: 07G04504	: IC CMOS 14504B
IC43	: 07G04023	: IC CMOS 4023B
IC44	: 07G04053A	: IC CMOS 4053B TRIPLE 2 CH ANLG MPX/DMP
IC45	: 07G04518A	: IC CMOS 4518B DUAL BCD UP SYNC COUNTER
IC46	: 07K05007	: IC PMOS 5007
IC47	: 07G14503	: IC CMOS 14503B
IC48	: 07G14503	: IC CMOS 14503B
IC49	: 07K05007	: IC PMOS 5007
IC50	: 07G04049A	: IC CMOS 4049UB HEX BUFFER/CONVERTER
IC51	: 07G04053A	: IC CMOS 4053B TRIPLE 2 CH ANLG MPX/DMP
IC52	: 07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC53	: 07G04520A	: IC CMOS 4520B DUAL 4 BIT BIN COUNTER
IC54	: 07G04073	: IC CMOS 4073B
IC55	: 07G04518A	: IC CMOS 4518B DUAL BCD UP SYNC COUNTER
IC56	: 07K05007	: IC PMOS 5007
IC57	: 07G14503	: IC CMOS 14503B
IC58	: 07G14503	: IC CMOS 14503B
IC59	: 07G04068	: IC CMOS 4068B
IC60	: 07G04049A	: IC CMOS 4049UB HEX BUFFER/CONVERTER
IC61	: 07G04053A	: IC CMOS 4053B TRIPLE 2 CH ANLG MPX/DMP
IC65	: 07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC66	: 07G04081	: IC CMOS 4081B
IC67	: 07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC68	: 07G04081	: IC CMOS 4081B
IC69	: 07G04011A	: IC CMOS 4011B QUAD 2-INPUT NAND
IC71	: 07H07212	: IC CMOS 7212A
IC72	: 07H07212	: IC CMOS 7212A
Q1	: 05C04401	: TRANSISTOR NPN 2N4401
R1	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R2	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R3	: 12B02700	: RES CARBON 2.7 OHM 5% 1/4W
R4	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R5	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R6	: 12B12200	: RES CARBON 22K 5% 1/4W
R7	: 12B14700	: RES CARBON 47K 5% 1/4W
R8	: 12B14700	: RES CARBON 47K 5% 1/4W
R9	: 12B14700	: RES CARBON 47K 5% 1/4W
R10	: 12B01000	: RES CARBON 1K 5% 1/4W
R11	: 12B22200	: RES CARBON 220K 5% 1/4W
R12	: 12B14700	: RES CARBON 47K 5% 1/4W
R13	: 12B22200	: RES CARBON 220K 5% 1/4W
R14	: 12B14700	: RES CARBON 47K 5% 1/4W
R15	: 12B01000	: RES CARBON 1K 5% 1/4W
R16	: 12B01000	: RES CARBON 1K 5% 1/4W
R17	: 12B01000	: RES CARBON 1K 5% 1/4W
R18	: 12B01000	: RES CARBON 1K 5% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-1
DESCRIPTION: DIGITAL PC BD ASSY

REF DES. / QTY	:	STOCK NO.	:	DESCRIPTION
R19	:	12B01000	:	RES CARBON 1K 5% 1/4W
R20	:	12B12200	:	RES CARBON 22K 5% 1/4W
R21	:	12B14700	:	RES CARBON 47K 5% 1/4W
R22	:	12B14700	:	RES CARBON 47K 5% 1/4W
R23	:	12B12200	:	RES CARBON 22K 5% 1/4W
R24	:	12B22200	:	RES CARBON 220K 5% 1/4W
R25	:	12B22200	:	RES CARBON 220K 5% 1/4W
R26	:	12B11200	:	RES CARBON 12K 5% 1/4W
R27	:	12B02000	:	RES CARBON 2.0K 5% 1/4W
R28	:	12B31000	:	RES CARBON 1.0M 5% 1/4W
RC1	:	14A22200	:	RES NETWORK 220K 2% 1/5W
RC2	:	14A01000	:	RES NETWORK 1K 2% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-2
 DESCRIPTION: GENERATOR PC BD ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
C1	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C2	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C3	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C4	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C5	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C6	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C7	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C8	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C9	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C10	: 01B00100C1	:	CAP MICA 100PF 5% 500V
C11	: 01B00200C	:	CAP MICA 200PF 5% 500V
C12	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C13	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C14	: 01B00150C	:	CAP MICA 33PF 5% 500V
C15	: 01B00130C	:	CAP MICA 130PF 5% 500V
C16	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C17	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C18	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C19	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C20	: 01B00470C	:	CAP MICA 470PF 5% 500V
C21	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C22	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C23	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C24	: 01B00270C	:	CAP MICA 270PF 5% 500V
C25	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C26	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C27	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C28	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C29	: 01B00015C	:	CAP MICA 15PF 5% 500V
C30	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C31	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C32	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C34	: 01C42200	:	CAP TANT ELEC 22UF 10% 15V
C35	: 01C33200	:	CAP TANT ELEC 3.3UF 10% 20V
C36	: 01C32200	:	CAP TANT ELEC 3.2UF 10% 20V
C37	: 01A11000	:	CAP CER .01UF 20% 50V
C38	: 01A11000	:	CAP CER .01UF 20% 50V
C39	: 01B00015C	:	CAP MICA 15PF 5% 500V
C40	: 01B00033C	:	CAP MICA 33PF 5% 500V
C41	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C42	: 01A11000	:	CAP CER .01UF 20% 50V
C43	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C44	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C45	: 01A11000	:	CAP CER .01UF 20% 50V
C46	: 01C11000	:	CAP POLYPROP .01UF 2.5% 160V
C47	: 01C11000	:	CAP POLYPROP .01UF 2.5% 160V
C48	: 01C42200	:	CAP TANT ELEC 22UF 10% 15V
C49	: 01B00330C	:	CAP MICA 330PF 5% 500V
C50	: 01C01600	:	CAP POLYPROP 1600PF 2.5% 160V
C51	: 01C01600	:	CAP POLYPROP 1600PF 2.5% 160V
C52	: 01B00330C	:	CAP MICA 330PF 5% 500V
C53	: 01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C54	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
C55	: 01F24700E	:	CAP POLYEST .47UF 10% 100V
R10	: 12F21000	:	RES METAL FILM 100K 1% 1/4W
R11	: 12F14220	:	RES METAL FILM 42.2K 1% 1/4W
R12	: 12F02000	:	RES METAL FILM 2.00K 1% 1/4W
R13	: 12F21000	:	RES METAL FILM 100K 1% 1/4W
R14	: 12F02000	:	RES METAL FILM 2.00K 1% 1/4W
R15	: 12F21000	:	RES METAL FILM 100K 1% 1/4W
R16	: 12F02000	:	RES METAL FILM 2.00K 1% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-2
 DESCRIPTION: GENERATOR PC BD ASSY

REF DES./QTY	STOCK NO.	DESCRIPTION
R17	: 12B11200	: RES CARBON 12K 5% 1/4W
R18	: 12F21000	: RES METAL FILM 100K 1% 1/4W
R19	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R20	: 12F02000	: RES METAL FILM 2.00K 1% 1/4W
R21	: 12F11000	: RES METAL FILM 18.2K 1% 1/4W
R22	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R23	: 12F02550	: RES METAL FILM 2.55K 1% 1/4W
R24	: 12F05110	: RES METAL FILM 5.11K 1% 1/4W
R25	: 12F05110	: RES METAL FILM 5.11K 1% 1/4W
R26	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R27	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R28	: 12F03740	: RES METAL FILM 3.74K 1% 1/4W
R29	: 12F03740	: RES METAL FILM 3.74K 1% 1/4W
R30	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R31	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R32	: 12B41000	: RES CARBON 10M 5% 1/4W
R33	: 12B02700	: RES CARBON 2.7K 5% 1/4W
R34	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R35	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R37	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R38	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R39	: 12F11000	: RES METAL FILM 10.0K 1% 1/4W
R40	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R41	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R42	: 12B14700	: RES CARBON 47K 5% 1/4W
R43	: 12B14700	: RES CARBON 47K 5% 1/4W
R44	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R45	: 12J11938	: RES METAL FILM 19.38K .1% 1/10W
R46	: 12J12290	: RES METAL FILM 22.90K .1% 1/10W
R47	: 12J11938	: RES METAL FILM 19.38K .1% 1/10W
R48	: 12J13437	: RES METAL FILM 34.37K .1% 1/10W
R49	: 12J19833	: RES METAL FILM 98.33K .1% 1/10W
R50	: 12J19833	: RES METAL FILM 98.33K .1% 1/10W
R51	: 12J12290	: RES METAL FILM 22.90K .1% 1/10W
R52	: 12J13437	: RES METAL FILM 34.37K .1% 1/10W
R53	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R54	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R55	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R56	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R57	: 12B05100	: RES CARBON 5.1K 5% 1/4W
R58	: 12B11000	: RES CARBON 10K 5% 1/4W
R59	: 13A15000	: RES METAL FILM 50K 10% .5W 1 TURN
R60	: 12F01000	: RES METAL FILM 1.00K 1% 1/4W
R61	: 12F16040	: RES METAL FILM 60.4K 1% 1/4W
R62	: 12B11200	: RES CARBON 12K 5% 1/4W
R63	: 12F02000	: RES METAL FILM 2.00K 1% 1/4W
R64	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R65	: 12F06650	: RES METAL FILM 6.65K 1% 1/4W
R66	: 12F12000	: RES METAL FILM 20.0K 1% 1/4W
R67	: 12F11000	: RES METAL FILM 10.0K 1% 1/4W
R68	: 12F18660	: RES METAL FILM 86.6K 1% 1/4W
R69	: 13A15000A3	: RES METAL FILM 50K 10% .5W 1 TURN
R70	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R71	: 12B04700	: RES CARBON 47 OHM 5% 1/4W
R72	: 12B11200	: RES CARBON 12K 5% 1/4W
R73	: 12B01000	: RES CARBON 1K 5% 1/4W
R74	: 12B11200	: RES CARBON 12K 5% 1/4W
R75	: 12B11200	: RES CARBON 12K 5% 1/4W
R76	: 12B41000	: RES CARBON 10M 5% 1/4W
R77	: 12F03010	: RES METAL FILM 3.01K 1% 1/4W
R78	: 12F03010	: RES METAL FILM 3.01K 1% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301 2
 DESCRIPTION: GENERATOR PC BD ASSY

REF DES./QTY	STOCK NO.	DESCRIPTION
R77	: 12B31000	: RES CARBON 1.0M 5% 1/4W
R80	: 12F02150	: RES METAL FILM 2.15K 1% 1/4W
R81	: 12FD2370	: RES METAL FILM 237 OHM 1% 1/4W
R82	: 12BC4700	: RES CARBON 47 OHM 5% 1/4W
R83	: 12BC4700	: RES CARBON 47 OHM 5% 1/4W
R84	: 12BC4700	: RES CARBON 47 OHM 5% 1/4W
R85	: 12B01000	: RES CARBON 1K 5% 1/4W
R86	: 12B01000	: RES CARBON 1K 5% 1/4W
R87	: 12BC4700	: RES CARBON 47 OHM 5% 1/4W
R88	: 12BC4700	: RES CARBON 47 OHM 5% 1/4W
R89	: 12BC4700	: RES CARBON 47 OHM 5% 1/4W
R90	: 12B05100	: RES CARBON 5.1K 5% 1/4W
R93	: 12B11000	: RES CARBON 10K 5% 1/4W
R94	: 12B11200	: RES CARBON 12K 5% 1/4W
R01	: 14A22200	: RES NETWORK 220K 2% 1/5W
Y1	: 25A00015	: CRYSTAL 4.000MHZ .0025% 32PF AT CUT
1	: F4301-202A	: C PC D&T GENERATOR BD

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-3
 DESCRIPTION: ANALOG PC BD ASSY

REF DES./QTY	:	STOCK NO.	:	DESCRIPTION
C1	:	01A11000	:	CAP CER .01UF 20% 50V
C2	:	01A11000	:	CAP CER .01UF 20% 50V
C3	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C4	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C5	:	01F24700E	:	CAP POLYEST .47UF 10% 100V
C6	:	01B00200C	:	CAP MICA 200PF 5% 500V
C7	:	01F24700E	:	CAP POLYEST .47UF 10% 100V
C8	:	01F24700E	:	CAP POLYEST .47UF 10% 100V
C9	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C10	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C11	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C12	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C13	:	01H44700L	:	CAP AL ELEC 47UF 20% 10V
C14	:	01A11000	:	CAP CER .01UF 20% 50V
C15	:	01A11000	:	CAP CER .01UF 20% 50V
C16	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C17	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C18	:	01B00062C	:	CAP MICA 62PF 5% 500V
C19	:	01H44700L	:	CAP AL ELEC 47UF 20% 10V
C20	:	01B00018C	:	CAP MICA 18PF 5% 500V
C21	:	01H44700L	:	CAP AL ELEC 47UF 20% 10V
C22	:	01B00018C	:	CAP MICA 18PF 5% 500V
C23	:	01H44700L	:	CAP AL ELEC 47UF 20% 10V
C24	:	01A11000	:	CAP CER .01UF 20% 50V
C25	:	01A11000	:	CAP CER .01UF 20% 50V
C26	:	01H44700L	:	CAP AL ELEC 47UF 20% 10V
C27	:	01A11000	:	CAP CER .01UF 20% 50V
C28	:	01A11000	:	CAP CER .01UF 20% 50V
C29	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C30	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C31	:	01B00470C	:	CAP MICA 470PF 5% 500V
C32	:	01B00470C	:	CAP MICA 470PF 5% 500V
C33	:	01G42200	:	CAP TANT ELEC 22UF 10% 15V
C34	:	01G42200	:	CAP TANT ELEC 22UF 10% 15V
C35	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C36	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C37	:	01A11000	:	CAP CER .01UF 20% 50V
C38	:	01A11000	:	CAP CER .01UF 20% 50V
C39	:	01B01000C	:	CAP MICA 1000PF 5% 100V
C40	:	01G32200	:	CAP TANT ELEC 2.2UF 10% 20V
C41	:	01G34700	:	CAP TANT ELEC 4.7UF 10% 35V
C42	:	01G34700	:	CAP TANT ELEC 4.7UF 10% 35V
C43	:	01A11000	:	CAP CER .01UF 20% 50V
C44	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C45	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C46	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C47	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C48	:	01A11000	:	CAP CER .01UF 20% 50V
C49	:	01B00027C	:	CAP MICA 27PF 5% 500V
C50	:	01A11000	:	CAP CER .01UF 20% 50V
C51	:	01H44700L	:	CAP AL ELEC 47UF 20% 10V
C52	:	01A11000	:	CAP CER .01UF 20% 50V
C53	:	01B00470C	:	CAP MICA 470PF 5% 500V
C54	:	01F24700E	:	CAP POLYEST .47UF 10% 100V
C55	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C56	:	01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C57	:	01B00018C	:	CAP MICA 18PF 5% 500V
C58	:	01B00056C	:	CAP MICA 56PF 5% 500V
C59	:	01B00018C	:	CAP MICA 18PF 5% 500V
C60	:	01A11000	:	CAP CER .01UF 20% 50V
C61	:	01A11000	:	CAP CER .01UF 20% 50V

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-3
 DESCRIPTION: ANALOG PC BD ASSY

REF DES QUANTITY	STOCK NO.	DESCRIPTION
C61	: 01A11000	: CAP CER .01UF 20% 50V
C62	: 01A11000	: CAP CER .01UF 20% 50V
C63	: 01A11000	: CAP CER .01UF 20% 50V
C64	: 01F21000E	: CAP POLYEST .68UF 10% 100V
C65	: 01F21000E	: CAP POLYEST .01UF 10% 250V
C66	: 01F21000E	: CAP POLYEST .01UF 10% 250V
C67	: 01F21000E	: CAP POLYEST .01UF 10% 250V
C68	: 01F21000E	: CAP POLYEST .01UF 10% 250V
C69	: 01H44700L	: CAP AL ELEC 47UF 20% 10V
C70	: 01H31000	: CAP AL ELEC 1.0UF 20% 50V
C71	: 01A11000	: CAP CER .01UF 20% 50V
C72	: 01A11000	: CAP CER .01UF 20% 50V
C73	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C74	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C75	: 01C02200	: CAP POLYPROP 2200PF 2.5% 160V
C76	: 01F21000E	: CAP POLYEST .01UF 10% 250V
C77	: 01F21000E	: CAP POLYEST .01UF 10% 250V
C78	: 01B000620	: CAP MICA 62PF 5% 500V
C79	: 01A11000	: CAP CER .01UF 20% 50V
C80	: 01A11000	: CAP CER .01UF 20% 50V
C81	: 01B01000C	: CAP MICA 1000PF 5% 100V
C82	: 01E24700A2	: CAP POLYCARB .47UF 2% 50V
C83	: 01E24700A2	: CAP POLYCARB .47UF 2% 50V
C84	: 01E24700A2	: CAP POLYCARB .47UF 2% 50V
C85	: 01A11000	: CAP CER .01UF 20% 50V
C86	: 01B01000C	: CAP MICA 1000PF 5% 100V
C87	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C88	: 01B00620C	: CAP MICA 620PF 5% 300V
C89	: 01A11000	: CAP CER .01UF 20% 50V
C90	: 01A11000	: CAP CER .01UF 20% 50V
C91	: 01A11000	: CAP CER .01UF 20% 50V
C92	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C93	: 01B00620C	: CAP MICA 620PF 5% 300V
C94	: 01A11000	: CAP CER .01UF 20% 50V
C95	: 01A11000	: CAP CER .01UF 20% 50V
C96	: 01A11000	: CAP CER .01UF 20% 50V
C97	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C98	: 01B00620C	: CAP MICA 620PF 5% 300V
C99	: 01H21000A1	: CAP AL ELEC 1000UF 20% 35V
C100	: 01A00047	: CAP CER 47PF 20% 1KV
C101	: 01A11000	: CAP CER .01UF 20% 50V
C102	: 01A00047	: CAP CER 47PF 20% 1KV
C103	: 01A11000	: CAP CER .01UF 20% 50V
D1	: 03B00001A	: DIODE ZENER LM329CZ 4.9V 5%
D2	: 03A03064	: DIODE SIGNAL 1N3064 75V
D3	: 03A03064	: DIODE SIGNAL 1N3064 75V
D4	: 03A03064	: DIODE SIGNAL 1N3064 75V
D5	: 03A03064	: DIODE SIGNAL 1N3064 75V
IC1	: 03B04553	: IC OP AMP 4553
IC2	: 03B00393	: IC COMPARATOR 393
IC3	: 07G04051A	: IC CMOS 4051B
IC4	: 03B00353	: IC OP AMP 353
IC5	: 07G04053A	: IC CMOS 4053B
IC6	: 07G04053A	: IC CMOS 4053B
IC7	: 08A00318	: IC OP AMP 318
IC8	: 07G04051	: IC CMOS 4051B
IC9	: 07G04053A	: IC CMOS 4053B
IC10	: 07G14538	: IC CMOS 14538B
IC11	: 07G14538	: IC CMOS 14538B
IC12	: 07G04070	: IC CMOS 4070B
IC13	: 07G04001A	: IC CMOS 4001B QUAD 2-INPUT NOR
IC14	: 08A00318	: IC OP AMP 318
IC15	: 07G04053A	: IC CMOS 4053B
IC16	: 08A00318	: IC OP AMP 318
IC17	: 03B00393	: IC COMPARATOR 393
IC18	: 03B00393	: IC COMPARATOR 393

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-3
 DESCRIPTION: ANALOG PC BD ASSY

REF	DES./QTY	:	STOCK NO.	:	DESCRIPTION
	IC19	:	08A00318	:	IC OP AMP 318
	IC20	:	07G04516	:	IC CMOS 4516B
	IC21	:	07G04510	:	IC CMOS 4510B
	IC22	:	07G04071	:	IC CMOS 4071B
	IC23	:	08A00318	:	IC OP AMP 318
	IC24	:	08B00353	:	IC OP AMP 353
	IC25	:	07G04053A	:	IC CMOS 4053B
	IC26	:	08B04558	:	IC OP AMP 4558
	IC27	:	08A00318	:	IC OP AMP 318
	IC28	:	07G04053A	:	IC CMOS 4053B
	IC29	:	07G04051	:	IC CMOS 4051B
	IC30	:	07G04053A	:	IC CMOS 4053B
	IC31	:	08B00353	:	IC OP AMP 353
	IC32	:	07G04510	:	IC CMOS 4510B
	IC33	:	07G04510	:	IC CMOS 4510B
	IC34	:	07G04081	:	IC CMOS 4081B
	IC35	:	07G04059	:	IC CMOS 4059A
	IC36	:	07G04071	:	IC CMOS 4071B
	IC37	:	07G04050	:	IC CMOS 4050B
	R1	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R2	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R3	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
	R4	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
	R5	:	12B04200	:	RES CARBON 4.2K 5% 1/4W
	R6	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R7	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R8	:	12B22200	:	RES CARBON 220K 5% 1/4W
	R9	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
	R10	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
	R11	:	12B06200	:	RES CARBON 6.2K 5% 1/4W
	R12	:	12B11200	:	RES CARBON 12K 5% 1/4W
	R13	:	12B01000	:	RES CARBON 1K 5% 1/4W
	R14	:	12F03010	:	RES METAL FILM 3.01K 1% 1/4W
	R15	:	12F03010	:	RES METAL FILM 3.01K 1% 1/4W
	R16	:	12F22430	:	RES METAL FILM 243K 1% 1/4W
	R17	:	12F16040	:	RES METAL FILM 60.4K 1% 1/4W
	R18	:	12F05110	:	RES METAL FILM 5.11K 1% 1/4W
	R19	:	12B01000	:	RES CARBON 1K 5% 1/4W
	R20	:	12B15100	:	RES CARBON 51K 5% 1/4W
	R21	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R22	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R23	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R24	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R25	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R26	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R27	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R28	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R29	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R30	:	12B12200	:	RES CARBON 22K 5% 1/4W
	R31	:	12J01903	:	RES METAL FILM 1.903K .1% 1/10W
	R32	:	12J02589	:	RES METAL FILM 258.9 OHM .1% 1/10W
	R33	:	12J01000	:	RES METAL FILM 1.000K .1% 1/10W
	R34	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R35	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R36	:	12J02000	:	RES METAL FILM 2.000K .1% 1/10W
	R37	:	12J02000	:	RES METAL FILM 2.000K .1% 1/10W
	R38	:	12J01000	:	RES METAL FILM 1.000K .1% 1/10W
	R39	:	12B12200	:	RES CARBON 22K 5% 1/4W
	R40	:	12J01000	:	RES METAL FILM 1.000K .1% 1/10W
	R41	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
	R42	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-3

DESCRIPTION: ANALOG PC BD ASSY

REF	DES./QTY	STOCK NO.	DESCRIPTION
R43	: 12B14700	:	RES CARBON 47K 5% 1/4W
R44	: 12F01870	:	RES METAL FILM 1.87K 1% 1/4W
R45	: 13A11000A4	:	RES METAL FILM 10K 10% .5W 1 TURN
R46	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R47	: 12J21000	:	RES METAL FILM 100.0K .1% 1/10W
R48	: 12J21000	:	RES METAL FILM 100.0K .1% 1/10W
R49	: 12F13160	:	RES METAL FILM 31.6K 1% 1/4W
R50	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R51	: 12B15600	:	RES CARBON 56K 5% 1/4W
R52	: 12B14700	:	RES CARBON 47K 5% 1/4W
R53	: 12B14700	:	RES CARBON 47K 5% 1/4W
R54	: 12B15600	:	RES CARBON 56K 5% 1/4W
R55	: 12B14700	:	RES CARBON 47K 5% 1/4W
R56	: 12F05110	:	RES METAL FILM 5.11K 1% 1/4W
R57	: 12F05110	:	RES METAL FILM 5.11K 1% 1/4W
R58	: 12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R59	: 12F03400	:	RES METAL FILM 3.40K 1% 1/4W
R60	: 12F11870	:	RES METAL FILM 18.7K 1% 1/4W
R61	: 12F04530	:	RES METAL FILM 4.53K 1% 1/4W
R62	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R63	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R64	: 12B12000	:	RES CARBON 22K 5% 1/4W
R65	: 12F04220	:	RES METAL FILM 4.22K 1% 1/4W
R66	: 12F12000	:	RES METAL FILM 20.0K 1% 1/4W
R67	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R68	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R69	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R70	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R71	: 12F05110	:	RES METAL FILM 5.11K 1% 1/4W
R72	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R73	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R74	: 12J03385	:	RES METAL FILM 3.385K .1% 1/10W
R75	: 12J02435	:	RES METAL FILM 243.5 OHM .1% 1/10W
R76	: 12J02170	:	RES METAL FILM 217.0 OHM .1% 1/10W
R77	: 12J01934	:	RES METAL FILM 193.4 OHM .1% 1/10W
R78	: 12J01734	:	RES METAL FILM 172.4 OHM .1% 1/10W
R79	: 12J01536	:	RES METAL FILM 153.6 OHM .1% 1/10W
R80	: 12J01367	:	RES METAL FILM 136.7 OHM .1% 1/10W
R81	: 12J01220	:	RES METAL FILM 122.0 OHM .1% 1/10W
R82	: 12J01000	:	RES METAL FILM 1.000K .1% 1/10W
R83	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R84	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R85	: 12B14700	:	RES CARBON 47K 5% 1/4W
R86	: 12B14700	:	RES CARBON 47K 5% 1/4W
R87	: 12B14700	:	RES CARBON 47K 5% 1/4W
R88	: 12B14700	:	RES CARBON 47 OHM 5% 1/4W
R89	: 12J09000	:	RES METAL FILM 9.000K .1% 1/10W
R90	: 12J01000	:	RES METAL FILM 1.000K .1% 1/10W
R91	: 12J01903	:	RES METAL FILM 1.903K .1% 1/10W
R92	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R93	: 12J09000	:	RES METAL FILM 9.000K .1% 1/10W
R94	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R95	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R96	: 12J02589	:	RES METAL FILM 258.9 OHM .1% 1/10W
R97	: 12J01000	:	RES METAL FILM 1.000K .1% 1/10W
R98	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R99	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R100	: 12J01000	:	RES METAL FILM 1.000K .1% 1/10W
R101	: 12F15900	:	RES METAL FILM 59.0K 1% 1/4W
R102	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R103	: 12BC4700	:	RES CARBON 47 OHM 5% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-B
 DESCRIPTION: ANALOG PC BD ASSY

REF DES./QTY	:	STOCK NO.	:	DESCRIPTION
R104	:	12B02000	:	RES CARBON 2K 5% 1/4W
R105	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R106	:	12F31000	:	RES METAL FILM 1.00M 1% 1/4W
R107	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R108	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R109	:	12F21000	:	RES METAL FILM 100K 1% 1/4W
R110	:	12F07150	:	RES METAL FILM 7.15K 1% 1/4W
R111	:	12F05900	:	RES METAL FILM 5.90K 1% 1/4W
R112	:	12F01070	:	RES METAL FILM 1.07K 1% 1/4W
R113	:	13A02000AS	:	RES METAL FILM 2K 10% .5W 1 TURN
R114	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R115	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R116	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R117	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R118	:	12B02000	:	RES CARBON 2K 5% 1/4W
R119	:	12F28660	:	RES METAL FILM 866K 1% 1/4W
R120	:	12F24420	:	RES METAL FILM 442K 1% 1/4W
R121	:	12F22260	:	RES METAL FILM 226K 1% 1/4W
R122	:	12F21150	:	RES METAL FILM 115K 1% 1/4W
R123	:	12F31820	:	RES METAL FILM 1.82M 1% 1/4W
R124	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R125	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R126	:	12F12670	:	RES METAL FILM 26.7K 1% 1/4W
R127	:	12B01000	:	RES CARBON 10 OHM 5% 1/4W
R128	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R129	:	12F14990	:	RES METAL FILM 49.9K 1% 1/4W
R130	:	12B01000	:	RES CARBON 10 OHM 5% 1/4W
R131	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R132	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R133	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R134	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R135	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R136	:	12F03400	:	RES METAL FILM 3.40K 1% 1/4W
R137	:	12FD2430	:	RES METAL FILM 243 OHM 1% 1/4W
R140	:	12FD2150	:	RES METAL FILM 215 OHM 1% 1/4W
R141	:	12FD1910	:	RES METAL FILM 191 OHM 1% 1/4W
R142	:	12FD1740	:	RES METAL FILM 174 OHM 1% 1/4W
R143	:	12FD1540	:	RES METAL FILM 154 OHM 1% 1/4W
R144	:	12FD1370	:	RES METAL FILM 137 OHM 1% 1/4W
R145	:	12FD1210	:	RES METAL FILM 121 OHM 1% 1/4W
R146	:	12F01000	:	RES METAL FILM 1.00K 1% 1/4W
R147	:	12B04700	:	RES CARBON 47 OHM 5% 1/4W
R148	:	12B15100	:	RES CARBON 51K 5% 1/4W
R149	:	12F05110	:	RES METAL FILM 5.11K 1% 1/4W
R150	:	12B12200	:	RES CARBON 22K 5% 1/4W
R151	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
R152	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
R153	:	12B06200	:	RES CARBON 6.2K 5% 1/4W
R154	:	12F12000	:	RES METAL FILM 20.0K 1% 1/4W
R155	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
R156	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
R157	:	12B06200	:	RES CARBON 6.2K 5% 1/4W
R158	:	12F11270	:	RES METAL FILM 12.7K 1% 1/4W
R159	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
R160	:	12B05100	:	RES CARBON 5.1K 5% 1/4W
R161	:	12B06200	:	RES CARBON 6.2K 5% 1/4W
R162	:	12F12150	:	RES METAL FILM 21.5K 1% 1/4W
R163	:	12F12150	:	RES METAL FILM 21.5K 1% 1/4W
R164	:	12F11270	:	RES METAL FILM 12.7K 1% 1/4W
R165	:	12F12000	:	RES METAL FILM 20.0K 1% 1/4W
R166	:	12F05110	:	RES METAL FILM 5.11K 1% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-3
 DESCRIPTION: ANALOG PC BD ASSY

REF DES./QTY	STOCK NO.	DESCRIPTION
R167	: 12F23090	: RES METAL FILM 309K 1% 1/4W
R168	: 12F23090	: RES METAL FILM 309K 1% 1/4W
R169	: 12F23090	: RES METAL FILM 309K 1% 1/4W
R170	: 12B02000	: RES CARBON 2K 5% 1/4W
R171	: 12B02000	: RES CARBON 2K 5% 1/4W
R172	: 12B01000	: RES CARBON 1.0K 5% 1/4W
R173	: 12B12200	: RES CARBON 22K 5% 1/4W
RF1	: 14A15600	: RES NETWORK 56K 2% 1/4W
RF2	: 14A14700	: RES NETWORK 47K 2% 1/4W
RF3	: 14A15600	: RES NETWORK 56K 2% 1/4W
RF4	: 14A14700	: RES NETWORK 47K 2% 1/4W
RF5	: 14A22200	: RES NETWORK 220K 2% 1/5W
RF7	: 14A12000	: RES NETWORK 220K 2% 1/5W
2	: 23A00018	: STANDOFF 3/16 OD X 1/4 2-56 NYLON
2	: 24A02008A	: SCREW 2-56 X 1/2 BH-SL-SNF
2	: 24A02102	: WASHER INT TOOTH #2 SCP
2	: 24A02201	: NUT HEX 2 - 56 SNF
1	: F4301-302B	: C PC D&T ANALOG BD
1	: F4301-311A	: B SHIELD

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4
 DESCRIPTION: INPUT/OUTPUT ASSY

REF DES./QTY	STOCK NO.	DESCRIPTION
SUB	: D4301-4-0	: SHIELDED CAPACITOR ASSY
SUB	: D4301-4-1	: INPUT/OUTPUT PC BD ASSY (400 BD)

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4-1

DESCRIPTION: INPUT/OUTPUT PC BD ASSY (400 BD)

REF	DES./QTY	:	STOCK NO.	:	DESCRIPTION
C1	:		01H51000A1	:	CAP AL ELEC 100UF 20% 160V
C4	:		01H51000A1	:	CAP AL ELEC 100UF 20% 160V
C5	:		01B00170C	:	CAP MICA 120PF 5% 500V
C6	:		01B00022C	:	CAP MICA 22PF 5% 500V
C7	:		01A11000	:	CAP CER .01UF 20% 50V
C8	:		01A11000	:	CAP CER .01UF 20% 50V
C9	:		01B00015C	:	CAP MICA 15PF 5% 500V
C10	:		01B00018C	:	CAP MICA 18PF 5% 500V
C11	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C12	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C13	:		01H42200L	:	CAP AL ELEC 22UF 20% 16V
C14	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C15	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C16	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C17	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C18	:		01C12700	:	CAP POLYPROP .027UF 2.5% 160V
C19	:		01C12700	:	CAP POLYPROP .027UF 2.5% 160V
C20	:		01C12700	:	CAP POLYPROP .027UF 2.5% 160V
C21	:		01C00370	:	CAP POLYPROP 320PF 2.5% 160V
C22	:		01C12700	:	CAP POLYPROP .027UF 2.5% 160V
C23	:		01C02000	:	CAP POLYPROP 2000PF 2.5% 160V
C24	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C25	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C26	:		01F24700E	:	CAP POLYEST .47UF 10% 100V
C27	:		01F24700E	:	CAP POLYEST .47UF 10% 100V
C28	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C29	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C30	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C31	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C32	:		01B00022C	:	CAP MICA 22PF 5% 500V
C33	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C34	:		01C12000A	:	CAP POLYPROP .02UF 1% 160V
C35	:		01C05000	:	CAP POLYPROP 5000PF 2.5% 160V
C36	:		01C05000	:	CAP POLYPROP 5000PF 2.5% 160V
C37	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C38	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C39	:		01C04700	:	CAP POLYPROP 4700PF 2.5% 160V
C40	:		01C01000	:	CAP POLYPROP 1000PF 2.5% 160V
C41	:		01C01500	:	CAP POLYPROP 1500PF 2.5% 160V
C42	:		01C07500	:	CAP POLYPROP 7500PF 2.5% 160V
C43	:		01C03300	:	CAP POLYPROP 3300PF 2.5% 160V
C44	:		01C01300	:	CAP POLYPROP 1300PF 2.5% 160V
C45	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C46	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C47	:		01A11000	:	CAP CER .01UF 20% 50V
C48	:		01A11000	:	CAP CER .01UF 20% 50V
C49	:		01A11000	:	CAP CER .01UF 20% 50V
C50	:		01A11000	:	CAP CER .01UF 20% 50V
C51	:		01C01000	:	CAP POLYPROP 1000PF 2.5% 160V
C52	:		01A11000	:	CAP CER .01UF 20% 50V
C53	:		01H44700L	:	CAP AL ELEC 47UF 20% 10V
C54	:		01A11000	:	CAP CER .01UF 20% 50V
C55	:		01C01000	:	CAP POLYPROP 1000PF 2.5% 160V
C56	:		01B00047C	:	CAP MICA 47PF 5% 500V
C57	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C58	:		01F21000E	:	CAP POLYEST 0.1UF 10% 250V
C59	:		01B00012C	:	CAP MICA 12PF 5% 500V
C60	:		01H52200	:	CAP AL ELEC 220UF -10 +50% 16V
C61	:		01C12700	:	CAP POLYPROP .027UF 2.5% 160V
C62	:		01C12700	:	CAP POLYPROP .027UF 2.5% 160V
C63	:		01C03900	:	CAP POLYPROP 3900PF 2.5% 160V

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4-1
 DESCRIPTION: INPUT/OUTPUT PC BD ASSY (400 BD)

REF DES. QTY	: STOCK NO.	: DESCRIPTION
C64	: 01C001200	: CAP POLYPROP 1200PF 2.5% 160V
C65	: 01C005000	: CAP POLYPROP 5000PF 2.5% 160V
C66	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C67	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C68	: 01C00510	: CAP POLYPROP 510PF 2.5% 160V
C69	: 01C001200	: CAP POLYPROP 1200PF 2.5% 160V
C70	: 01C001200	: CAP POLYPROP 1200PF 2.5% 160V
C71	: 01C001200	: CAP POLYPROP 1200PF 2.5% 160V
C72	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C73	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C74	: 01A11000	: CAP CER .01UF 20% 50V
C75	: 01B00018C	: CAP MICA 18PF 5% 500V
C76	: 01H44700L	: CAP AL ELEC 47UF 20% 10V
C77	: 01H44700L	: CAP AL ELEC 47UF 20% 10V
C78	: 01A11000	: CAP CER .01UF 20% 50V
C79	: 01B00018C	: CAP MICA 18PF 5% 500V
C80	: 01H44700L	: CAP AL ELEC 47UF 20% 10V
C81	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C82	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C83	: 01A11000	: CAP CER .01UF 20% 50V
C84	: 01A11000	: CAP CER .01UF 20% 50V
C85	: 01C001000	: CAP POLYPROP 1000PF 2.5% 160V
C86	: 01C002000	: CAP POLYPROP 2000PF 2.5% 160V
C87	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C88	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C89	: 01C11000	: CAP POLYPROP .01UF 2.5% 160V
C90	: 01C005000	: CAP POLYPROP 5000PF 2.5% 160V
C91	: 01C003300	: CAP POLYPROP 3300PF 2.5% 160V
C92	: 01C003300	: CAP POLYPROP 3300PF 2.5% 160V
C93	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C94	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C95	: 01C01800	: CAP POLYPROP 1800PF 2.5% 160V
C96	: 01H32200L	: CAP AL ELEC 2.2UF 20% 50V
C97	: 01H32200L	: CAP AL ELEC 2.2UF 20% 50V
C100	: 01H51000A1	: CAP AL ELEC 100UF 20% 160V
C101	: 01H51000A1	: CAP AL ELEC 100UF 20% 160V
C102	: 01A11000	: CAP CER .01UF 20% 50V
C103	: 01A11000	: CAP CER .01UF 20% 50V
C104	: 01B00022C	: CAP MICA 22PF 5% 500V
C107	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C108	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C109	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C110	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C111	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C112	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C113	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C114	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
C115	: 01B00022C	: CAP MICA 22PF 5% 500V
C116	: 01B00022C	: CAP MICA 22PF 5% 500V
C117	: 01B00430C	: CAP MICA 430PF 5% 500V
C118	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C119	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C120	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C121	: 01F24700E	: CAP POLYEST .47UF 10% 100V
C122	: 02A000001	: CAP CER 5.5-18PF
C123	: 01F21000E	: CAP POLYEST 0.1UF 10% 250V
D1	: 03A03064	: DIODE SIGNAL 1N3064 75V
D2	: 03A03064	: DIODE SIGNAL 1N3064 75V
D3	: 03A03064	: DIODE SIGNAL 1N3064 75V
D4	: 03A03064	: DIODE SIGNAL 1N3064 75V
D7	: 03L000001	: DIODE BRIDGE KBP04 400V 1.5A

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4-1

DESCRIPTION: INPUT/OUTPUT PC BD ASSY (400 BD)

REF	DES./QTY	:	STOCK NO.	:	DESCRIPTION
D8	:		03J00001	:	DIODE BRIDGE KBP04 400V 1.5A
IC1	:		08B05532A	:	IC OP AMP 5532A LOW NOISE
IC2	:		07G04053A	:	IC CMOS 4053B TRIPLE 2 CH ANLG MPX/DMP
IC3	:		08B05532A	:	IC OP AMP 5532A
IC4	:		08B05532A	:	IC OP AMP 5532A
IC5	:		07G04053A	:	IC CMOS 4053B
IC6	:		08B05532A	:	IC OP AMP 5532A
IC7	:		07G04052	:	IC CMOS 4052B
IC8	:		08B05532A	:	IC OP AMP 5532A
IC9	:		07G04053A	:	IC CMOS 4053B
IC10	:		08A05534	:	IC OP AMP 5534A
IC11	:		08B05532A	:	IC OP AMP 5532A
IC12	:		08B05532A	:	IC OP AMP 5532A
IC13	:		08B05532A	:	IC OP AMP 5532A
IC14	:		08B05532A	:	IC OP AMP 5532A
IC15	:		08B05532A	:	IC OP AMP 5532A
IC16	:		07G04052	:	IC CMOS 4052B
IC17	:		08A05534	:	IC OP AMP 5534A
IC18	:		08B04558	:	IC OP AMP 4558
IC19	:		08B05532A	:	IC OP AMP 5532A
IC20	:		07G04053A	:	IC CMOS 4053B
IC21	:		08B05532A	:	IC OP AMP 5532A
IC22	:		08A05534	:	IC OP AMP 5534A
IC23	:		08A05534	:	IC OP AMP 5534A
IC24	:		07G04053A	:	IC CMOS 4053B
L1	:		15A11000A	:	INDUCTOR 10.0MH 5%
L2	:		15A11000A	:	INDUCTOR 10.0MH 5%
L3	:		15A04700A2	:	INDUCTOR 4.7MH 5%
L4	:		15A03300A1	:	INDUCTOR 3.3MH 5%
L5	:		15A01000A	:	INDUCTOR 1.0MH 5%
L6	:		15A01000A	:	INDUCTOR 1.0MH 5%
L7	:		15AD4700	:	INDUCTOR 470UH 10%
Q1	:		05D00007	:	TRANSISTOR NPN MPS-A14
Q2	:		05C02484	:	TRANSISTOR NPN 2N2484
Q3	:		05D00002	:	TRANSISTOR NPN MJE182
Q4	:		05D00007	:	TRANSISTOR NPN MPS-A14
Q5	:		05C02484	:	TRANSISTOR NPN 2N2484
Q6	:		05D00002	:	TRANSISTOR NPN MJE182
R1	:		12F12000	:	RES METAL FILM 20.0K 1% 1/4W
R2	:		12F12000	:	RES METAL FILM 20.0K 1% 1/4W
R3	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R4	:		12F18870	:	RES METAL FILM 88.7K 1% 1/4W
R5	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R6	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R7	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R8	:		12H11000	:	RES METAL FILM 11.08K .1% 1/10W
R9	:		12H11000	:	RES METAL FILM 10.00K .1% 1/10W
R10	:		12F11360	:	RES METAL FILM 19.6K 1% 1/4W
R11	:		12F13320	:	RES METAL FILM 33.2K 1% 1/4W
R12	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R13	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R14	:		13A02000	:	RES METAL FILM 2K 10% .5W 1 TURN
R15	:		12F07500	:	RES METAL FILM 7.50K 1% 1/4W
R16	:		12F03880	:	RES METAL FILM 3.88K 1% 1/4W
R17	:		12F11500	:	RES METAL FILM 15.0K 1% 1/4W
R18	:		12F11300	:	RES METAL FILM 18.3K 1% 1/4W
R19	:		12F06780	:	RES METAL FILM 6.78K 1% 1/4W
R20	:		12F11270	:	RES METAL FILM 12.7K 1% 1/4W
R21	:		12F05760	:	RES METAL FILM 5.76K 1% 1/4W
R22	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R23	:		12BC4700	:	RES CARBON 47 OHM 5% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4-1
 DESCRIPTION: INPUT/OUTPUT PC BD ASSY (400 BD)

REF	DES./QTY	STOCK NO.	DESCRIPTION
R34	: 1	12F04420	: RES CARBON 22 OHM 5% 1/4W
R35	: 1	12F04420	: RES CARBON 22 OHM 5% 1/4W
R36	: 1	12F04420	: RES METAL FILM 4.42K 1% 1/4W
R37	: 1	12F11000	: RES METAL FILM 10.0K 1% 1/4W
R38	: 1	12F11330	: RES METAL FILM 13.3K 1% 1/4W
R39	: 1	12F04990	: RES METAL FILM 4.99K 1% 1/4W
R40	: 1	12A02000	: RES METAL FILM 2K 10% .5W 1 TURN
R41	: 1	12F12150	: RES METAL FILM 21.5K 1% 1/4W
R42	: 1	12F11470	: RES METAL FILM 14.7K 1% 1/4W
R43	: 1	12F02210	: RES METAL FILM 2.21K 1% 1/4W
R44	: 1	12F04750	: RES METAL FILM 4.75K 1% 1/4W
R45	: 1	12F04750	: RES METAL FILM 4.75K 1% 1/4W
R46	: 1	12A02000	: RES METAL FILM 2K 10% .5W 1 TURN
R47	: 1	12F11470	: RES METAL FILM 14.7K 1% 1/4W
R48	: 1	12F12150	: RES METAL FILM 21.5K 1% 1/4W
R49	: 1	12F02210	: RES METAL FILM 2.21K 1% 1/4W
R50	: 1	12F04750	: RES METAL FILM 4.75K 1% 1/4W
R51	: 1	12F11000	: RES METAL FILM 10.0K 1% 1/4W
R52	: 1	12F16980	: RES METAL FILM 69.8K 1% 1/4W
R53	: 1	12A02000	: RES METAL FILM 2K 10% .5W 1 TURN
R54	: 1	12F14420	: RES METAL FILM 44.2K 1% 1/4W
R55	: 1	12F04990	: RES METAL FILM 4.99K 1% 1/4W
R56	: 1	12F11470	: RES METAL FILM 14.7K 1% 1/4W
R57	: 1	12F02210	: RES METAL FILM 2.21K 1% 1/4W
R58	: 1	12F04320	: RES METAL FILM 4.32K 1% 1/4W
R59	: 1	12F04420	: RES METAL FILM 4.42K 1% 1/4W
R60	: 1	12F11000	: RES CARBON 220K 5% 1/4W
R61	: 1	12B12000	: RES CARBON 220K 5% 1/4W
R62	: 1	12F16490	: RES METAL FILM 64.9K 1% 1/4W
R63	: 1	12F12470	: RES METAL FILM 24.7K 1% 1/4W
R64	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R65	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R66	: 1	12F04990	: RES METAL FILM 4.99K 1% 1/4W
R67	: 1	12F04990	: RES METAL FILM 4.99K 1% 1/4W
R68	: 1	12F08250	: RES METAL FILM 8.25K 1% 1/4W
R69	: 1	12F08250	: RES METAL FILM 8.25K 1% 1/4W
R70	: 1	12F08250	: RES METAL FILM 8.25K 1% 1/4W
R71	: 1	12F02760	: RES METAL FILM 9.76K 1% 1/4W
R72	: 1	12F02760	: RES METAL FILM 9.76K 1% 1/4W
R73	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R74	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R75	: 1	12F05230	: RES METAL FILM 5.23K 1% 1/4W
R76	: 1	12F11000	: RES METAL FILM 10.0K 1% 1/4W
R77	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R78	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R79	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R80	: 1	12B04700	: RES CARBON 47 OHM 5% 1/4W
R81	: 1	12F02740	: RES METAL FILM 2.74K 1% 1/4W
R82	: 1	12F02740	: RES METAL FILM 2.74K 1% 1/4W
R83	: 1	12F11000	: RES METAL FILM 10.0K 1% 1/4W
R84	: 1	12F11000	: RES METAL FILM 10.0K 1% 1/4W
R85	: 1	12F01300	: RES METAL FILM 1.30K 1% 1/4W
R86	: 1	12F01300	: RES METAL FILM 1.30K 1% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4-1

DESCRIPTION: INPUT/OUTPUT PC BD ASSY (400 BD)

REF DES./QTY	:	STOCK NO.	:	DESCRIPTION
R85	:	12F01330	:	RES METAL FILM 1.33K 1% 1/4W
R86	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R87	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R88	:	12F03160	:	RES METAL FILM 3.16K 1% 1/4W
R89	:	12F04220	:	RES METAL FILM 4.22K 1% 1/4W
R90	:	12F03240	:	RES METAL FILM 3.24K 1% 1/4W
R91	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R92	:	12FD1540	:	RES METAL FILM 154 OHM 1% 1/4W
R93	:	12F03090	:	RES METAL FILM 3.09K 1% 1/4W
R94	:	12F11000	:	RES METAL FILM 10.0K 1% 1/4W
R95	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R96	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R97	:	12B14700	:	RES CARBON 47K 5% 1/4W
R98	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R99	:	12B12200	:	RES CARBON 22K 5% 1/4W
R100	:	12J04623	:	RES METAL FILM 4.623K .1% 1/10W
R101	:	12J01000	:	RES METAL FILM 1.000K .1% 1/10W
R102	:	12J05000	:	RES METAL FILM 5.000K .1% 1/10W
R103	:	12J11081	:	RES METAL FILM 10.81K .1% 1/10W
R104	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R105	:	12J04623	:	RES METAL FILM 4.623K .1% 1/10W
R106	:	12J01000	:	RES METAL FILM 1.000K .1% 1/10W
R107	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R108	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R109	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R110	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R111	:	13A05000	:	RES METAL FILM 5K 10% .5W 1 TURN
R112	:	13A02000	:	RES METAL FILM 2K 10% .5W 1 TURN
R113	:	12F06190	:	RES METAL FILM 6.19K 1% 1/4W
R114	:	13A05000	:	RES METAL FILM 5K 10% .5W 1 TURN
R115	:	12F07500	:	RES METAL FILM 7.50K 1% 1/4W
R116	:	12F07500	:	RES METAL FILM 7.50K 1% 1/4W
R117	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R118	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R119	:	12F07500	:	RES METAL FILM 7.50K 1% 1/4W
R120	:	12F07500	:	RES METAL FILM 7.50K 1% 1/4W
R121	:	12F14750	:	RES METAL FILM 47.5K 1% 1/4W
R122	:	12F14750	:	RES METAL FILM 47.5K 1% 1/4W
R123	:	12FD3010	:	RES METAL FILM 301 OHM 1% 1/4W
R124	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R125	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R126	:	12F09090	:	RES METAL FILM 9.09K 1% 1/4W
R127	:	12F29090	:	RES METAL FILM 909K 1% 1/4W
R128	:	12F21000	:	RES METAL FILM 100K 1% 1/4W
R130	:	12FC3920	:	RES METAL FILM 39.2 OHM 1% 1/4W
R131	:	12FC3920	:	RES METAL FILM 39.2 OHM 1% 1/4W
R132	:	12F29090	:	RES METAL FILM 909K 1% 1/4W
R134	:	12F21000	:	RES METAL FILM 100K 1% 1/4W
R135	:	12FC3920	:	RES METAL FILM 39.2 OHM 1% 1/4W
R136	:	12FC3920	:	RES METAL FILM 39.2 OHM 1% 1/4W
R137	:	12FC6650	:	RES METAL FILM 66.5 OHM 1% 1/4W
R138	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R139	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R144	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R145	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R146	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R147	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R148	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R149	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R150	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W
R151	:	12BC4700	:	RES CARBON 47 OHM 5% 1/4W

PARTS LIST BY ASSEMBLY

ASSEMBLY NO: D4301-4-1

DESCRIPTION: INPUT/OUTPUT PC BD ASSY (400 BD)

REF	DES./QTY	STOCK NO.	DESCRIPTION
	R152	: 12FD7150	: RES METAL FILM 715 OHM 1% 1/4W
	R153	: 12B01000	: RES CARBON 1K 5% 1/4W
	R154	: 12B01000	: RES CARBON 1K 5% 1/4W
	R156	: 12FC6650	: RES METAL FILM 66.5 OHM 1% 1/4W
	R157	: 12FD7500	: RES METAL FILM 750 OHM 1% 1/4W
	R158	: 12B22200	: RES CARBON 220K 5% 1/4W
	R159	: 13AD5000	: RES METAL FILM 500 OHM 10% .5W 1 TURN
	R160	: 13AD5000	: RES METAL FILM 500 OHM 10% .5W 1 TURN
	R161	: 13AD5000	: RES METAL FILM 500 OHM 10% .5W 1 TURN
	R162	: 12B12200	: RES CARBON 22K 5% 1/4W
	RT1	: 14BD2000	: RES THERMISTOR 200 OHM 33C - 4.4% PDC
	RT2	: 14BD2000	: RES THERMISTOR 200 OHM 33C - 4.4% PDC
	T1	: F4301-410	: C TRANSFORMER SPEC CTRL DWG
	T2	: F4301-411	: C TRANSFORMER SPEC CTRL DWG
	2	: 12F00004	: BUMPER FEET ROUND
	2	: 23600013	: HEATSINK
	1	: F4301-402B	: C PC D&T I/O BD

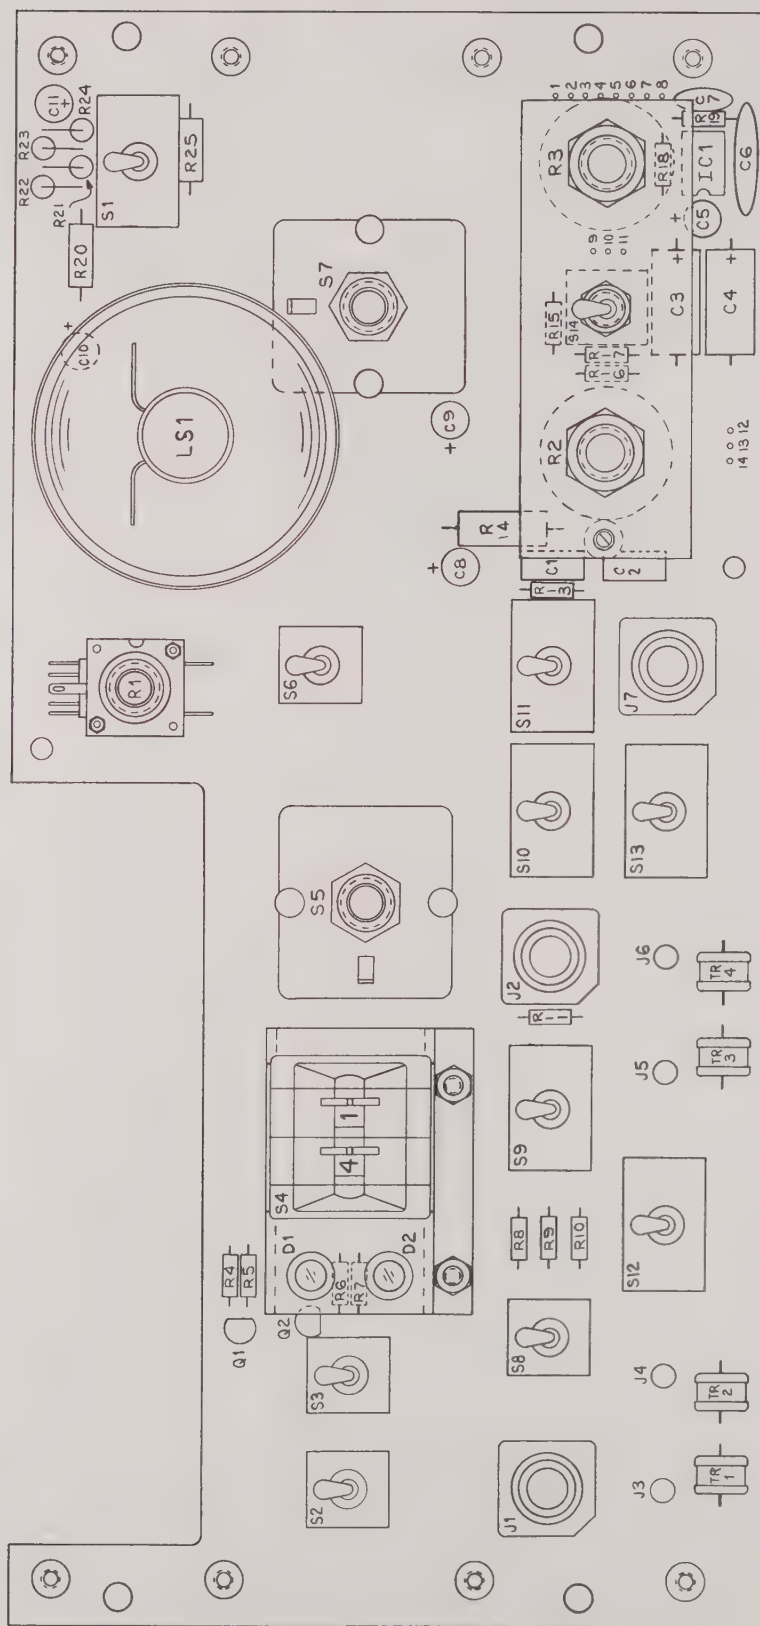


Figure 17. Interface Board, Component Layout

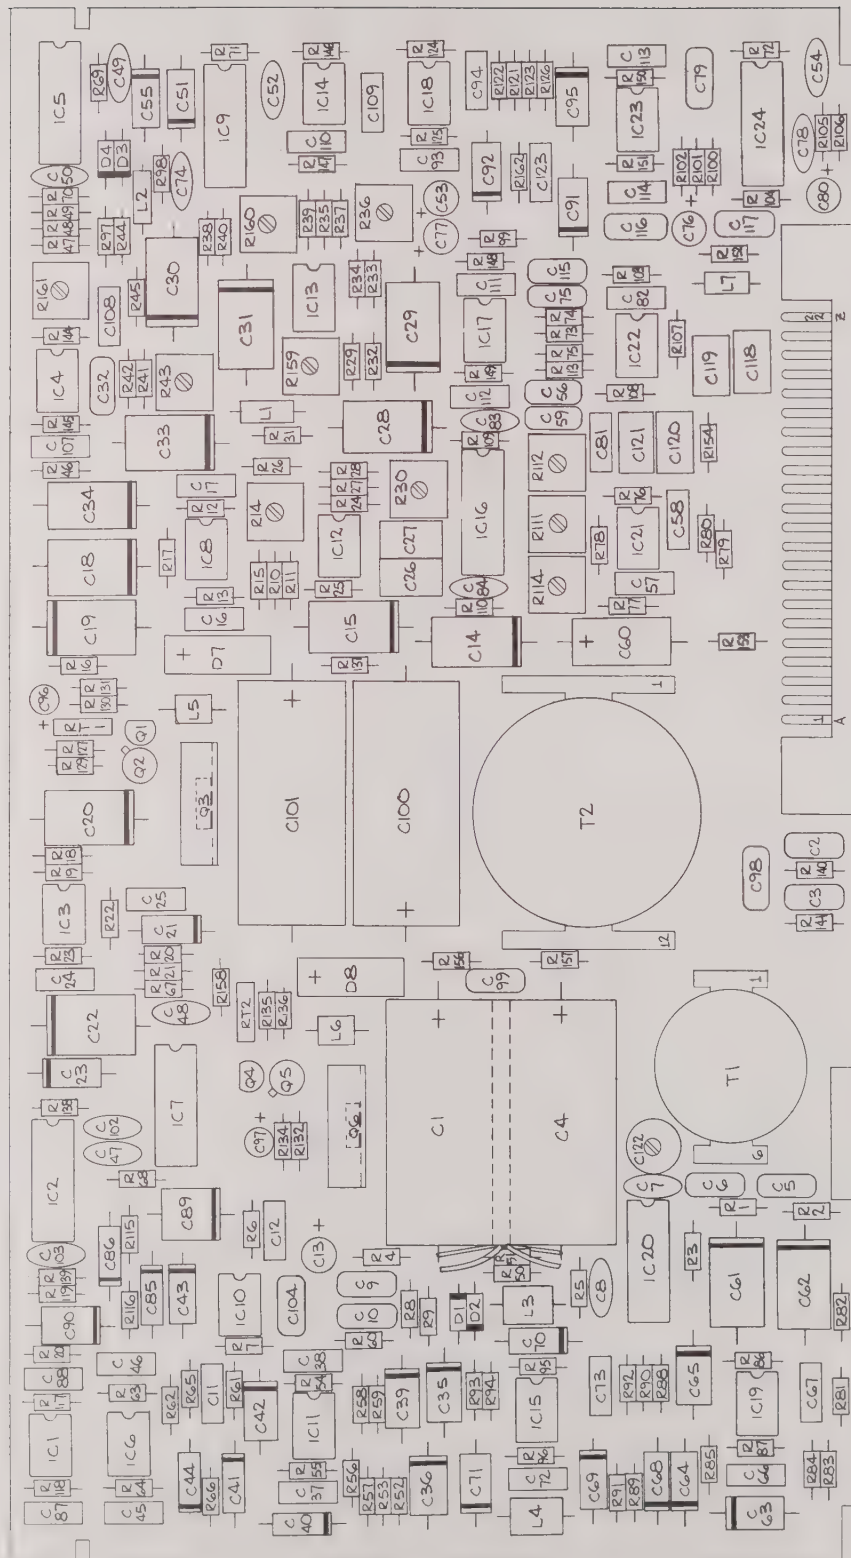


Figure 25. I/O Board, Component Layout



- NOTES:
UNLESS OTHERWISE SPECIFIED:
1. ALL RESISTORS ARE 5%, 1/4W
2. ALL CAPACITANCE IN MICROFARADS
3. ALL DIODES IN 4001
4. ALL TRANSISTORS ARE
5. ALL POTENTIOMETERS ARE
6. ALL O/A ARE
7.  INDICATES EDGE P.C. CONNECTOR PIGTAILS TO MAIN FRAME CONNECTOR
8.  INDICATES CABLE OR WIRE INTERCONNECTING DIRECT TO ANOTHER P.C. BOARD (HARD WIRE)
9.  INDICATES CABLE INTERCONNECTING TO ANOTHER P.C. BOARD (BY CONNECTOR)
10.  INDICATES CABLE OR WIRE DIRECT TO MAIN FRAME OR FRONT PANEL (HARD-WIRED)
11.  INDICATES CABLE DIRECT TO MAIN FRAME OR FRONT PANEL (BY CONNECTOR)
12.  TERMINAL BLOCK

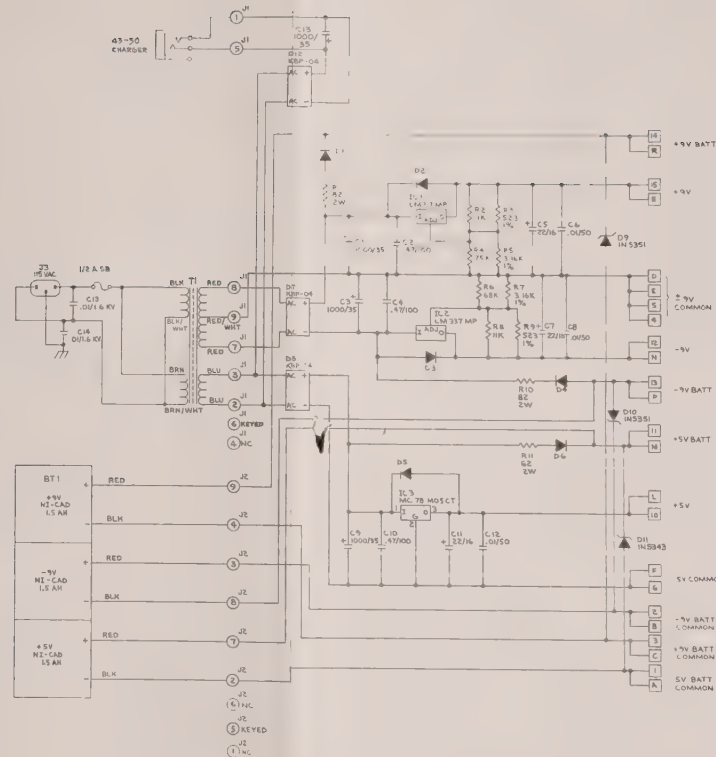


Figure 28. Power Supply, Schematic Diagram

Figure 18. Interface Board, Schematic Diagram

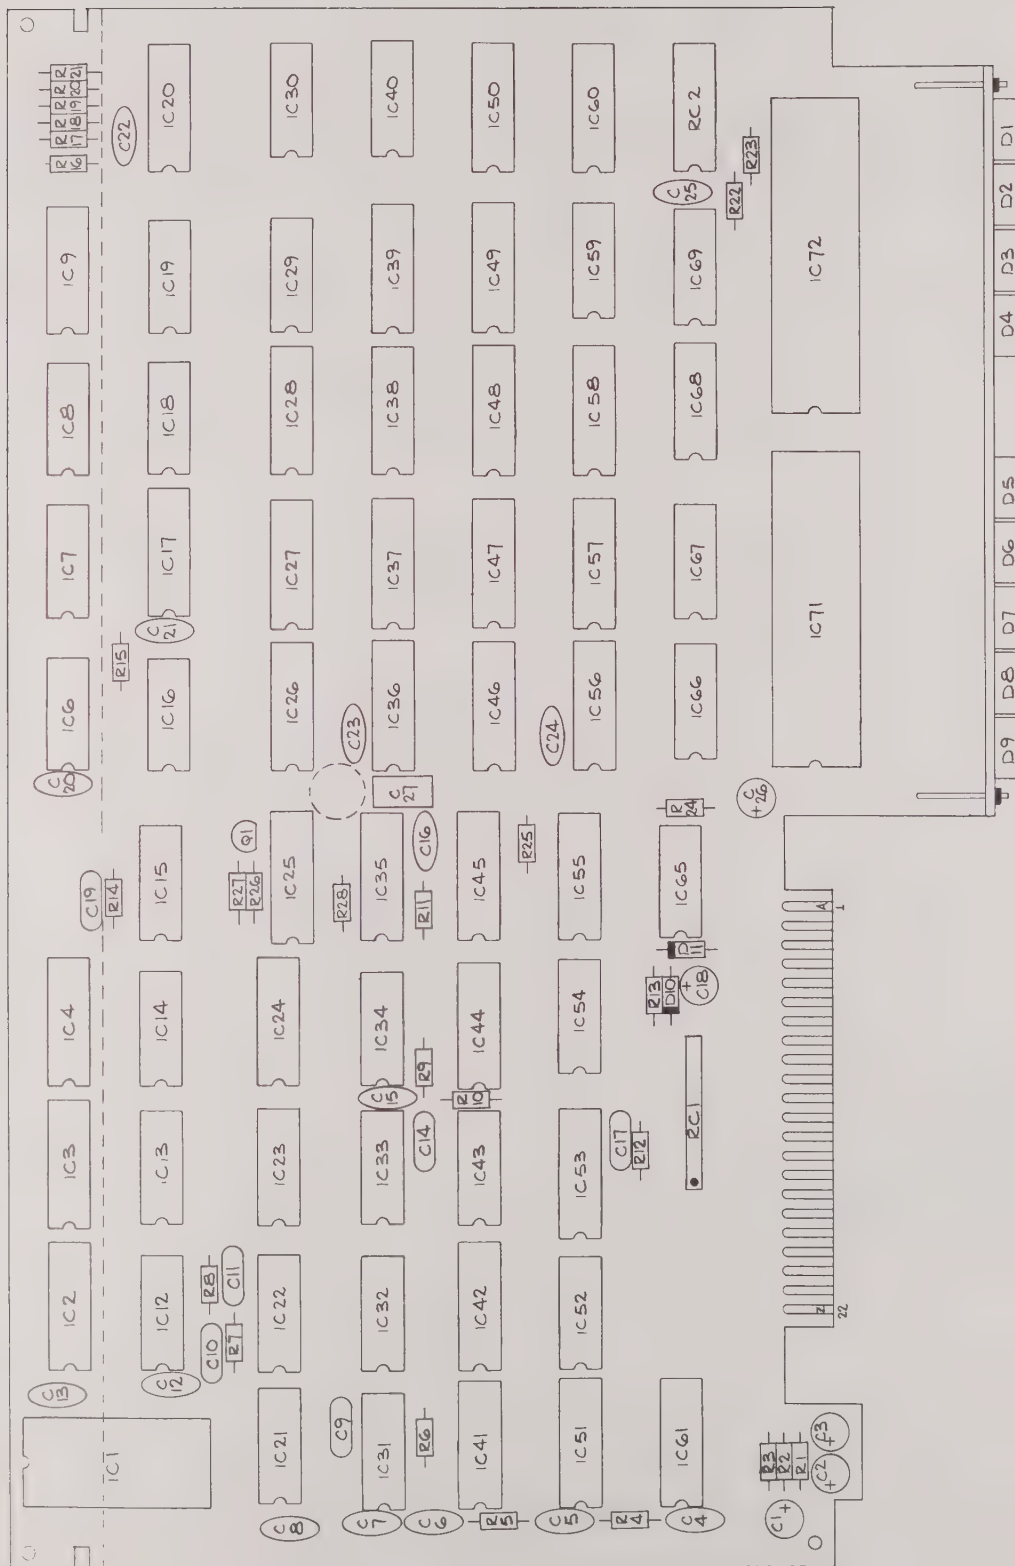


Figure 19. Digital Board, Component Layout

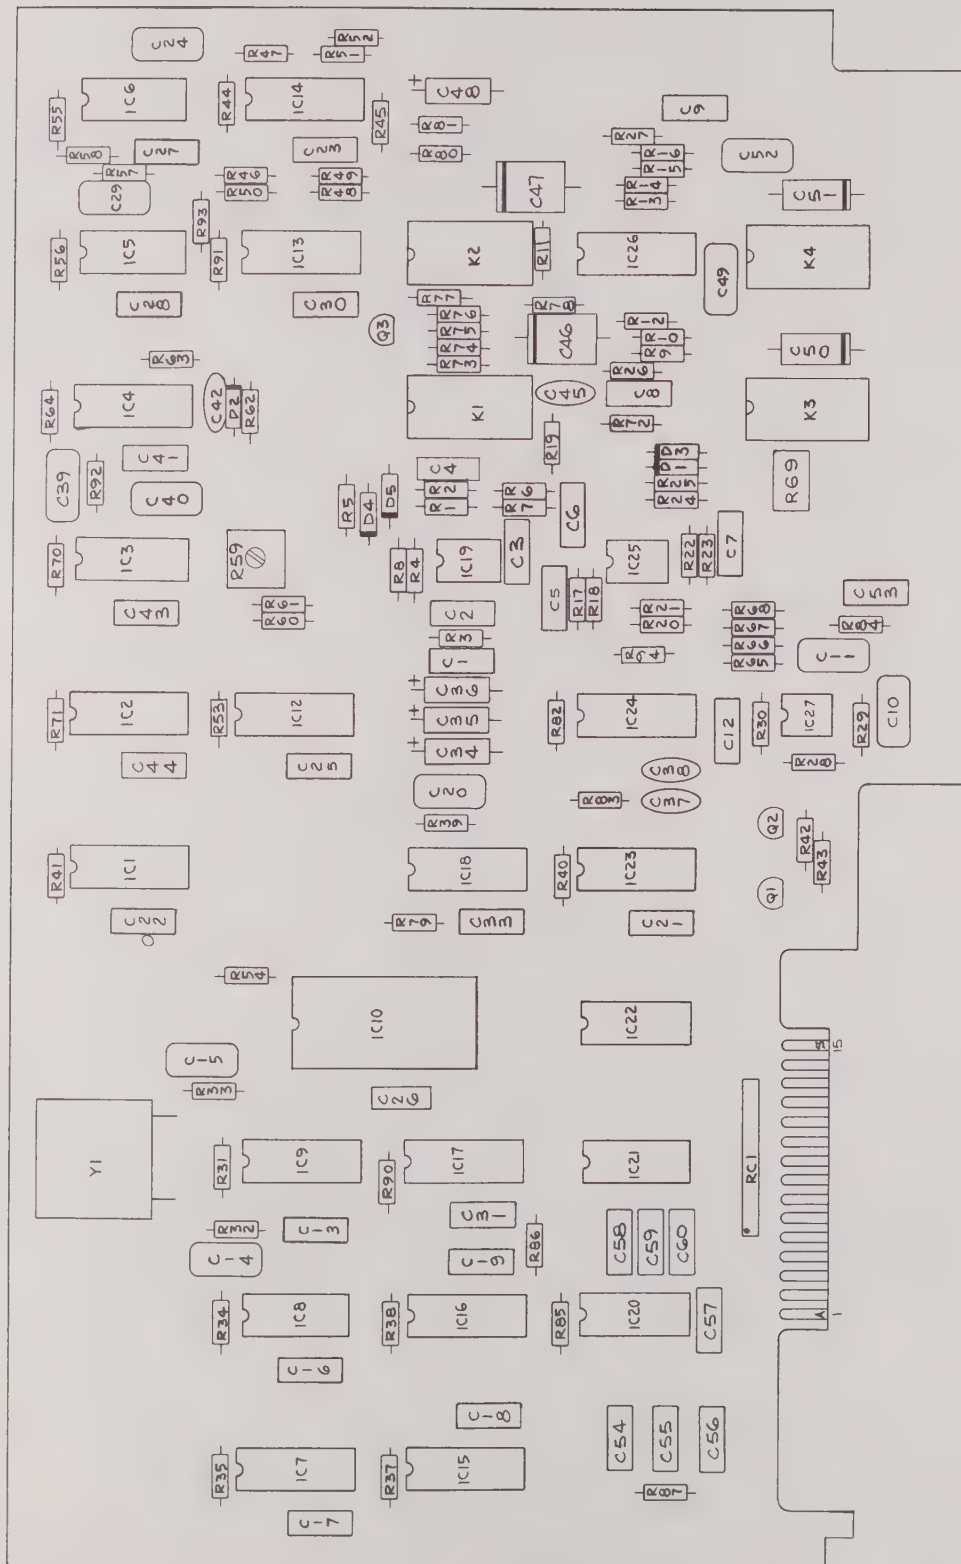


Figure 21. Generator Board, Component Layout

- NOTES:
1. UNLESS OTHERWISE SPECIFIED:
 2. ALL RESISTORS ARE 5% 1/4 W WITH VALUE IN OHMS
 3. ALL CAPACITORS ARE IN MICROFARADS
 4. ALL TRANSISTORS ARE 2N4401
 5. ALL POTENTIOMETERS ARE 10 K OHM, SINGLE TURN
 6. ALL C/A ARE LF333
 7. ALL POLARIZED CAPS ARE 10% TANT
 8. ALL .47 CAPS ARE 10% PE 100V
 9. ALL .1 CAPS ARE 10% PE 350V
 10. U1 INDICATES EDGE PC CONNECTOR PINGERS TO MAIN FRAME CONNECTOR
 11. INDICATES CABLE OR WIRE INTERCONNECTING DIRECT TO ANOTHER PC BOARD (WIRE)
 12. INDICATES CABLE INTERCONNECTING TO ANOTHER PC BOARD (WIRE)
 13. INDICATES CABLE OR WIRE DIRECT TO MAIN FRAME OR FRONT PANEL (CABLE-WIRE)
 14. INDICATES CABLE DIRECT TO MAIN FRAME OR FRONT PANEL (CABLE-WIRE)
 15. TERMINAL BLOCK
 16. IC5 USES A 74013 FAIRCHILD ONLY PART

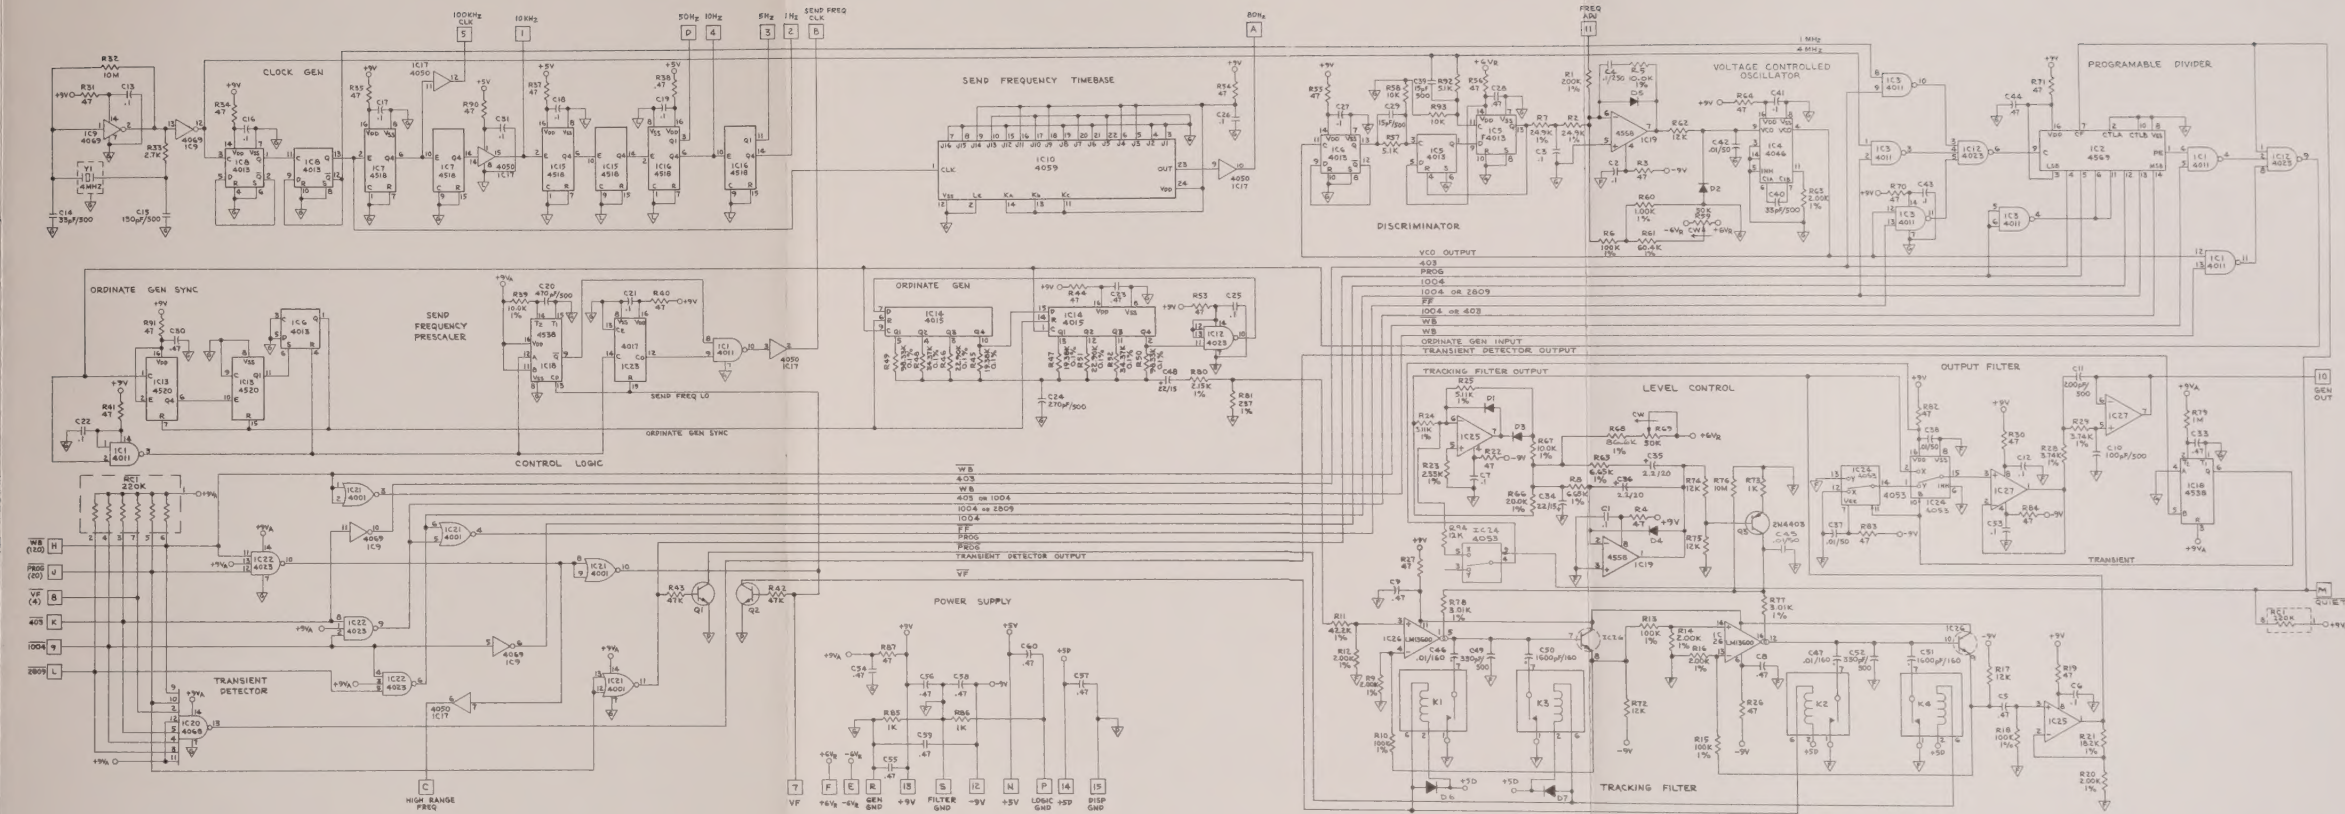


Figure 22. Generator Board, Schematic Diagram

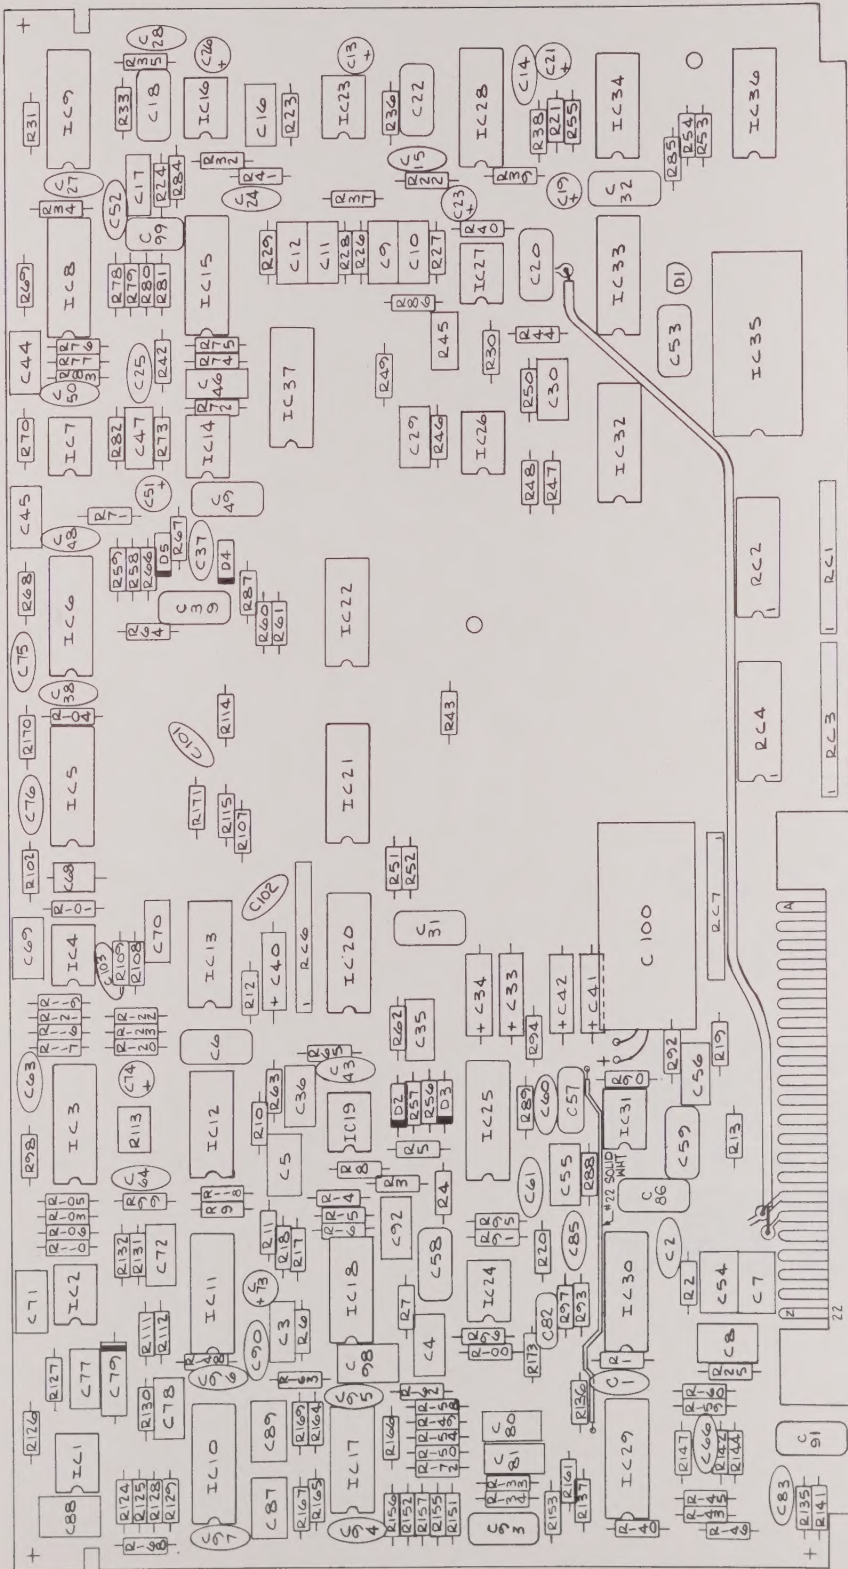



Figure 23. Analog Board, Component Layout



5 7 7 35

815

www.manualsplus.com



1029961

